


INFLATABLE BUTCHER COSTUME

TO REPLACE BATTERIES

1



2

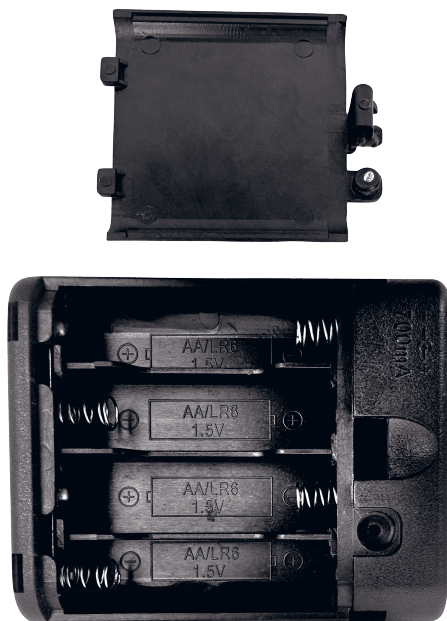

Battery: 4 x AA (1.5V) (Not included)

Batteries should be installed by an adult. Remember to position + and – correctly.

Do not mix old and new batteries or different types of batteries.

Do NOT place batteries near open flame or heat.

Do not attempt to recharge batteries which are not rechargeable.

Remove batteries if the product is not in use for some time.

Do not short-circuit the battery contacts.

Rechargeable batteries are only to be charged under adult supervision.

Rechargeable batteries are to be removed from the product before being charged.

Exhausted batteries are to be removed.

Please keep this information for future reference.

For environmental reasons, electrical equipment must be disposed separately from household waste.

Contact the municipality for the nearest collection point.


OPPUSTELIG SLAGTER KOSTUME

AT SKIFTE BATTERIER

1



2

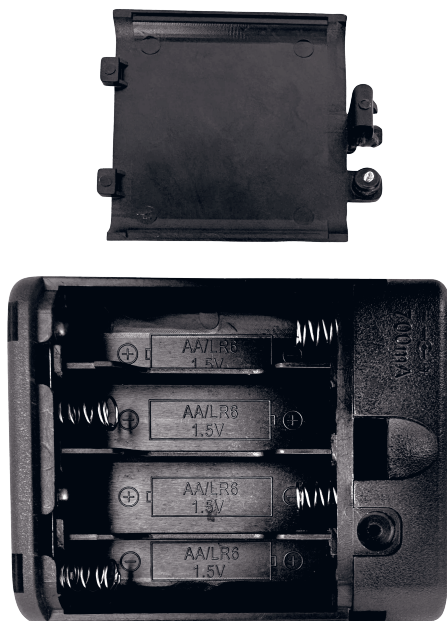

Batteri: 4 x AA (1.5V) (Ikke inkluderet)

Isætning af batterier bør foretages af en voksen. Husk at vende + og - korrekt.

Bland aldrig gamle og nye batterier eller forskellige batterityper.

Placer IKKE batterier i nærheden af åben ild.

Forsøg aldrig at genoplade ikke-genopladelige batterier.

Tag batterierne ud, hvis varen ikke anvendes i en længere periode.

Kortslut ikke batterikontakterne.

Genopladelige batterier må kun oplades under voksent tilsyn.

Genopladelige batterier skal fjernes fra legetøjet, før de oplades.

Afladede batterier skal fjernes fra produktet.

Opbevar denne vejledning til senere brug.

Af hensyn til miljøet skal elektrisk udstyr bortskaffes særskilt fra husholdningsaffald.

Kontakt kommunen for nærmeste indsamlingssted.