


3+

Sitting Pretty Salon Chair™

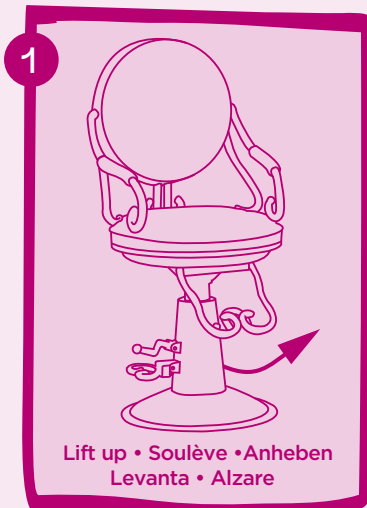

(EN): Lift up the footrest support.


(FR): Soulève le support du repose-pied.

(DE): Gestell der Fußstütze anheben.

(ES): Levanta el soporte del reposapiés.

(IT): Alzi sull'appoggio del poggiatesta.

Lift up • Soulève • Anheben
Levanta • Alzare

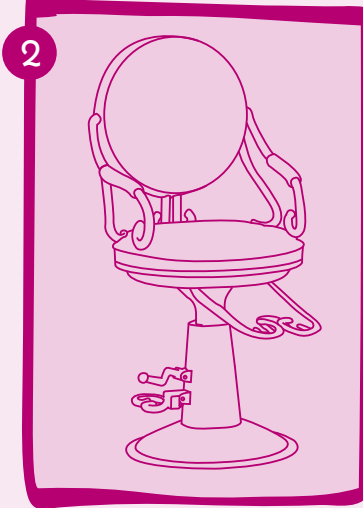


(EN): The footrest will stay in upper position.

(FR): Le repose-pied reste dans la position supérieure.

(DE): Die Fußstütze wird angehobener Position bleiben.

(ES): El reposapiés queda en la posición superior.

(IT): Il poggiatesta starà in posizione eretta.

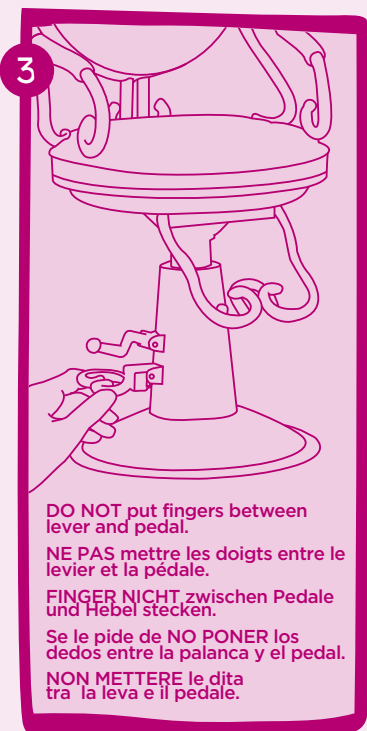

(EN): Press down on pedal to raise the seat.

(FR): Appuie sur la pédale pour soulever le siège.

(DE): Zum Anheben des Sitzes auf das Pedal drücken.

(ES): Aprieta sobre el pedal para levantar el asiento.

(IT): Schiacciare in giù il pedale per alzare il sedile.


DO NOT put fingers between lever and pedal.

NE PAS mettre les doigts entre le levier et la pédale.

FINGER NICHT zwischen Pedale und Hebel stecken.

Se le pide de NO PONER los dedos entre la palanca y el pedal.

NON METTERE le dita tra la leva e il pedale.

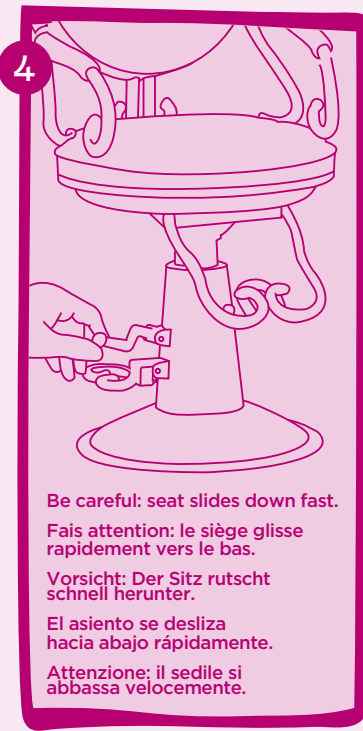

(EN): Press down on lever to lower seat to original position.

(FR): Appuie sur le levier pour rabaisser le siège à sa position originale.

(DE): Den Hebel herunterdrücken, um den Sitz wieder in die ursprüngliche Position zu bringen.

(ES): Aprieta sobre la palanca para bajar el asiento a su posición original.

(IT): Fare pressione sulla leva per riabbassare il sedile fin'alla posizione originale.

Be careful: seat slides down fast.



Fais attention: le siège rapidement vers le bas.

Vorsicht: Der Sitz rutscht schnell herunter.

El asiento se desliza hacia abajo rápidamente.

Attenzione: il sedile si abbassa velocemente.

Instructions for non functioning hair dryer with sound / Instructions pour le sèche-cheveux non-fonctionnel avec son / Anleitung für den nicht funktionstüchtigen Föhn mit Geräuschen / Istruzioni per il secador de pelo que no funciona pero con sonido / Istruzioni per l'asciugacapelli non funzionante ma con suono

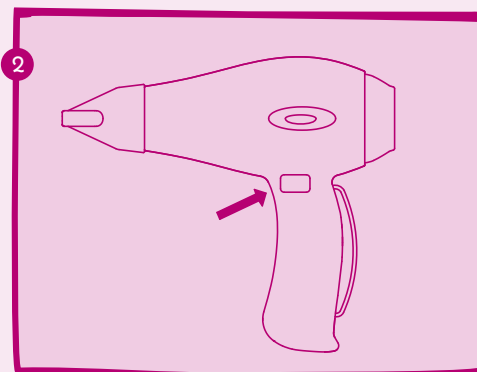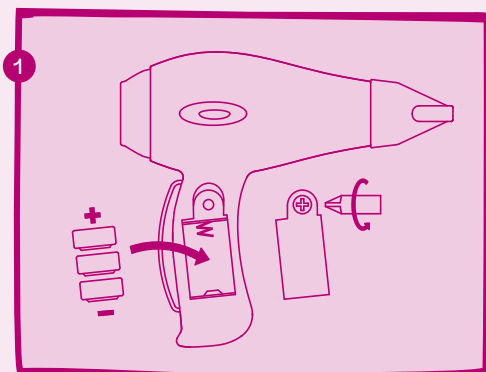

(EN): To activate sound: Press the button for "ON and OFF".

(FR): Pour activer le son: Appuyer sur le bouton ON/OFF.

(DE): Um Geräusche anzustellen: Drücke auf den "ON and OFF"-Knopf.

(ES): Para activar el sonido: Pulsa el botón para encender o apagar "ON Y OFF".

(IT): Per attivare il suono: Pigià il bottone per accendere o spegnere "ON e OFF."

(EN): To replace batteries: Unscrew the battery cover and replace 3 x AG13 (L1154) size batteries. (FR): Pour remplacer les piles: Dévisser le couvercle des piles et remplacer les 3 piles AG13 (L1154). (DE): Zum Austausch der Batterien: Abdeckung des Batteriefachs abschrauben und 3 x AG13 (L1154) Batterien ersetzen. (ES): Reemplazar las pilas: Desatornilla la tapa de pilas y sustituye las 3 pilas de tipo AG13 (L1154). (IT): Sostituire le pile: Svita il coperchio di pile e sostituisci le 3 pile di tipo AG13 (L1154).



WARNING: This product contains Button Cell Batteries. Button batteries are hazardous and can cause serious injuries if swallowed or placed inside any part of the body. Keep batteries away from children whether new or used. Dispose of used batteries immediately. If you think that batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.



⚠ WARNING:
CHOKING HAZARD—Small parts.
Not for children under 3 years.

⚠ AVERTISSEMENT:
RISQUE DE SUFFOCATION—Petites pièces.
Ce produit n'est pas recommandé pour les enfants de 3 ans et moins.

BD37336/B37336Z/B37337/B37337Z
BD37974/B37974Z/B37976/B37976Z
BD37977/B37977Z/B37978/B37978Z