 
 
 
 

 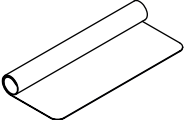


Samlevejledning

PROSONIC

Ax1 	Bx1 
Cx1 	Dx1 
Ex2 	Fx2 
Gx1 	
Hx6  M8*50	Ix4  M6*40
Jx8  M6*16	Kx4 
L 	Mx4 

