



3+

Product Operation Manual

Please read this instruction manual carefully before using, as it contains all the information you need to know about how to use this product correctly with fun.
Colors and contents may vary from instruction.

 
 


Maximun velocity 15km/h


GLOW SHARK

Battery installation

Replacing batteries of the controller.

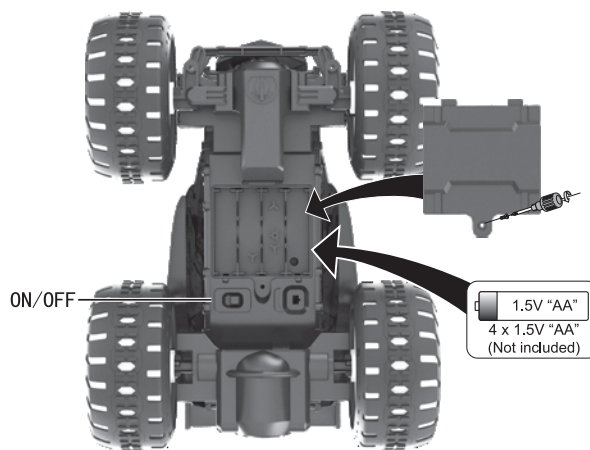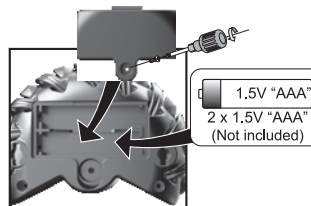

 1. Take off the battery cover of the R/C car, install 4 x 1.5V AA batteries fasten the cover, turn the switch to 'ON'.
2. Open the battery cover of controller, install 2 x 1.5V "AAA" batteries, close the cover.

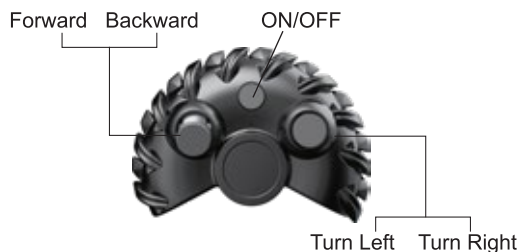


Control distance: about 25 meter.

The basic operation of the products



 
After the car and remote control are powered ON, press the remote control button after the car is on the frequency, the car will shake back and forth, the remote control light is off, long press the remote control button for 2 seconds, the remote control is off, and then press the remote control to open.

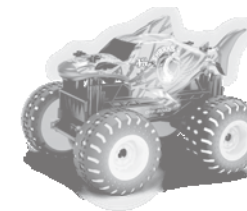

The wheels and the body will glow.



 Press the button as shown in the above picture to move the car forward or backward.

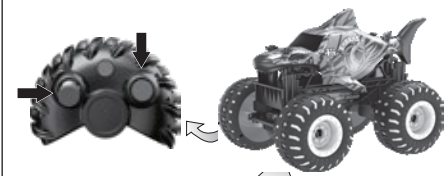

Press the steering button to drive the car turn left or right while going forward or backward at the same time.

BATTERY SAFETY

1. The placement or replacement of batteries is to be performed by an adult.
2. Always remove exhausted batteries from the car and the controller.
3. Make sure the main switch is set to OFF before installing the battery.
4. Make sure the main switch is set to OFF before installing the battery.
5. Batteries must be inserted with the correct polarity.
6. Non-chargeable batteries shall not be recharged.
7. Do not short-circuit the batteries.
8. Always remove the batteries from the robot and the controller after playing.
9. Never throw the batteries into fire to avoid explosion or leakage.
10. Do not mix batteries from different producers or new and old batteries.
11. You should only use batteries of the same or equivalent types as recommended.
12. Check the batteries on regular basis to avoid leakage.
13. Keep this manual well for future reference as it contains important information about this product.

For environmental reasons, electrical equipment must be disposed separately from household waste. Contact the municipality for the nearest collection point.



11014441GB

Produced and Imported by:
MaxToys ApS, Bjarkevej 10B, Skovby, DK-8464 Galten
info@maxtoys.dk



3+

Brugsanvisning

Læs denne brugsanvisning grundigt før brug, da den indeholder alle relevante oplysninger.
Farver og indhold kan variere fra illustrationerne.

 
 


Maksimumshastighed 15km/t


LYSENDE HAJ

Batteri installation

Udskiftning af batterierne i fjernbetjeningen.

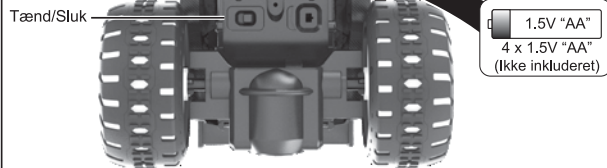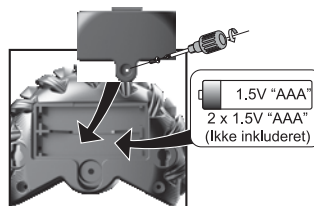

 
1. Fjern batteridækslet på den fjernstyrede bil, indsæt 4 x 1,5V AA-batterier, fastgør dækslet, og drej kontakten til 'Tænd'.
2. Åbn batteridækslet på fjernbetjeningen, indsæt 2 x 1,5V AAA-batterier, og luk dækslet.

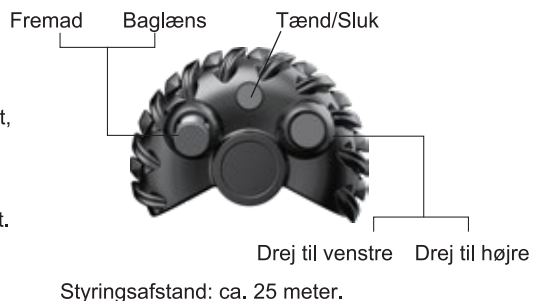


Brugsanvisning til produktet



 
Når bilen og fjernbetjeningen er tændt, skal du trykke på knappen på fjernbetjeningen, når bilen er på samme frekvens. Bilen vil ryste frem og tilbage, og fjernbetjeningens lys vil være slukket. Hold knappen på fjernbetjeningen nede i 2 sekunder – fjernbetjeningen slukkes. Tryk derefter på fjernbetjeningen igen for at tænde den.

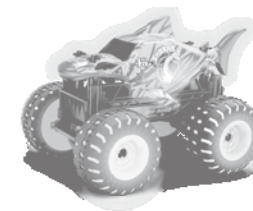

Hjulene og karrosseriet vil lyse op.

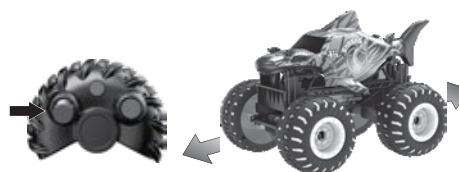 

 Tryk på knappen som vist på billedet ovenfor for at køre bilen fremad eller baglæns.

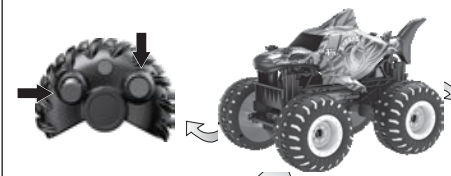

Tryk på styreknapen for at få bilen til at dreje til venstre eller højre, mens den kører fremad eller baglæns.

BATTERISIKKERHED

1. Isætning eller udskiftning af batterierne skal udføres af en voksen.
2. Fjern altid opbrugte batterier fra produktet og fjernbetjeningen.
3. Sørg for, at hovedafbryderen er slået fra, inden batteriet installeres.
4. Husk at vende + og - korrekt.
5. Forsøg aldrig at genoplade ikke-genopladelige batterier.
6. Kortslut ikke batterikontakterne.
7. Tag batterierne ud, hvis varen ikke anvendes i en længere periode.
8. Smid aldrig batterierne ind i ild for at undgå eksplosion eller lækage.
9. Bland aldrig gamle og nye batterier eller forskellige batterityper.
10. Du bør kun bruge batterier af samme eller tilsvarende type, som anbefalet.
11. Kontroller batterierne regelmæssigt for at undgå lækage.
12. Opbevar denne vejledning til fremtidig reference, da den indeholder vigtige oplysninger om dette produkt.

Af hensyn til miljøet skal elektrisk udstyr bortskaffes særskilt fra husholdningsaffald. Kontakt kommunen for nærmeste indsamlingssted.



11014441DK

Importeret af og produceret for:
MaxToys ApS, Bjarkevej 10B, Skovby, DK-8464 Galten
info@maxtoys.dk