

Ⓛ Aufbauanleitung

Ⓛ Notice de montage

Ⓛ Montagehandleiding

Ⓛ Montážní návod

Ⓛ Szerelési útmutató

Ⓛ Montaj talimatları

Ⓛ Assembly instruction

Ⓛ Istruzioni di montaggio

 
 
 
 
 
 
Ⓛ Instrukcja montażu

Ⓛ Navod na montaž

Ⓛ Instrucțiuni de montaj

Ⓛ Инструкция по монтажу

36-1026-39-000

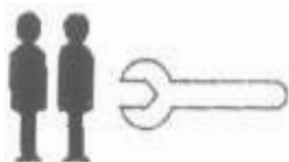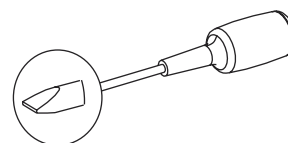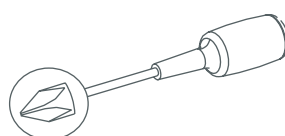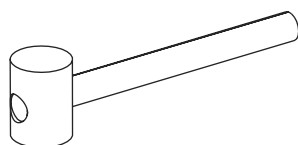
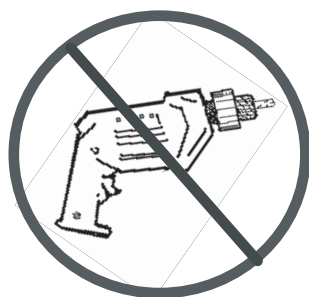
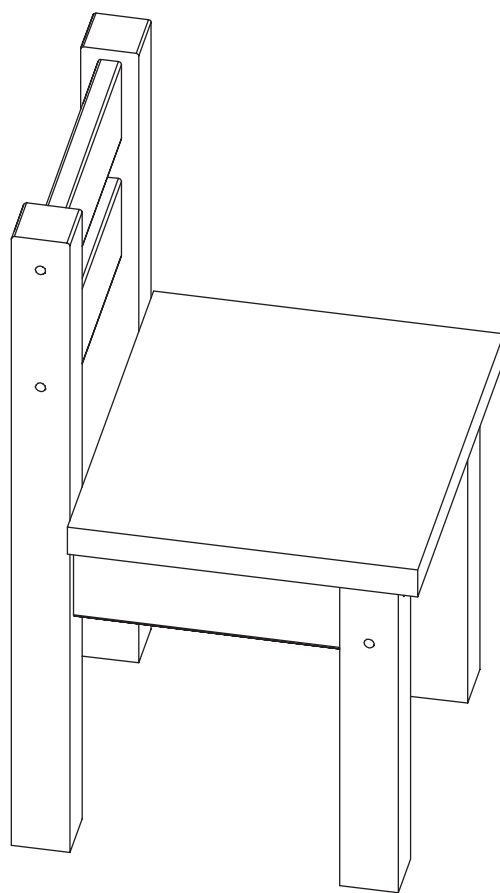


Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба



Name • Nom • Nome • Naam • Nazwa • Jméno • Názov
Név • Denumire • Isim • Название

Nr. • No. • N° • Č • Sz • Номер

   
Typ • Type • Tip • Tipus • Druh • Тиро • Тип

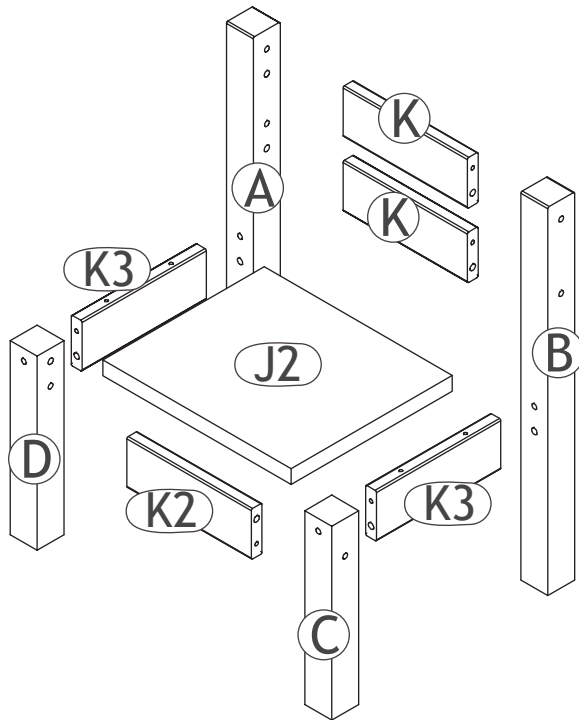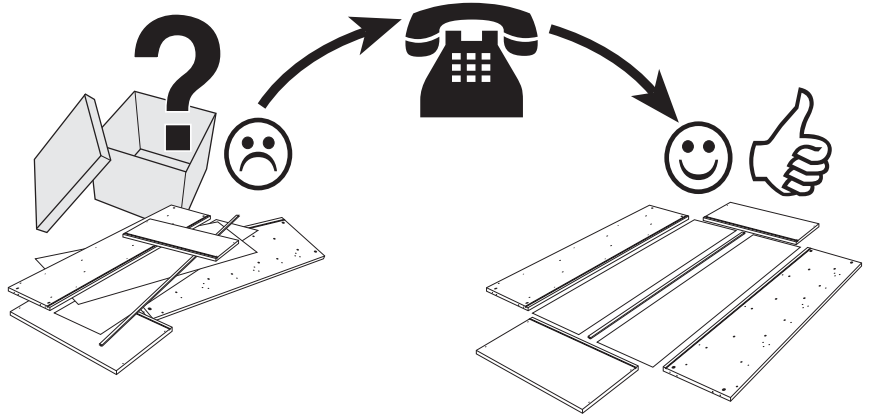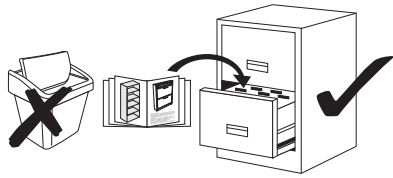


A	112122-39	x1
B	112121-39	x1
C	112211-39	x1
D	112212-39	x1
K	112224-39	x2
K2	112220-39	x1
K3	112223-39	x2
J2	112610-39	x1

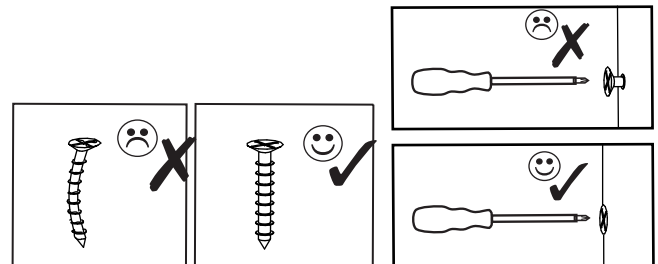  

① (8x40)

 

② (7x70)

 


③ (d=4)




④ (4,5x80)




		mm	
①	1-000013-00	8x40	x10
②	1-000167-07	7x70	x10
③	1-000015-07	Z4	x1
④	1-000168-07	4.5x80	x4

  1-000001=

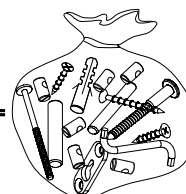

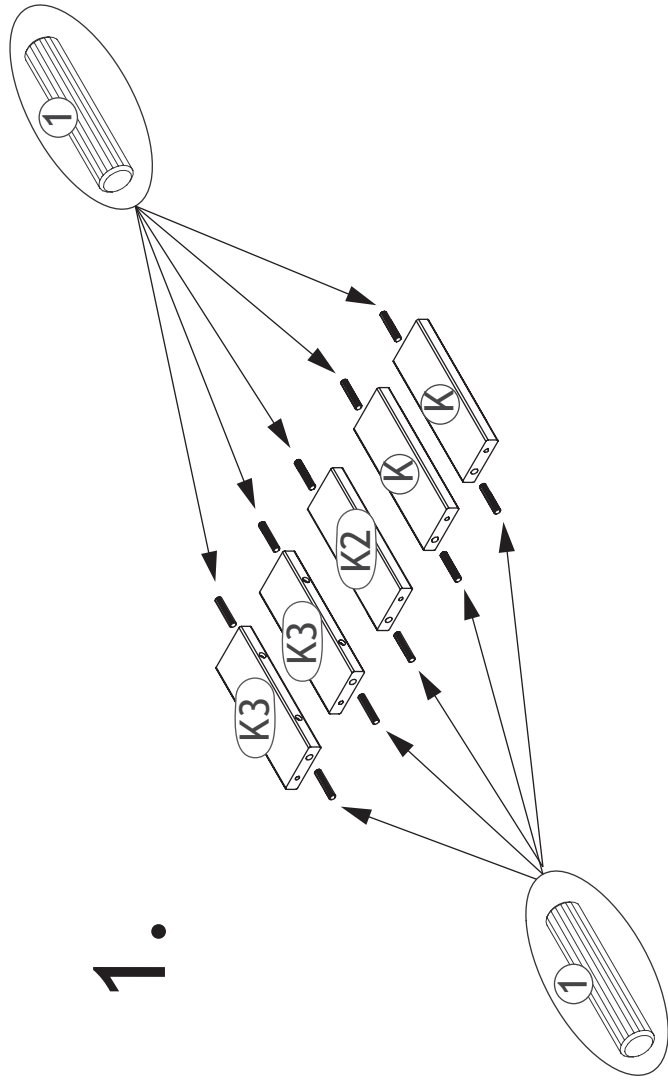

   2.

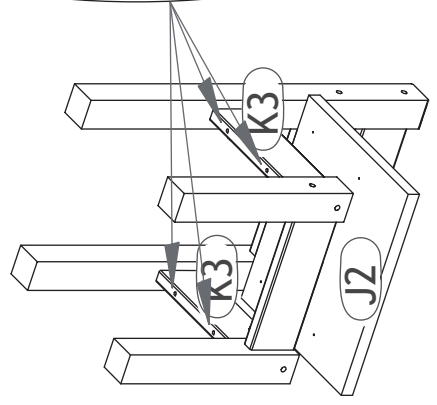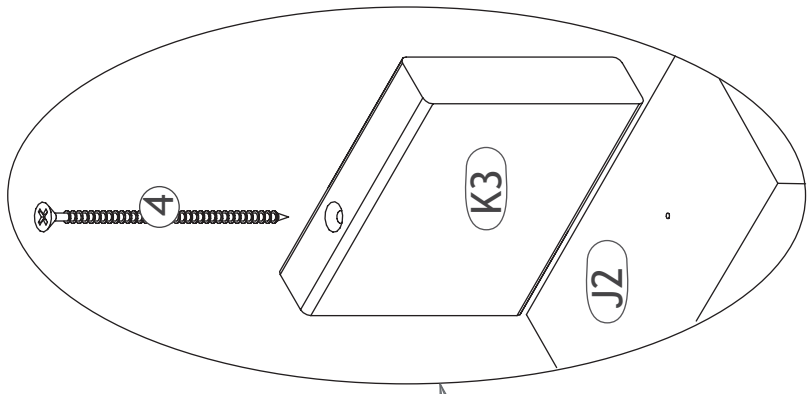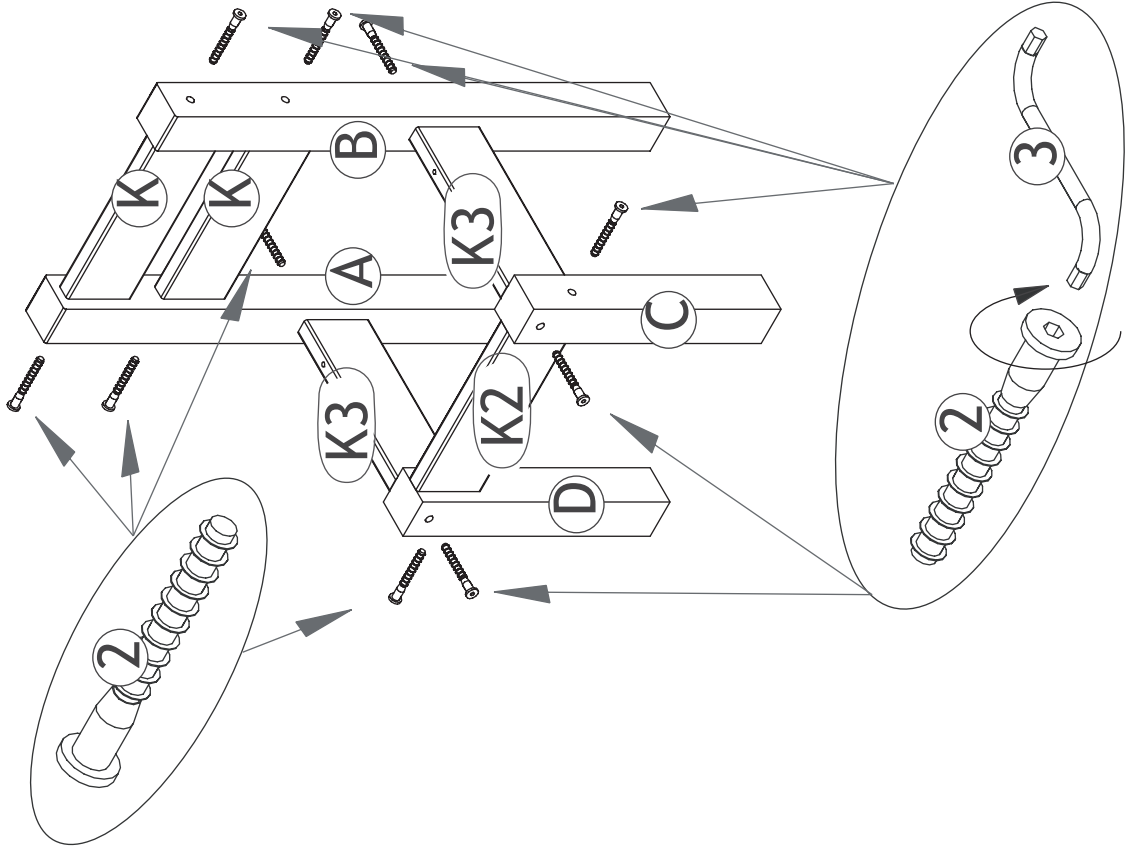

3.