


# *Retro Mini*

---

USER GUIDE

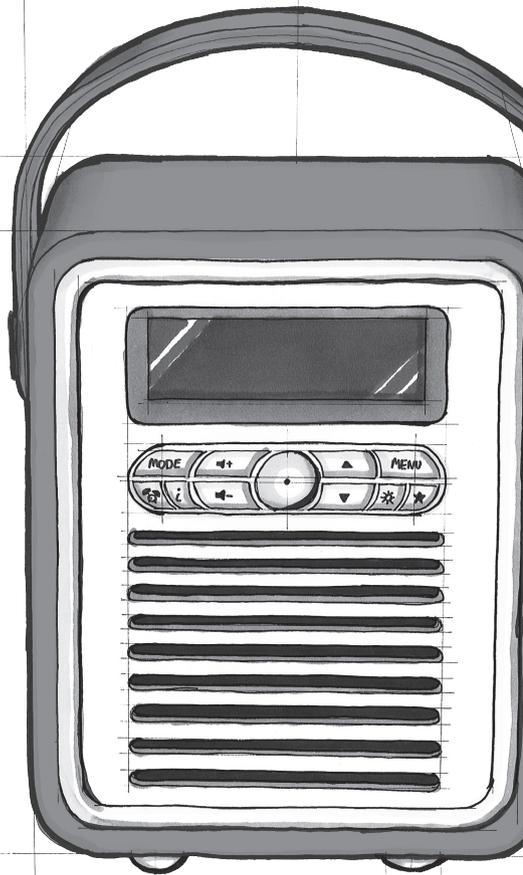

MyVQ.com

BORN IN  
*Britain*



# Contents

Contents .....	2
Basic Features .....	3-4
Power On/Off Retro Mini .....	5
DAB Radio.....	6
FM Radio .....	7
Bluetooth .....	8
Saving Presets DAB/FM .....	9
Setting an Alarm .....	10-11
Snooze or End a Sounding Alarm .....	12
My EQ Settings .....	13-14
Sleep .....	15
To Cancel the Sleep Timer .....	16
Screen Brightness / Backlight .....	17
Clock Setup .....	18
Setting the clock and date manually .....	19-20
Reverting back to DAB Radio .....	21
Language .....	22
Changing the Display Information Screen .....	23
Troubleshooting .....	24
Factory Reset .....	25
Contact Us .....	26



Power On/Off & Accept



Play/Pause

**MODE**

Mode

**MENU**

Menu



Presets



Volume Decrease



Volume Increase




Previous / Next



Alarms




Information

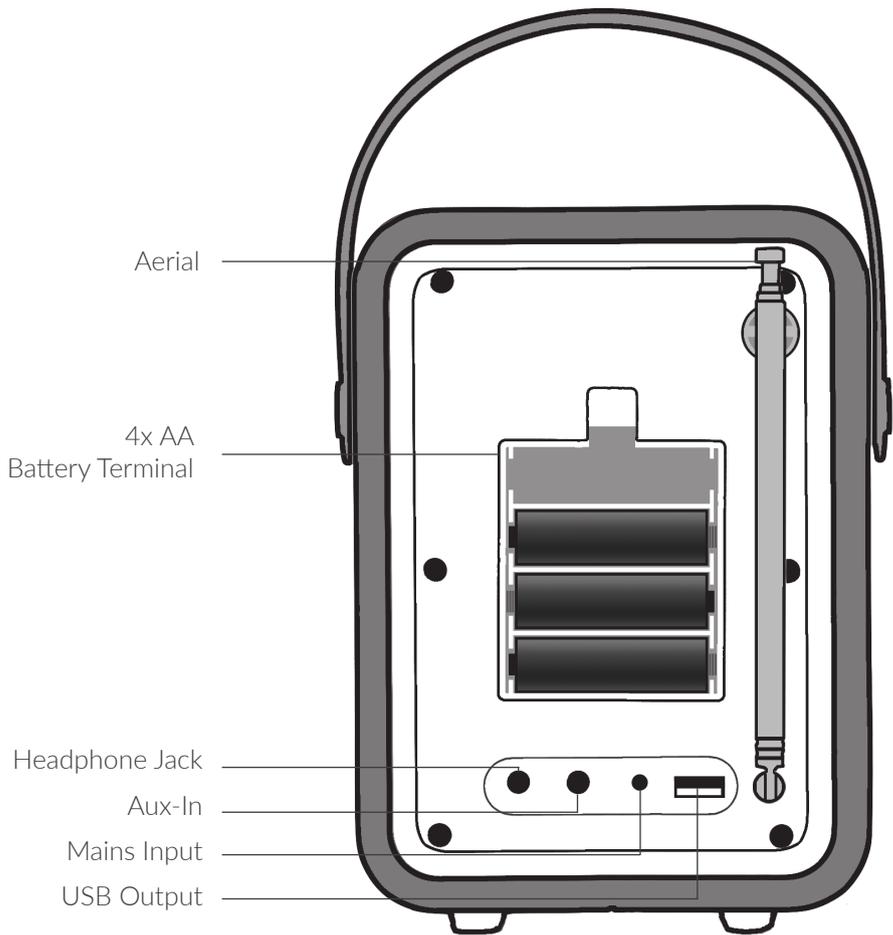

# Power On/Off Retro Mini

1. Connect Retro Mini to the mains with the supplied plug, or to use battery power, 4x AA Batteries can be inserted at the back of Retro Mini.
2. The Clock and Date remain visible for your convenience when Retro Mini is connected to mains power.
3. Turn on your Retro Mini by pressing and holding .
4. Put your Retro Mini into Standby by pressing and holding .

1.

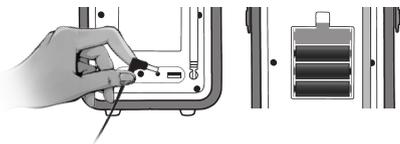

2.



3.



4.



# DAB Radio

1. The first time you turn Retro Mini on a full scan will automatically find all available digital radio stations.
2. If you wish to re-scan for available stations, press **Menu** and navigate to “Full Scan” using the **< & >** buttons. Press  button to start a scan.
3. Once your available stations are found you can navigate between them by pressing **< & >**.

1.



2.



3.



# FM Radio

1. Press **Mode** to select FM Radio.
2. To tune to your preferred station, use the **< & >** buttons, short-press for fine tuning or long press for auto-scan.

1.



2.



# Bluetooth

You can listen to any content on your phone, tablet or other smart device via Bluetooth.

1. Press **Mode** to select Bluetooth.
2. While “Pairing” is shown on the screen scan for Bluetooth devices on your smart device.
3. Connect to “Retro Mini” and listen to any of your own content.

1.



2.



3.



## Saving Presets DAB/FM

You can save separate presets for Digital and FM Radio, with 60 in total.

1. To save presets press and hold **★** , choose your preferred number by pressing the **< & >** buttons to pick up an available preset, then press  button to confirm and save preset.

You can either save to an empty preset or simply save over a previously stored station to replace it.

2. To recall a preset press (do not hold) **★** , use **< & >** buttons to select your preset, press  to listen to the preset.

1.



2.



# Setting an Alarm

To set an alarm, press  (1x for Alarm 1 or 2x for Alarm 2)– then all navigation is completed with **< & >**, use  button to select and move to the next step.

1. Press Alarm Button (1x for Alarm 1 or 2x for Alarm 2).
2. Use **< & >** buttons to turn Alarm On and Off.
3. Press  button to progress.
4. Use **< & >** buttons to set the hour of alarm.
5. Press  button to confirm.
6. Use **< & >** buttons to set the minutes of the alarm.

1.



2.



3.



4.



5.



6.



## Setting an Alarm (cont.)


 
7. Press  button to confirm.
8. Use **< & >** buttons to choose type of alarm – DAB, FM, BEEP 1 or BEEP 2.
9. Press  button to confirm.
10. Use **< & >** buttons to choose volume of alarm.
11. Press  button to confirm.



## Snooze or End a Sounding Alarm

Whilst the alarm is sounding press the  or press the  button twice to cancel the alarm.


Whilst the alarm is sounding, press the  button to snooze the alarm.

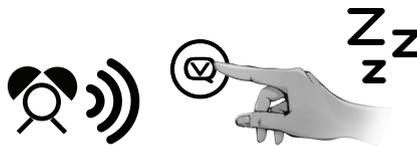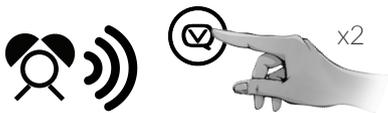

# My EQ Settings


You can tailor the acoustics of your Retro mini with the EQ Setup.

 1. Press **Menu**.
2. Use the **< & >** buttons to select EQ Setup.
3. Press the  button to confirm.
4. Use the **< & >** buttons to choose from a range of music genre presets or enter the MyEQ menu.
5. Press the  button to confirm.
6. In MyEQ Menu - Use the **< & >** buttons to select either Bass or Treble.

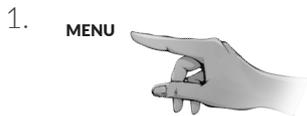

## My EQ Settings (cont)

7. Press the  button to confirm.
8. Use **< & >** buttons to adjust Bass and Treble.
9. Once you're happy with the My EQ settings Press  button to confirm.
10. To return to the main radio screen press **Menu**.


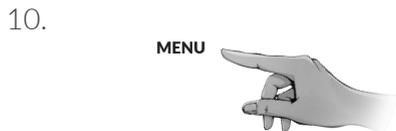


# Sleep

Sleep timer lets you decide how long you want to listen to the radio for and can be set between 15 and 90 minutes.




1. Press **Menu**.
2. Use the **< & >** buttons to navigate to Sleep.
3. Press the  button to confirm.
4. Use the **< & >** buttons to select duration; 15, 30, 45, 60 or 90 minutes.
5. Press the  button to confirm.
6. To return to the main radio screen press **Menu**.

 The screen displays a countdown, showing how many minutes are left on the timer before ultimately turning off e.g. S30 when 30 minutes has been selected.

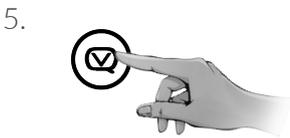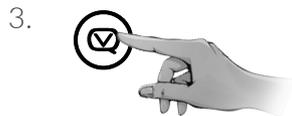

# To Cancel the Sleep Timer

 
 
1. Press **Menu**.
2. Use the **< & >** buttons to navigate to Sleep.
3. Press the  button to confirm.
4. Use the **< & >** buttons to navigate to Off.
5. Press the  button to confirm.
6. To return to the main radio screen press **Menu**.

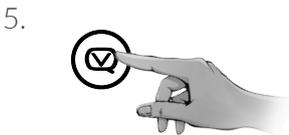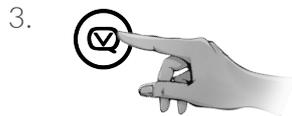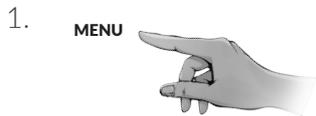

# Screen Brightness / Backlight

Retro Mini has 3 screen brightness settings – Low, Medium and High to adjust to your personal choice.

 1. Press **Menu**.
2. Use the **< & >** buttons to navigate to Backlight.
3. Press the  button to confirm.
4. Use the **< & >** buttons to select your desired brightness setting.
5. Press the  button to confirm.
6. To return to the main radio screen press **Menu**.

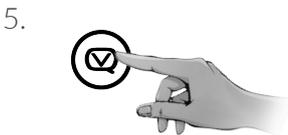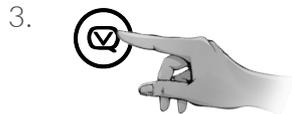

# Clock Setup

1. Press **Menu**
2. Use **< & >** buttons to navigate to Clock Setup.
3. Press the  button to confirm.
4. Use the **< & >** buttons to select to select Set 12/24 hour.
5. Press the  button to confirm.
6. Use the **< & >** buttons to select to select 12 Hour or 24 Hour.
7. Press the  button to confirm.
8. To return to the main radio screen press **Menu**.

1. **MENU**



2.



3.



4.



5.



6.



7.



8.

**MENU**




# Setting the Clock and Date manually

1. Press **Menu**
2. Use **< & >** buttons to navigate to Clock Setup.
3. Press the  button to confirm.
4. Use the **< & >** buttons to select to select Clock Type.
5. Press the  button to confirm.
6. Use the **< & >** buttons to select to select Clock: Manual.



## Setting the clock and date manually (cont)

7. Press the  button to confirm.
8. Use the **< & >** buttons to select date and time, pressing the  button in between Year, Month, Day, Hours and Minutes.
9. Press the  button to confirm.
10. To return to the main radio screen press **Menu**.

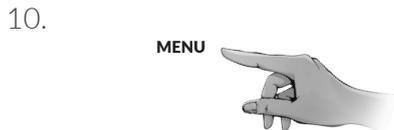

# Reverting back to DAB Radio

1. Press **Menu**
2. Use **< & >** buttons to navigate to Clock Setup.
3. Press the  button to confirm.
4. Use the **< & >** buttons to select to select Clock Type.
5. Press the  button to confirm.
6. Use the **< & >** buttons to select to select Clock: Radio.
7. Press the  button to confirm.
8. To return to the main radio screen press **Menu**.

1. **MENU**



2.



3.



4.



5.



6.



7.



8.


 
**MENU**



# Language

You may wish to change the language on your Retro Mini.

1. Press **Menu**
2. Use **< & >** buttons to navigate to Language.
3. Press the  button to confirm.
4. Use the **< & >** buttons to select to choose between language options.
5. Press the  button to confirm.
6. To return to the main radio screen press **Menu**.

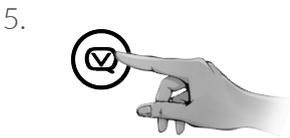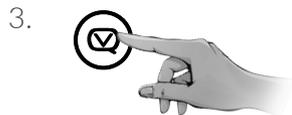

# Changing the Display Information Screen

## Changing the DAB display information

If the Retro Mini is in DAB mode, press the **i** button to select different information screens to show on the display, continue pressing to cycle through different information screens such as Signal strength, Program Type, Station Name/Region, Frequency, Signal Error, Data Rate, Date and Radio Text.

Please note when you change channel or turn the radio off the screen will revert to Radio Text.

## Changing the FM display information

If the Retro Mini is in FM mode, press the **i** button to select different information screens to show on the display, continue pressing to cycle through different information screens such as Program Type, Frequency, Stereo/Mono, Signal strength, Date and Radio Text.

Please note when you turn the radio off the screen will revert to Radio Text.

# Troubleshooting

Make sure that your Retro Mini is connected to the mains power.

Make sure that you have connected the cable to the correct power socket on the rear of your Retro Mini. The power socket is on the right next to the USB socket.


If using away from mains – has the batteries run out of battery power? Try using new batteries.

# Factory Reset

If you experience a fault with the radio, you may be advised to complete a factory reset, this will clear the memory of the radio and restart the product.

**Please Note:** - After a factory reset your preset stations will need to be re-saved.

1. Press **Menu**.
2. Use **< & >** buttons to navigate to Reset
3. Press the  button to confirm.
4. Use **< & >** buttons to change to Yes.
5. Press the  button to confirm.
6. The radio will then reboot - All settings will be wiped, a first-time scan will be performed.

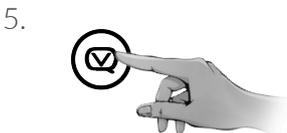

# Contact Us

**Still not working?** Please contact our support team it might be something as simple as a replacement plug.

## **Need more Help?**

If you need a little more help with the set-up or anything related to your Retro Mini, don't worry we are ready to answer your questions or do what we can to help. Please do get in touch

**Email:** [Support@myvq.com](mailto:Support@myvq.com)

**Website:** [www.MyVQ.com](http://www.MyVQ.com)

## **CE & WEE**

Waste electrical and electronic products should not be disposed of with household waste. Where facilities exist to do so, please recycle. Check with your Local Authority for further recycling advice.



**MyVQ.com**

Need Help?



[www.MyVQ.com](http://www.MyVQ.com)



[support@myvq.com](mailto:support@myvq.com)