



3+

Product Operation Manual

Please read this instruction manual carefully before using, as it contains all the information you need to know about how to use this product correctly with fun.
Colors and contents may vary from instruction.

Maximun velocity 20km/h

SMOKING ATV




Battery installation

Replacing batteries of the controller.

ON/OFF



1.5V "AA"
2 x 1.5V "AA"
(Not included)

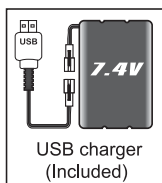

USB charger
(Included)

1. Take off the battery cover of the ATV, install 7.4V rechargeable battery pack, fasten the cover, turn the switch to 'ON'.
2. Open the battery cover of controller, install 2 x 1.5V "AA" batteries, close the cover.
3. The charging time is about 3.5 hours and supports about 25 minutes playing.



The basic operation of the products

1



Please turn on switch in the chassis and use the controller to start the ATV.

2



Push or pull the trigger of the controller to make the ATV goes forward or backward. (Push or pull it slowly in order to prevent the ATV runs out abruptly).

3



Push the remote lever to the left and the ATV turns to the left.

4



Push the remote lever to the right and the ATV turns right.



Water mist additional diagram

Charge by USB: about 3.5 hours;
Playing time: about 25 minutes;
Control distance: about 25 meter;
Electric current and coltage: 500 mAh, 7.4V.

BATTERY SAFETY

1. The placement or replacement of batteries is to be performed by an adult.
2. Remove the rechargeable battery from the chassis before charging.
3. Always remove exhausted batteries from the car and the transmitter.
4. Make sure the main switch is set to OFF before installing the battery.
5. Batteries must be inserted with the correct polarity.
6. Non-chargeable batteries shall not be recharged.
7. Do not short-circuit the batteries.
8. Always remove the batteries from the car and the transmitter after playing.
9. Never throw the batteries into fire to avoid explosion or leakage.
10. Do not mix batteries from different producers or new and old batteries.
11. You should only use batteries of the same or equivalent types as recommended.
12. Check the batteries on regular basis to avoid leakage.
13. Keep this manual well for future reference as it contains important information about this product.

For environmental reasons, electrical equipment must be disposed separately from household waste. Contact the municipality for the nearest collection point.



Produced and Imported by:
MaxToys ApS, Bjarkevej 10B, Skovby, DK-8464 Galten
info@maxtoys.dk

11014537GB



3+

Brugsanvisning

Læs denne brugsanvisning grundigt før brug, da den indeholder alle relevante oplysninger.
Farver og indhold kan variere fra illustrationerne.

Maksimumshastighed 20km/h

SMOKING ATV



Batteri installation


Udskiftning af batterierne i fjernbetjeningen.



Tænd/Sluk



1.5V "AA"
2 x 1.5V "AA"
(Ikke inkluderet)

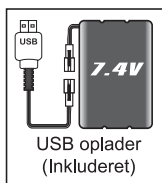

USB oplader
(Inkluderet)

1. Tag batteridækslet af ATV'en, og isæt 7,4V batteriet. Fastgør dækslet igen og drej kontakten til 'Tænd'.
2. Åbn batteridækslet på fjernbetjeningen, isæt 2 x 1,5V "AA" batterier, og luk dækslet.
3. Opladningstiden er cirka 3,5 timer, og køretiden er cirka 25 minutter.



Brugsanvisning til produktet

1



Tænd kontakten i chassiset, og forbind derefter fjernbetjeningen for at starte ATV'en.

2



Tryk eller træk i aftrækkeren på fjernbetjeningen for at få ATV'en til at køre fremad eller bagud. (Gør det langsomt for at undgå pludselige bevægelser).

3



Skub fjernbetjeningens styrekontakt til venstre for at dreje ATV'en til venstre.

4



Skub fjernbetjeningens styrekontakt til højrefor at dreje ATV'en til højre.



Yderligere diagram for vandspray.

Opladning via USB: ca. 3,5 timer;
Køretid: ca. 25 minutter;
Styringsafstand: ca. 25 meter;
Batterikapacitet og spænding: 500 mAh, 7.4V.

BATTERISIKKERHED

1. Isætning eller udskiftning af batterierne skal udføres af en voksen.
2. Fjern det genopladelige batteri fra produktet, inden det oplades.
3. Fjern altid opbrugte batterier fra produktet og fjernbetjeningen.
4. Sørg for, at hovedafbryderen er slået fra, inden batteriet installeres.
5. Husk at vende + og - korrekt.
6. Forsøg aldrig at genoplade ikke-genopladelige batterier.
7. Kortslut ikke batterikontakterne.
8. Tag batterierne ud, hvis varen ikke anvendes i en længere periode.
9. Smid aldrig batterierne ind i ild for at undgå eksplosion eller lækage.
10. Bland aldrig gamle og nye batterier eller forskellige batterityper.
11. Du bør kun bruge batterier af samme eller tilsvarende type, som anbefalet.
12. Kontroller batterierne regelmæssigt for at undgå lækage.
13. Opbevar denne vejledning til fremtidig reference, da den indeholder vigtige oplysninger om dette produkt.

Af hensyn til miljøet skal elektrisk udstyr bortskaffes særskilt fra husholdningsaffald.
Kontakt kommunen for nærmeste indsamlingssted.



Importeret af og produceret for:
MaxToys ApS, Bjarkevej 10B, Skovby, DK-8464 Galten
info@maxtoys.dk

11014537DK