



Art. Nr. 10240231 / 10340232



## DK // VIGTIG INFORMATIONER:

Dit nye liggeunderlag skal bruge længere tid til oppustning første gang.

Læg underlaget ud med åben ventil en time inden brug og blæs ekstra luft ind med munden inden brug.

Fra nu af vil dit liggeunderlag næsten puste sig helt op. Du kan også blæse ind i måtten eller tømme den for at variere fastheden og komforten.

## OPBEVARING

Opbevar altid din selvoppustelige madras udrullet og med ventilen åben på et tørt sted for at forhindre, at skummet indvendigt bliver permanent komprimeret, og madrassens funktion forringes.

## RENGØRING

Brug lunken vand uden rengøringsmiddel eller kemikalier.

## REPARATION

1. Find utætheder, huller, rifter eller skader og markér dem med en blyant.
2. Rengør lækagen med en klud eller isopropylalkoholpude, og lad det rensede område tørre grundigt, før du reparerer skaden.
3. Tøm måtten ud og luk ventilen.
4. Klip lappen 1 cm større end det hul, der skal repareres (rund hjørnerne af).
5. Smør limen (polyurethanlim eller lignende, medfølger ikke) på det beskadigede område. Brug nok lim til at få hele plasteret til at klæbe. Tryk plasteret fast i 2-3 minutter for god vedhæftning.
6. Lad det reparerede liggeunderlag tørre natten over.

## EN // MAINTENANCE INSTRUCTIONS

Your new sleeping pad will need longer time for self inflation when rolled out for the first time. You can supportingly blow additional air into the mattress to speed up the first expansion of the foam within.

From now on your mattress will inflate itself almost entirely. In addition you can blow into the mattress or let air off to vary the level of hardness and the sleeping comfort.

## STORAGE

Store your self inflating mattress always rolled out and with the valve opened up at a dry place for avoiding long-lasting compression of the interior foam and thereby compromising the sleeping pad's function.

## CLEANING

It will be adequate to clean the surface of your mattress with warm water, a sponge or soft brush and optionally a residue-free detergent manually.

## REPAIR

1. Identify the leaks, holes, tears, or punctures in your sleeping pad and mark them with a pencil.
2. Clean the leaking area with web cloth or isopropyl alcohol pad and let the cleaned area dry thoroughly before repairing it.
3. Deflate the mattress and close the valve.
4. Cut the patch 1cm larger than the hole you want to repair (round off edges).
5. Apply the glue (polyurethane glue or similar, not included) to the leak area, extending beyond the size of the patch you're going to apply. Press the patch firmly onto the glue and hold it down for 2-3 minutes to help the adhesive get a good hold.
6. Let the repaired mattress dry flat overnight.