




6+

Instruction

Please refer to the instruction manual for better understanding and operating this product.

Battle Robot

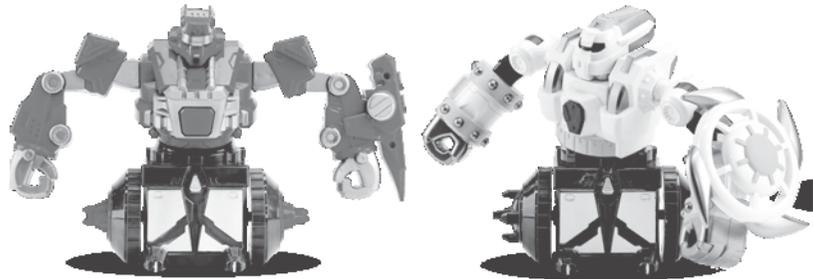


PRODUCT CONFIGURATION




ROBOT BATTERY INSTALLATION

1. Each robot uses 4 x 1.5V AA batteries. (Batteries are not included)
2. First, use the screwdriver to open the battery compartment.
3. Insert 4 x 1.5V AA batteries.
4. Put on and screw the battery cover.

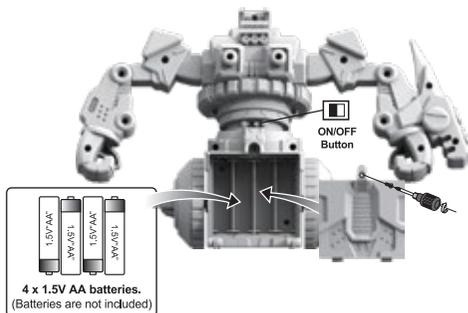



REMOTE CONTROL BATTERY INSTALLATION

1. Each remote control uses 2 x 1.5V AA batteries. (Batteries are not included)
2. First, use the screwdriver to open the battery compartment.
3. Insert 2 x 1.5V AA batteries.
4. Put on and screw the battery cover.

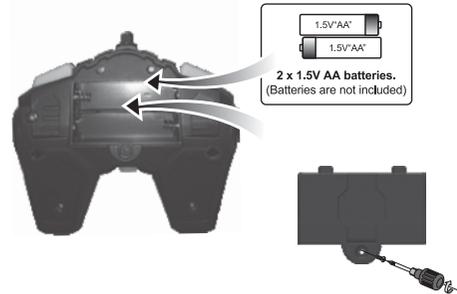


ROBOT & CONTROLLER PAIRING

Turn on both the robot and the controller. The LED on the controller will blink while searching for a connection. Once pairing is successful, the LED will stop blinking

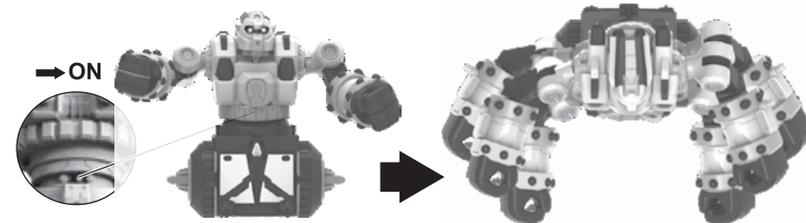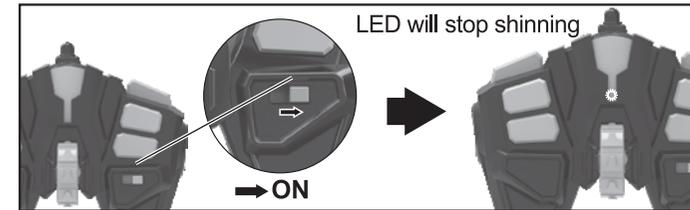

REMOTE CONTROL FUNCTIONS OVERVIEW

Remote Control Function Guide

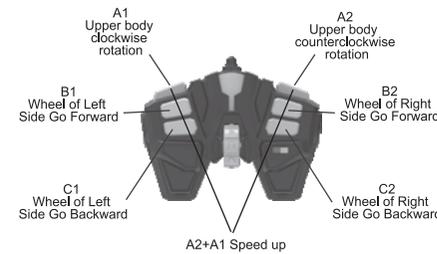

Defiant Voice Activation: Press (C1 + A1 + B2) or (C2 + A2 + B1).

Move Forward: Press B1 + B2.

Move Backward: Press C1 + C2.

Upper Body Rotation:

- Clockwise: Press A1.
- Counterclockwise: Press A2.

Wheel Movements & Rotation:

- Right Wheel Forward (Robot Rotates Counterclockwise): Press B2.
- Right Wheel Backward (Robot Rotates Clockwise): Press C2.
- Left Wheel Forward (Robot Rotates Clockwise): Press B1.
- Left Wheel Backward (Robot Rotates Counterclockwise): Press C1.


Increase Speed: Press A1 + A2.

Full Rotation:

- Clockwise Rotation: Press B1 + C2.
- Counterclockwise Rotation: Press B2 + C1.


OPERATING PROCEDURES

Press the button B1 on the transmitter, the left wheel goes forward and the robot clockwise rotation.

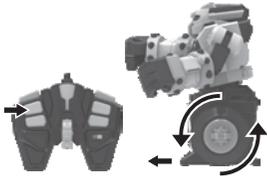


①

Press the button B2 on the transmitter, the right wheel goes forward and the robot counterclockwise rotation.

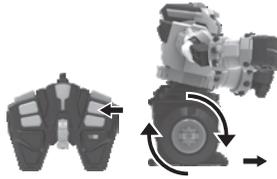


②

Press the button C1 on the transmitter, the left wheel goes backward and the robot counterclockwise rotation.

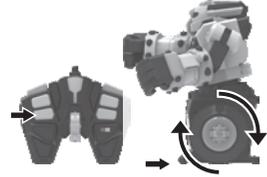


③

Press the button C2 on the transmitter, the right wheel goes backward and the robot clockwise rotation.

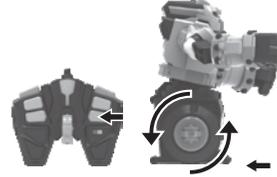


④

Press the button A1, the upper body of the robot rotates clockwise.

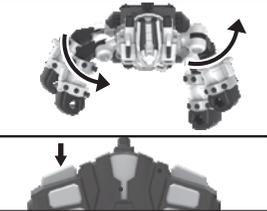


⑤

Press the button A2, the upper body of the robot rotates counterclockwise.

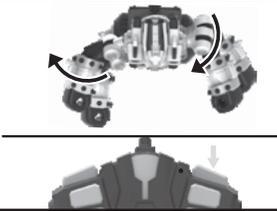


⑥

Press the button B1 and B2 at the same time on the transmitter, robot will go straight forward.

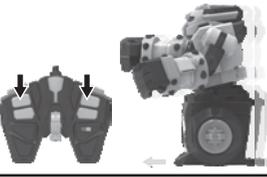


⑦

Press the button C1 and C2 at the same time on the transmitter, robot will go straight backward.

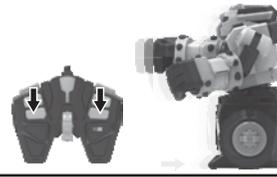


⑧

Press the button C1 + A1 + B2 at the same time on the transmitter, the upper body of robot clockwise rotation and the lower body counterclockwise rotation, it will swing with a provocative voice.

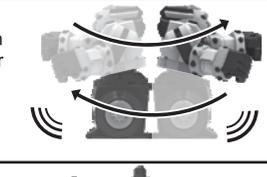


⑨

Press the button C2 + A2 + B1 at the same time on the transmitter, the upper body of robot counterclockwise rotation and the lower body clockwise rotation, it will swing with a provocative voice.

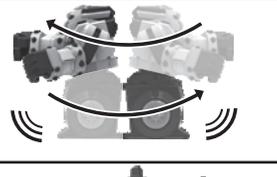


⑩

Press button B1+C2 at the same time, robot clockwise rotation.

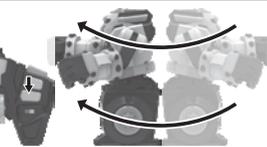


⑪

Press button B2 + C1 at the same time, robot counterclockwise rotation.

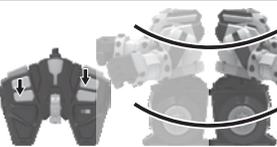


⑫

 Press the button A1 + A2 at the same time, the upper body of robot accelerated rotation.




⑬

FEATURE

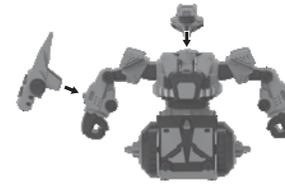


Simulation battle sound renders the fighting atmosphere. The robot is equipped with the appropriate combat weapons, can be freely removed, increase the defense, makes the battle more funny.

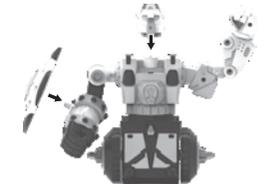

With a stable and solid 360 degree rotation of the waist design, when it is rotating, you can quickly turn the rotation accelerator to accelerate the speed of rotation, so that the rotation will collect more rotating power, in order to improve the combat effectiveness.

During the battle, as long as one robot hit the other one on the chest button, then that one's head will automatically pop, the robot will lose vitality, reactivate it need to reload the head of the robot.

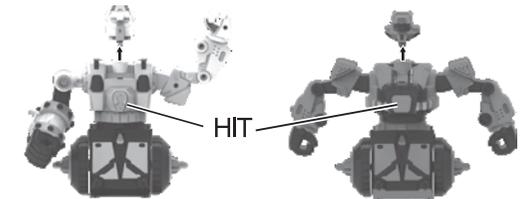

Turn on the robot and transmitter. Then, press B1 + C2 + A2 at the same time. (Pressing the reverse button will have the same effect.) The robot will swing and make a fun, defiant sound, making play more exciting. (See Pictures 9 & 10.)

When this product is in a state of power on, there is a reminder of the sound function, every 5 minutes to remind once.

BATTERY SAFETY

1. The placement or replacement of batteries is to be performed by an adult.
2. Always remove exhausted batteries from the robot and the controller.
3. Make sure the main switch is set to OFF before installing the battery.
4. Make sure the main switch is set to OFF before installing the battery.
5. Batteries must be inserted with the correct polarity.
6. Non-chargeable batteries shall not be recharged.
7. Do not short-circuit the batteries.
8. Always remove the batteries from the robot and the controller after playing.
9. Never throw the batteries into fire to avoid explosion or leakage.
10. Do not mix batteries from different producers or new and old batteries.
11. You should only use batteries of the same or equivalent types as recommended.
12. Check the batteries on regular basis to avoid leakage.
13. Keep this manual well for future reference as it contains important information about this product.

For environmental reasons, electrical equipment must be disposed separately from household waste. Contact the municipality for the nearest collection point.



Produced and Imported by:
MaxToys ApS, Bjarkevej 10B, Skovby, DK-8464 Galten
info@maxtoys.dk




6+

Brugsanvisning

Se venligst brugsanvisningen for bedre forståelse og betjening af dette produkt.

Kamrobot

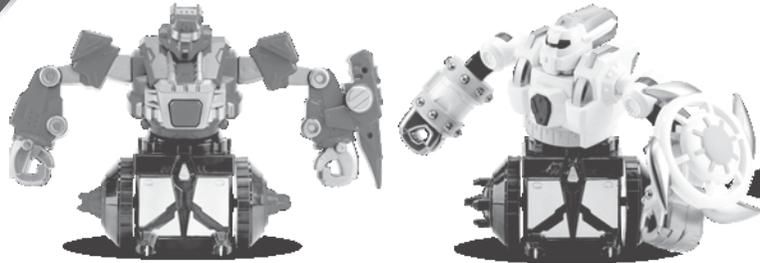

PRODUKT KONFIGURATION



Fjernbetjening x 2

Robot (Hvid)


Skjold (Hvid)

Robot (Rød)

Armudstyr (Rød)


INSTALLATION AF BATTERIER I ROBOTTEN

1. Hver robot bruger 4 x 1,5V AA-batterier. (Batterier er ikke inkluderet)
2. Brug skruetrækkeren til at åbne batterirummet.
3. Indsæt 4 x 1,5V AA-batterier.
4. Sæt batteridækslet på og skru det fast.

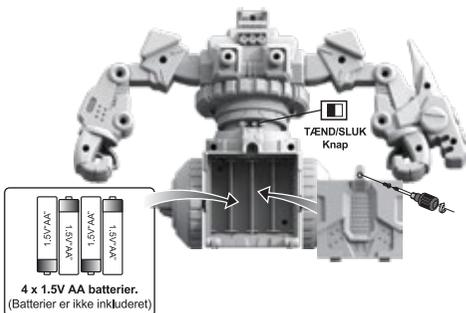



INSTALLATION AF BATTERIER I FJERNBETJENINGEN

1. Hver fjernbetjening bruger 2 x 1,5V AA-batterier. (Batterier er ikke inkluderet)
2. Brug først skruetrækkeren til at åbne batterirummet.
3. Indsæt 2 x 1,5V AA-batterier.
4. Sæt batteridækslet på og skru det fast.

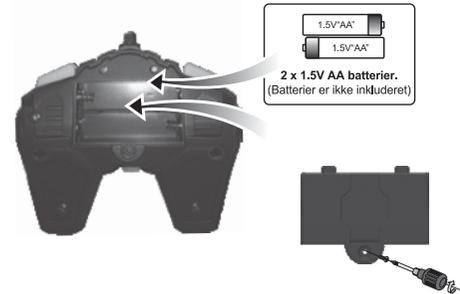

PARRING AF ROBOT OG FJERNBETJENING

Tænd både robotten og fjernbetjeningen. LED-lyset på fjernbetjeningen vil blinke, mens den søger efter en forbindelse. Når parringen er vellykket, stopper LED-lyset med at blinke.

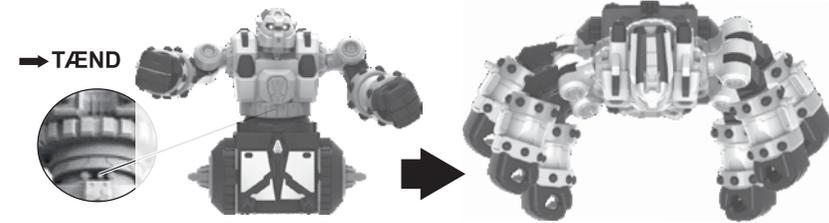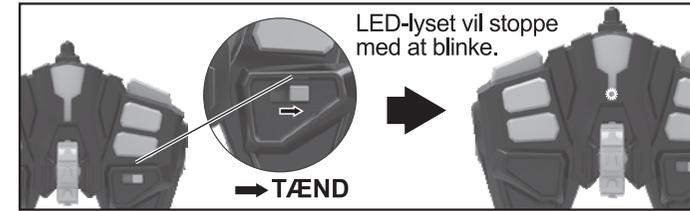

OVERSIGT OVER FJERNBETJENINGENS FUNKTIONER

Guide til fjernbetjeningens funktioner

Aktivering af trodsig stemme: Tryk på (C1 + A1 + B2) eller (C2 + A2 + B1).

Bevægelse fremdad: Tryk på B1 + B2.

Bevægelse baglæns: Tryk på C1 + C2.

Overkropsrotation:

• Med uret: Tryk på A1.

• Mod uret: Tryk på A2.

Hjulbevægelser og rotation:

• Højre hjul fremad (robotten roterer mod uret): Tryk på B2.

• Højre hjul baglæns (robotten roterer med uret): Tryk på C2.

• Venstre hjul fremad (robotten roterer med uret): Tryk på B1.


• Venstre hjul baglæns (robotten roterer mod uret): Tryk på C1.

Øg hastigheden: Tryk på A1 + A2.

Fuld rotation:


• Rotation med uret: Tryk på B1 + C2.

• Rotation mod uret: Tryk på B2 + C1.

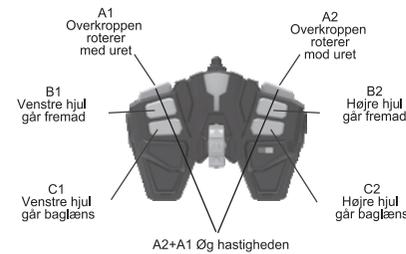


BETJENINGSPROCEDURER

Tryk på knap B1 på fjernbetjeningen. Venstre hjul kører fremad, og robotten roterer med uret.

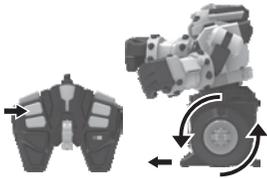


①

Tryk på knap B2 på fjernbetjeningen. Højre hjul kører fremad, og robotten roterer mod uret.

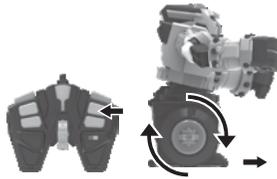


②

Tryk på knap C1 på fjernbetjeningen. Venstre hjul kører baglæns, og robotten roterer mod uret.

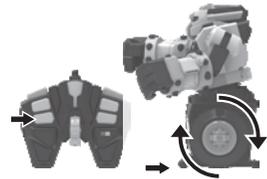


③

Tryk på knap C2 på fjernbetjeningen. Højre hjul kører baglæns, og robotten roterer med uret.

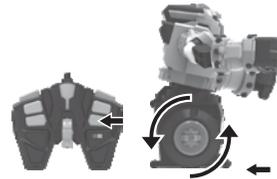


④

Tryk på knap A1. Robotens overkrop roterer med uret.

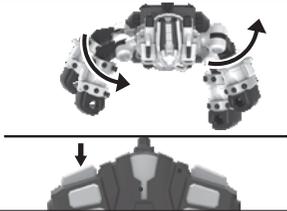


⑤

Tryk på knap A2. Robotens overkrop roterer mod uret.

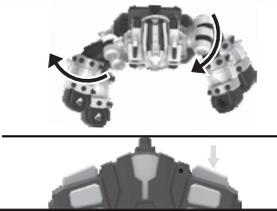


⑥

Tryk på knapperne B1 og B2 samtidig på fjernbetjeningen. Robotten kører lige frem.

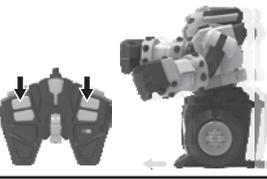


⑦

Tryk på knapperne C1 og C2 samtidig på fjernbetjeningen. Robotten kører lige baglæns.

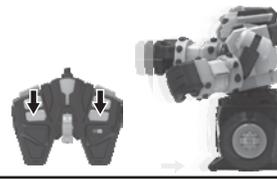


⑧

Tryk på knapperne C1 + A1 + B2 samtidig på fjernbetjeningen. Robotens overkrop roterer med uret, mens underkroppen roterer mod uret, og den svinger med en provokerende lyd.

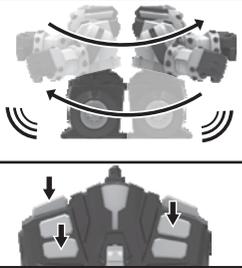


⑨

Tryk på knapperne C2 + A2 + B1 samtidig på fjernbetjeningen. Robotens overkrop roterer mod uret, mens underkroppen roterer med uret, og den svinger med en provokerende lyd.

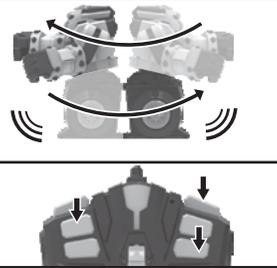


⑩

Tryk på knapperne B1 + C2 samtidig. Robotten roterer med uret.

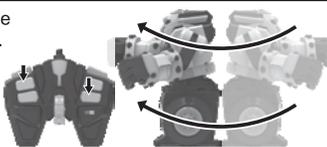

⑪

Tryk på knapperne B2 + C1 samtidig. Robotten roterer mod uret.

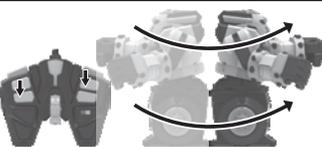


⑫

Tryk på knapperne A1 + A2 samtidig. Robotens overkrop roterer hurtigere.




⑬

FUNKTIONER

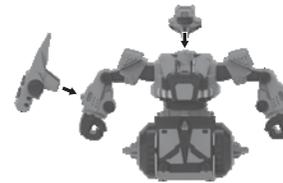


Episke kamplyde skaber en intens kampstemning. Robotten er udstyret med passende kampvåben, som nemt kan fjernes for at øge forsvaret og gøre kampen sjovere.

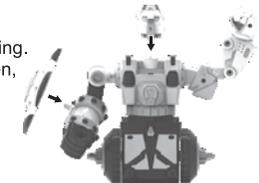

Med et stabilt og solidt 360-graders roterende taljedesign kan du hurtigt dreje acceleratoren under rotationen for at øge rotationshastigheden. Dette opbygger mere rotationskraft og forbedrer dermed kampkraften.

Hvis en robot rammer den anden på brystknappen under kampen, vil hovedet springe op, og robotten vil miste sin vitalitet. For at genaktivere den skal hovedet sættes på igen.

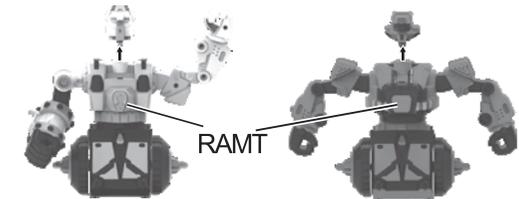

Tænd for robotten og fjernbetjeningen. Tryk derefter på B1 + C2 + A2 samtidig. (At trykke på de modsatte knapper vil have samme effekt.) Robotten vil svinge og afgive en sjov, udfordrende lyd, hvilket gør legen mere spændende. (Se billeder 9 & 10.)

Når produktet er tændt, afspilles en lydpåmindelse hvert 5. minut.

BATTERISIKKERHED

1. Isætning eller udskiftning af batterierne skal udføres af en voksen.
2. Fjern altid opbrugte batterier fra produktet og fjernbetjeningen.
3. Sørg for, at hovedafbryderen er slået fra, inden batterier installeres.
4. Husk at vende + og - korrekt.
5. Forsøg aldrig at genoplade ikke-genopladelige batterier.
6. Kortslut ikke batterikontakterne.
7. Tag batterierne ud, hvis varen ikke anvendes i en længere periode.
8. Smid aldrig batterierne ind i ild for at undgå eksplosion eller lækage.
9. Bland aldrig gamle og nye batterier eller forskellige batterityper.
10. Du bør kun bruge batterier af samme eller tilsvarende type, som anbefalet.
11. Kontroller batterierne regelmæssigt for at undgå lækage.
12. Opbevar denne vejledning til fremtidig reference, da den indeholder vigtige oplysninger om dette produkt.

Af hensyn til miljøet skal elektrisk udstyr bortskaffes særskilt fra husholdningsaffald. Kontakt kommunen for nærmeste indsamlingssted.



Importeret af og produceret for:
MaxToys ApS, Bjarkevej 10B, Skovby, DK-8464 Galten
info@maxtoys.dk