



MINI ME 2

USER MANUAL



TABLE OF CONTENTS

SAFETY PRECAUTIONS



MACHINE OVERVIEW



MACHINE STATUS OVERVIEW



RECOMMENDATIONS FOR SAFE USE



FIRST USE



BEVERAGE EXAMPLES



PREPARING A BEVERAGE



CLEANING



DESCALING



TROUBLESHOOTING



Read all instructions and keep these safety instructions. Any type of misuse of the appliance may result in a potential injury.

In case of any inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee may not apply.

The guarantee does not cover appliances that do not work or do not work properly because they have not been maintained and/or descaled.



INTENDED USE

1. This appliance is intended to be used in household only. It is not intended to be used in following applications, and the guarantee will not apply for:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
2. Your appliance is intended for domestic use inside the home only at an altitude below 3400 m.

ELECTRICAL POWER SUPPLY

3. Connect the appliance to a mains power socket with an earth connection only. Mains voltage must be the same as the details on the rating plate. The use of incorrect connection will negate the guarantee and may be hazardous.
4. To protect against fire, electric shock and injury to persons do not immerse the power cord, plugs or the appliance in water or other liquid. Avoid spillage on the plug. Never touch the power cord with wet hands. Do not overfill the water tank.
5. In case of an emergency remove the plug from the mains power socket immediately.
6. Unplug from the mains power socket when not in use.
7. To disconnect, remove the plug from the mains power socket. Do not unplug by pulling the cord.
8. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces or sharp edges. Do not allow the cord to dangle (risk of tripping up). Never touch the cord with wet hands.
9. Do not operate any appliance with a damaged cord or plug. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. Do not operate any appliance that malfunctions or has been damaged in any manner. Unplug cord immediately. Return the damaged appliance to the nearest authorised service facility designated by the NESCAFÉ® Dolce Gusto® hotline.

10. If the mains power socket does not match the plug on the appliance, have the plug replaced with a suitable type by aftersales service centres designated by the NESCAFÉ® Dolce Gusto® hotline.



CONDITIONS OF USE

11. Always use the appliance on a flat, stable, heat resistant surface away from sources of heat or water splashes.
12. Do not use the appliance without the drip tray, except when a very tall mug is used. Do not use the appliance for hot water preparation.
13. Never turn the machine upside down.
14. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
15. Do not place on or near a hot gas or electric burner, or in a heated oven.
16. Do not put fingers under the outlet during beverage preparation.
17. Do not touch the injector of the machine head.
18. Never carry the appliance by the extraction head.
19. The capsule holder is equipped with a permanent magnet. Avoid placing the capsule holder near appliances and objects that can be damaged by magnetism, e.g. credit cards, USB drives and other data devices, video tapes, television and computer monitors with picture tubes, mechanical clocks, hearing aids and loud speakers.
20. Do not turn off the appliance during the descaling process. Rinse the water tank and clean the appliance to avoid any residual descaling agent.
21. If away for prolonged periods, on holiday, etc. the appliance must be unplugged, emptied and cleaned. Rinse before reuse. Operate the rinse cycle before re-using your appliance.
22. We recommend using the NESCAFÉ® Dolce Gusto® capsules designed and tested for the NESCAFÉ® Dolce Gusto® machine. They were designed to interact together – the interaction provides the in-cup quality that NESCAFÉ® Dolce Gusto® is known for. Each capsule is designed to prepare a perfect cup, and cannot be reused.
23. Do not remove hot capsules by hand. Always use capsule holder handle to dispose of used capsules.
24. Always insert the capsule holder in the machine to prepare a beverage. The appliance will not work if the capsule holder is not inserted. Do not pull out the capsule holder before the indicator stops blinking.
25. Machines equipped with a locking handle: scalding may occur if the locking handle is opened during the brewing cycles. Do not pull up the locking handle before the lights on the machine stop flashing.
26. For health reasons, always fill the water tank with fresh drinking water.



27. After use of the appliance always remove the capsule and clean the capsule holder. Empty and clean the drip tray and capsule bin daily. Food allergy sufferers must rinse the appliance according to cleaning procedure.
28. The heating element surface is subject to residual heat after use and plastic housings may feel warm to touch several minutes upon use.
29. Patients with pacemakers or defibrillators: do not hold the capsule holder directly over the pacemaker or defibrillator.
30. The appliance shall not be placed in a cabinet when in use.



CHILDREN

31. Keep the appliance and its cord out of reach of children aged less than 8 years. Children shall not play with the appliance.
32. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
33. This appliance is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Persons who have a limited or no understanding of the operation and use of this appliance must first read and fully understand the contents of the user manual, and where appropriate seek additional guidance on its operation and use from the person responsible for their safety.
34. Children should be supervised to ensure that they do not play with the appliance.
35. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised by an adult.
36. Children should not use the appliance as a toy.



MAINTENANCE

37. Unplug from the mains power socket before cleaning. Allow to cool before putting on or taking off parts, before cleaning the appliance. Never clean wet or immerse appliance in any fluid. Never clean the appliance with running water. Never use detergents to clean the appliance. Clean the appliance only using soft sponges/brushes. The water tank should be cleaned with a clean food-safe brush.



38. Any operation, cleaning and care other than normal use must be undertaken by after-sales service centres designated by the NESCAFÉ® Dolce Gusto® hotline. Do not dismantle appliance and do not put anything into openings.
39. To reduce the risk of fire or electric shock, do not remove the cover, No user serviceable parts inside. Repair should be done by authorized service personnel only!
40. For additional guidance on how to use the appliance, refer to the user manual on www.dolce-gusto.com or call the NESCAFÉ® Dolce Gusto® hotline number.


RECYCLING

41. Packaging is made of recyclable materials. Contact your local council / authority for further information on recycling programs. Your appliance contains valuable materials which can be recovered or recycled.

EUROPEAN MARKETS ONLY: Think of the environment!

 Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point or at an approved service centre, where it will be disposed of properly. European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), stipulates that used household appliances must not be disposed of in normal unsorted municipal waste. Old appliances must be collected separately to optimise the sorting and recycling of their parts and to reduce the impact on human health and the environment.



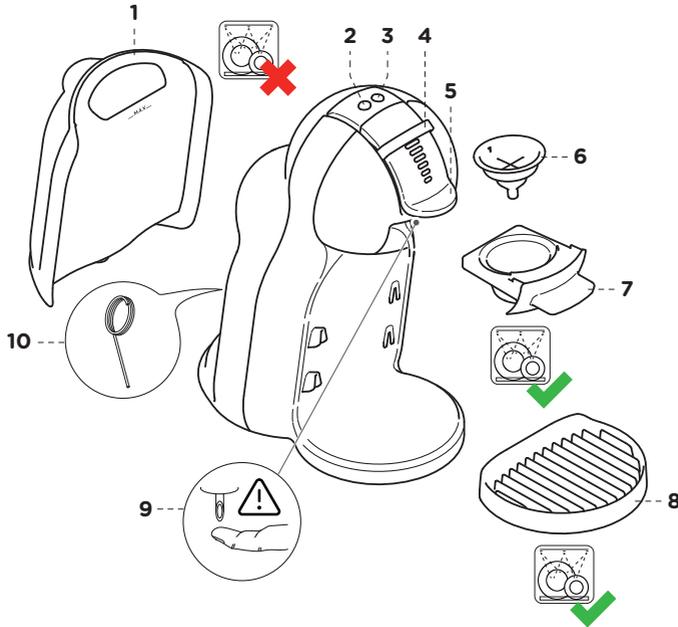


- 1 Water tank (0.8 L)
- 2 Temperature button
- 3 Start button
- 4 Volume selector
- 5 Locking handle
- 6 Rinsing tool
- 7 Capsule holder
- 8 Drip tray
- 9 Injector
- 10 Cleaning needle

TECHNICAL DATA

	IE / GB: 220 - 240 V, 50/60 Hz, 1340 - 1600 W	
	Consumption in standby mode: < 0.1 W	
	Standby mode activation: 1 minute after preparing a beverage. 5 minutes after switching on if no other action is performed.	
		Weight: ~2.5 kg
P		Operating temperatures: 5 - 45 °C / 41 - 113 °F
		Dimensions: A = 16 cm B = 30.50 cm C = 24 cm



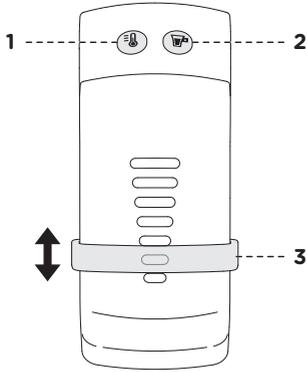

1 Hot and cold selection

The beverage temperature can be set (2 predefined settings):



Cold



Hot

After switch on, the temperature is automatically set to "Hot" during the heat up process. For cold selection, see the "HOW TO SELECT COLD MODE" section on page 9.


2 Start button

Start/Stop the beverage preparation


3 Volume selector

Seven positions for volume selection


HOW TO START THE MACHINE

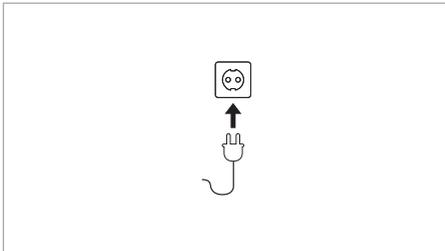

1 Ensure to use the correct mains voltage as given in "TECHNICAL DATA" on page 7. Connect the power plug to the mains power socket.

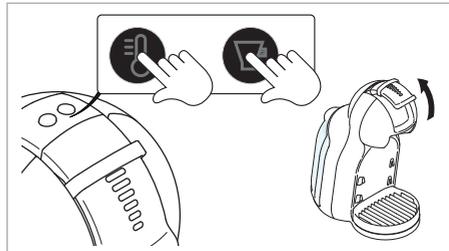

2 To start the machine, press the temperature button or the start button, or open the locking handle.

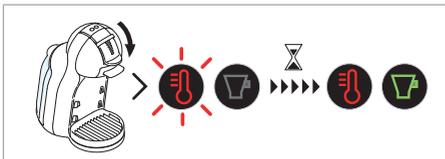


3 Close the locking handle. The temperature button starts blinking while the machine is heating up for approximately 40 seconds. Afterwards, the temperature button turns steady red. The start button turns steady green. The machine is ready to be used.




HOW TO SELECT COLD MODE

Option A: the machine is switched off.

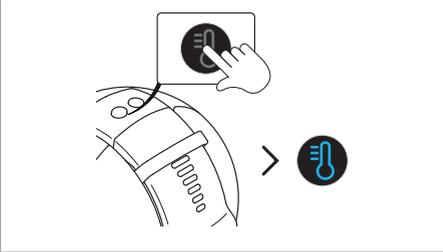


Press the temperature button to start the machine in cold mode. A cold beverage can be prepared immediately.

 The cold mode must only be used with dedicated cold products, e. g. Iced Frappé.

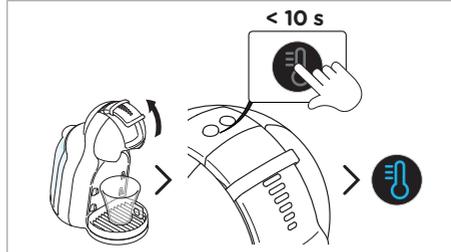


If you open the locking handle first, the machine switches on automatically. Press the temperature button within 10 seconds after starting the machine to change to cold mode (blue). A cold beverage can be prepared immediately.

Option B: a hot beverage has been prepared or the cold mode was not selected within 10 seconds after starting the machine.

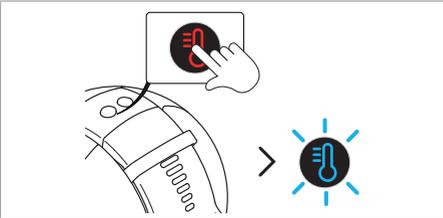

1 Press the temperature button to go into cold mode. The temperature selection button will blink blue to indicate that the machine needs to cool down.

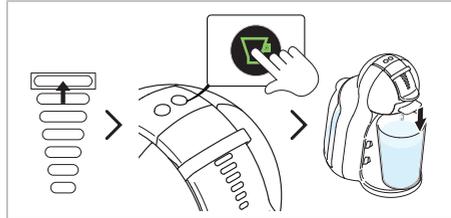

2 To accelerate the cooling, select level 7 on the bar display and place a large empty container underneath the coffee outlet. Press the start button. The machine starts rinsing.



3 Empty the container. The temperature selection button is steady blue to indicate that the machine is cooled down and a cold beverage can be prepared.




MACHINE STATUS OVERVIEW


	Steady Blue	Cold function ready
	Flashing Blue	Cold function activated but the water temperature is still too high
	Steady Red	Hot function ready
	Flashing Red	Heating up
		Top up time during beverage preparation at the end of the extraction For a longer cup, press the start button again
		Technical error
	Steady Green	Ready for beverage preparation, during beverage preparation or beverage preparation completed
	Flashing Green	Top up time during beverage preparation at the end of the extraction For a longer cup, press the start button again During flashing, do not open the locking handle
		No flow (no water in the water tank, clogged needle, etc...)
	Steady Orange	The machine needs to be descaled
	Flashing Orange	Descaling mode
	Steady Orange Flashing Green	Descaling mode (during the waiting time)



RECOMMENDATIONS FOR SAFE USE

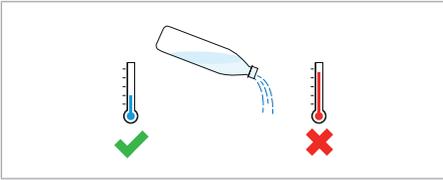


Never add hot water to the water tank! For rinsing and beverage preparation only use drinking water.

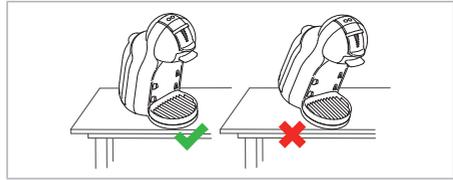


Always keep the machine upright!




After finishing the preparation the temperature button and the start button flash for about 5 seconds. **During that time do not open the locking handle!**

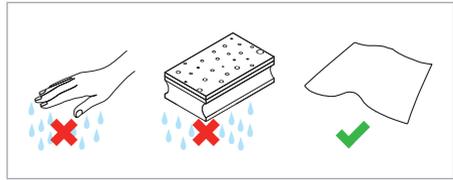

Do not touch the plug with wet hands. Do not touch the machine with wet hands! Never use a wet sponge. Only use a soft damp cloth to clean the top of the machine.

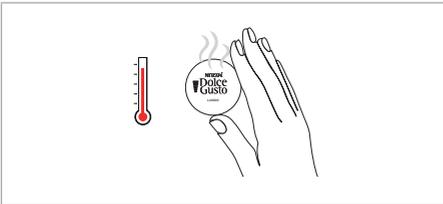

Do not touch the used capsule after the beverage preparation! Hot surface, risk of burns!

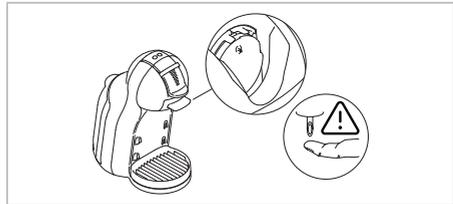

Never touch the injector with the surface of the finger!




Do not use the rinsing tool for tea or hot water preparation but use it when performing a rinsing or a descaling.



If away for more than 2 days (on holidays etc.) empty the water tank, rinse it and refill it with fresh drinking water. Before reuse, rinse the machine according to the instructions in the "CLEANING" section on page 18, beginning with step 4 to step 8.




FIRST USE

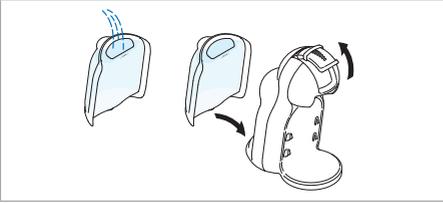


1 Rinse the water tank manually and fill it with fresh drinking water. Insert the water tank into the machine. Open the locking handle.



2 Make sure that the rinsing tool is in the capsule holder and the capsule holder is in the machine. Connect the power plug to the mains power socket. The machine will switch on once the temperature button or the start button are pressed or the locking handle is open.

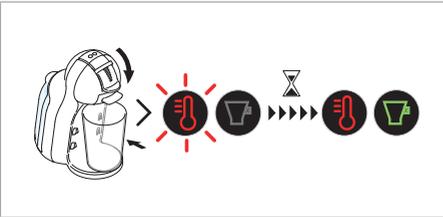


3 Close the locking handle. Place a large empty container underneath the coffee outlet. The temperature button starts blinking while the machine is heating up for approximately 40 seconds. Afterwards, the temperature button turns steady red. The start button turns steady green. The machine is ready to be used.

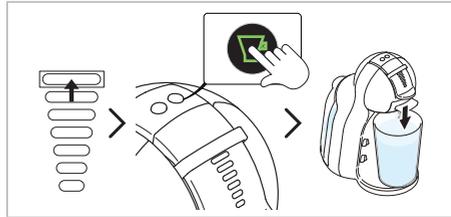

4 Set the bar display to the maximum level with the volume selector. Press the start button. The machine starts rinsing.









5 Wait until rinsing stops. Open the locking handle. Pull out the capsule holder. Remove the rinsing tool. Reinsert the capsule holder.

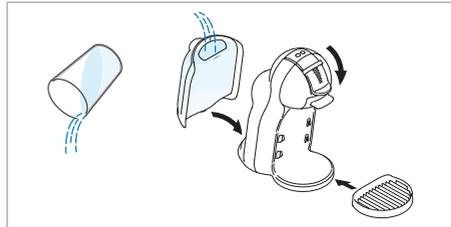

6 Empty the container. Fill the water tank with fresh drinking water and insert it into the machine. Then insert the drip tray at the desired position. Close the locking handle.



   BEVERAGE EXAMPLES

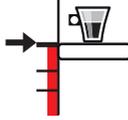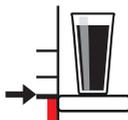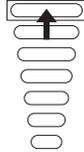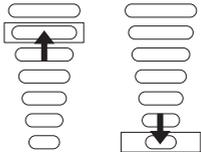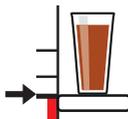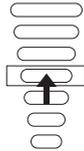Beverage	Adjust the drip tray	Select the volume	Choose hot or cold
			Indicative cup size
 Espresso			 35 ml (Ristretto), 50 ml (Espresso, Espresso Intenso)
 Grande/Americano Morning Cup			 300 ml
  Cappuccino			 200 ml + 40 ml (240 ml)
 Iced Frappé			 Ice cubes + 150 ml



The range of beverages available may vary between countries and over time.


BEFORE ALL BEVERAGE PREPARATIONS



Adjust the drip tray position to the selected cup size.

DURING / AFTER ANY BEVERAGE PREPARATION

For a shorter cup, manually stop the extraction at anytime during preparation by pressing the start button.

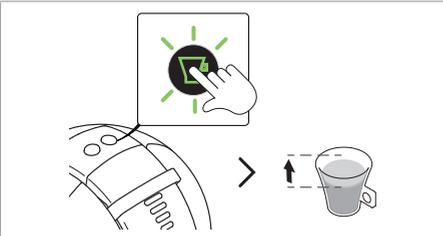

Once the extraction is finished, the start button flashes green.


For a longer cup, press the start button again while it is flashing.




1-CAPSULE BEVERAGE (E. G. ESPRESSO)



- 1 Place the cup with the correct cup size on the drip tray. See “**BEVERAGE EXAMPLES**” or package.

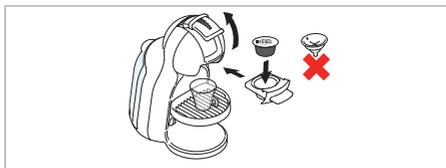


- 2 Open the locking handle. Pull out the capsule holder. Make sure the rinsing tool is not inside. Insert the capsule in the capsule holder. Insert it back into the machine.

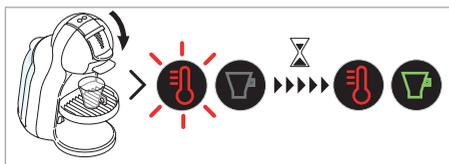


- 3 Close the locking handle. The temperature button starts blinking while the machine is heating up for approximately 40 seconds. Afterwards, the temperature button turns steady red. The start button turns steady green. The machine is ready to be used.



- 4 Use the volume selector to set the bar display in accordance with the number of bars shown on the capsule, or select the amount of bars to your own taste.

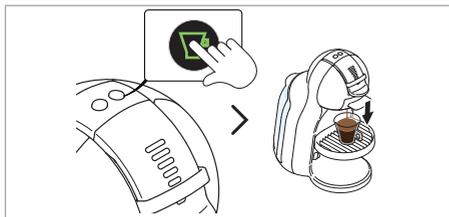

- 5 Press the start button. The beverage preparation starts. Wait until the preparation stops.

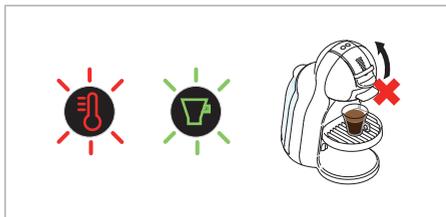

- 6 After finishing the preparation the temperature button and the start button flash for about 5 seconds. **For a longer cup**, press the start button again while it is flashing. **During that time do not open the locking handle!**

-  The extraction can be stopped manually by pressing the start button.



- 7 After the extraction is finished remove the cup from the drip tray. Open the locking handle. Pull out the capsule holder. Remove the used capsule and put it in the bin.



- 8 Rinse the capsule holder with fresh drinking water from both sides. Dry the capsule holder. Insert it back into the machine. Enjoy your beverage!




2-CAPSULE BEVERAGE (E. G. CAPPUCCINO)



- 1 Place the cup with the correct cup size on the drip tray. See “**BEVERAGE EXAMPLES**” or the package.




- 2 Open the locking handle. Pull out the capsule holder. Make sure the rinsing tool is not inside. Insert the first capsule in the capsule holder. Insert it back into the machine.

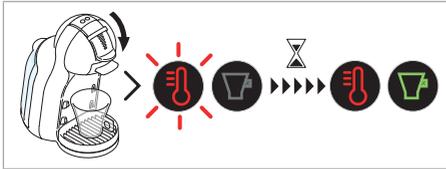


- 3 Close the locking handle. The temperature button starts blinking while the machine is heating up for approximately 40 seconds. Afterwards, the temperature button turns steady red. The start button turns steady green. The machine is ready to be used.



- 4 Use the volume selector to set the bar display in accordance with the number of bars shown on the capsule, or select the amount of bars to your own taste.

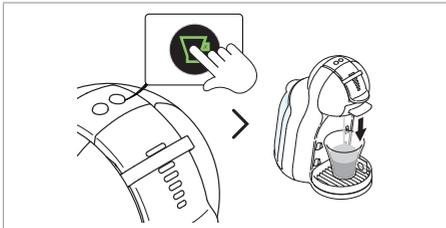


- 5 Press the start button. The beverage preparation starts. Wait until the preparation stops.

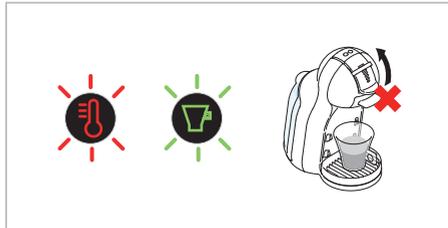

- 6 After finishing the preparation the temperature button and the start button flash for about 5 seconds. **For a longer cup**, press the start button again while it is flashing. **During that time do not open the locking handle!**

- i** The extraction can be stopped manually by pressing the start button.




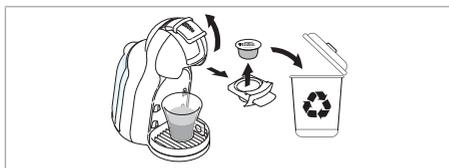


7 Open the locking handle. Pull out the capsule holder. Remove the used capsule and put it in the bin.



8 Insert the second capsule in the capsule holder. Insert it back into the machine. Close the locking handle.

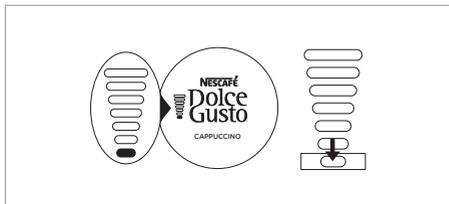

9 Use the volume selector to set the bar display in accordance with the number of bars shown on the capsule, or select the amount of bars to your own taste.

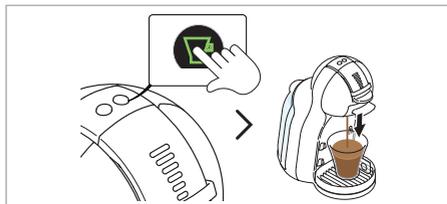

10 Press the start button. The beverage preparation starts. Wait until the preparation stops.


i The extraction can be stopped manually by pressing the start button.




11 After finishing the preparation the temperature button and the start button flash for about 5 seconds. **For a longer cup**, press the start button again while it is flashing. **During that time do not open the locking handle!**



12 After the extraction is finished, remove the cup from the drip tray.

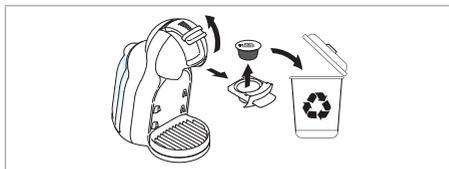


13 Open the locking handle. Pull out the capsule holder. Remove the used capsule and put it in the bin.

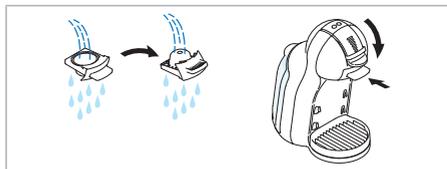


14 Rinse the capsule holder with fresh drinking water from both sides. Dry the capsule holder. Insert it back into the machine. Enjoy your beverage!




CLEANING

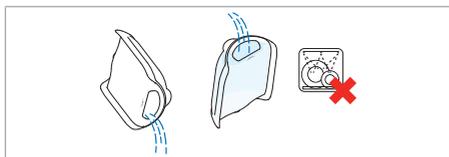


- 1 Rinse and clean the water tank. Use a clean food-safe brush and washing-up liquid as needed. Afterwards, refill with fresh drinking water and insert it into the machine. The water tank is not dishwasher proof!

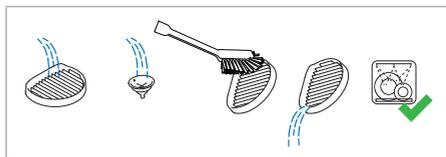


- 2 Rinse the drip tray and the rinsing tool with fresh drinking water. Clean the drip tray with a soft brush. The drip tray is dishwasher proof.

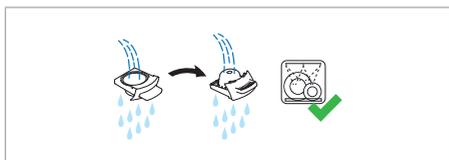


- 3 Clean with washing-up liquid and fresh drinking water both sides of the capsule holder. Alternatively wash in the dishwasher. Dry it afterwards.

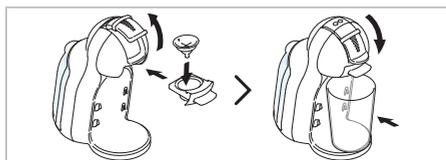


- 4 Open the locking handle. Put the rinsing tool into the capsule holder. Insert the capsule holder into the machine. Close the locking handle. Place a large empty container underneath the coffee outlet.

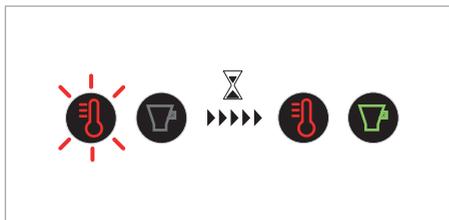

- 5 The temperature button starts blinking while the machine is heating up for approximately 40 seconds. Afterwards, the temperature button turns steady red. The start button turns steady green. The machine is ready to be used.

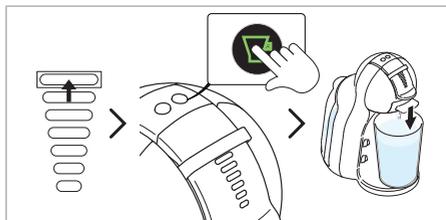

- 6 Set the bar display to the maximum level with the volume selector. Press the start button. The machine starts rinsing.

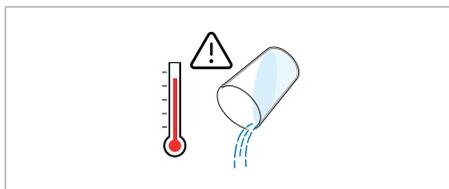

- 7 Wait until the extraction stops. Empty and clean the container.



- 8 Open the locking handle. Pull out the capsule holder. Remove the rinsing tool. Then insert the drip tray at the desired position.

 **Warning: hot water! Handle with care!**



i Descale at least every 3 - 4 months or when the start button is steady orange.




Do not use vinegar for descaling!
Avoid contact of descaling liquid with any part of the machine.
Do not press the start button during descaling cycle.



i If the beverage comes out slower than usual (even in droplets), or if it is cooler than usual the machine has to be descaled.




2 Mix 0.5 liter of fresh water with the NESCAFÉ® Dolce Gusto® liquid descaler (sold on on the NESCAFÉ® Dolce Gusto® website). Pour the descaling solution into the water tank and insert the water tank into the machine.

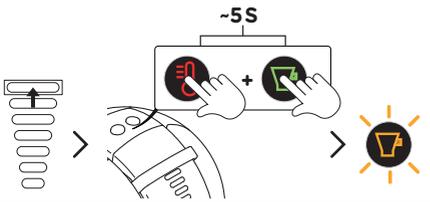

4 Set the bar display to the maximum level with the volume selector. Press and hold the temperature button and the start button for at least 5 seconds. The start button starts blinking orange. The machine enters the descaling mode.



1 If any, remove water from the water tank.

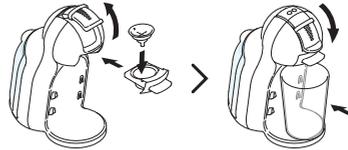

3 Open the locking handle. Put the rinsing tool into the capsule holder. Insert the capsule holder into the machine. Close the locking handle. Place a large empty container underneath the coffee outlet.




5 Press the start button. Descaling starts and water starts to flow. The machine descales in start-stop operation for approximately 2 minutes.

i Descaling can be paused by pressing the start button.






6 For a better effect of the descaler, the machine enters a waiting time of 2 minutes. The start button is orange and blinks green during the waiting time.

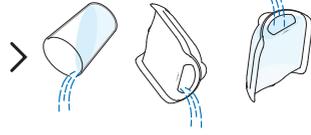


7 After 2 minutes the start button turns steady orange. Empty and clean the container. Rinse and clean the water tank. Use a clean food-safe brush and washing-up liquid as needed. Afterwards, refill with fresh drinking water and insert it into the machine.

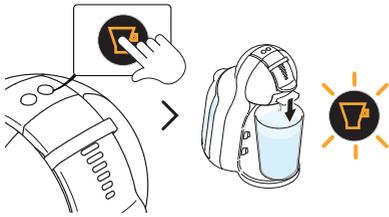

8 Press the start button. Rinsing starts. Wait until the extraction stops.



9 At the end of the rinsing cycle, the start button turns green. Remove the container.

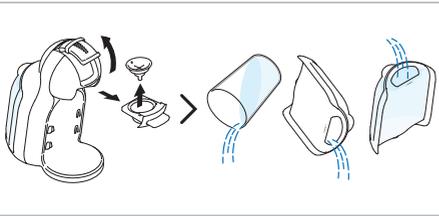

10 Open the locking handle. Pull out the capsule holder. Remove the rinsing tool. Rinse the capsule holder with fresh drinking water from both sides. Reinsert the capsule holder. Empty and clean the container. Rinse and clean the water tank. Afterwards, refill with fresh drinking water and insert it into the machine.



11 Clean the machine with a soft damp cloth. Dry it afterwards with a soft dry cloth. Then insert the drip tray at the desired position.






The machine cannot be switched on.



The start button turned to orange colour.

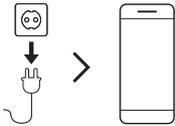

Check if the power plug is correctly plugged into a mains power socket. If yes, check your electricity supply. If the machine still cannot be switched on, call the NESCAFÉ® Dolce Gusto® Consumer Service.



This means that the machine needs to be descaled. Follow the instructions in the “DESCALING” section on page 19.




The temperature button flashes red fast.




NO LIQUID COMES OUT - NO WATER?

The beverage preparation stops part way during the delivery or does not start at all. The start button blinks green.

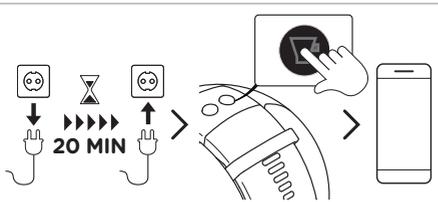

Check if the capsule is blocked, see the “NO LIQUID COMES OUT - CAPSULE / INJECTOR BLOCKED?” section on page 22. Unplug the power plug and wait 20 minutes. Afterwards, plug the power plug into the mains power socket and switch on the machine. If the start button still flashes red, call the NESCAFÉ® Dolce Gusto® Consumer Service.

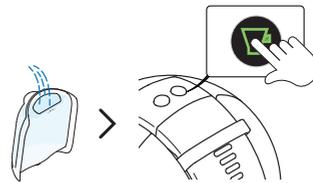


Check if the water tank contains enough fresh drinking water. If not, refill with fresh drinking water and press the start button to continue the preparation.



NO LIQUID COMES OUT - CAPSULE / INJECTOR BLOCKED?



The capsule may be blocked and under pressure.
The injector may be blocked.

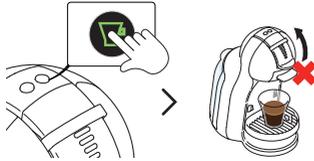


1 Always keep the machine upright! The beverage preparation may stop and the start button blinks green. If it is not the case, press the start button to stop the preparation. **Do not open the locking handle by force.** The machine releases pressure. Wait for 20 minutes to reduce the pressure.




2 Do not drink the coffee! Lift the locking handle. Remove the capsule holder. Put the used capsule in the bin.



3 Rinse the machine: follow the instructions in the “**FIRST USE**” section on page 12. Clean with washing-up liquid and fresh drinking water both sides of the capsule holder. Rinse the drip tray with fresh drinking water and clean it with a clean food-safe brush.

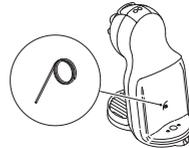

4 Close the locking handle. Remove the water tank and take out the cleaning needle. Keep the needle out of reach of children!

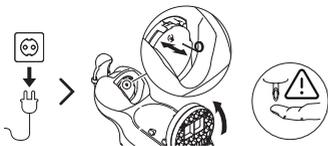

5 Unplug the power plug! Remove the drip tray. Tilt the machine for a better access to the injector. Never touch the injector with the finger! Clean the injector with the cleaning needle. Follow the instructions in the “**DESCALING**” section on page 19.





The beverage comes out slower than usual (even in droplets), or it is cooler than usual.



The machine has to be descaled. Use the NESCAFÉ® Dolce Gusto® liquid descaler. To order, call the NESCAFÉ® Dolce Gusto® Consumer Service or go on the NESCAFÉ® Dolce Gusto® website.



Water is splashing out of the coffee outlet during rinsing or descaling.




Put the rinsing tool into the capsule holder. Insert the capsule holder into the machine.




The beverage is splashing out of the coffee outlet.



Press the start button to stop the preparation. Pull out the capsule holder. Put the used capsule in the bin. Insert a new capsule in the capsule holder and insert it back into the machine.

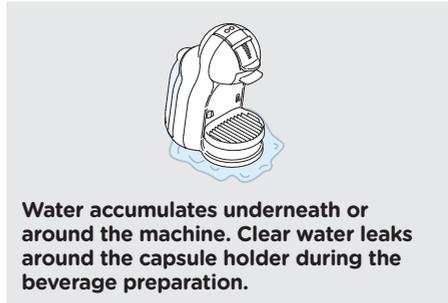

Water accumulates underneath or around the machine. Clear water leaks around the capsule holder during the beverage preparation.

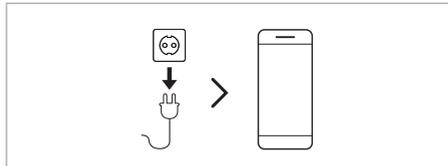

Unplug the power plug! Call the NESCAFÉ® Dolce Gusto® Consumer Service or go on the NESCAFÉ® Dolce Gusto® website.





CONTACT US



- AR 0800 999 81 00
- BR 0800 7762233
- CA 1 888 809 9267
- CH 0800 86 00 85
- CL 800 213 006
- CO 01800-05-15566
- CR 0800-507-4000
- DO (809) 508-5100
- EG 1800 637-853 (1800 NESTLE)
- GT 1-800-299-0019
- HN 800-2220-6666
- MX 800 365 2348
- NI 1-800-4000
- PA 800-0000
- PE 080010210
- PY 0800-112121
- SV 800-6179
- TI (868) 663-6832
- US 1-800-745-3391
- UY 0800-2122
- VE 0800 637 8531



- AT 0800 365 23 48
- BE 0800 93217
- BG 0 700 10 330
- CZ 800 135 135
- DE 0800 365 23 48
- DK 80 300 100
- EE 6 177 441
- ES 900 10 21 21
- FI 0800 0 6161
- FR 0 800 97 07 80
- GB 0800 707 6066
- GR 210 6371000
- HR 0800 600 604
- HU 06 40 214 200

- IE 00800 6378 5385
- IT 800365234
- KZ 8-800-080-2880
- LT 8 700 55 200
- LU 8002 3183
- LV 67508056
- MA 080 100 52 54
- MT 80074114
- NL 0800-3652348
- NO 800 80 730
- PL 0800 174 902
- PV 800 200 153
- RO 0 800 8 637 853

- SK (389) 2 32 32 228
- SK 80074114
- SR 0800 135 135
- SR 0800 000 100
- SE 020-299200
- TR 0800 211 02 18
- TR 4 44 31 60
- UA 0 800 50 30 10

- AL 0842 640 10
- ZA 086 009 6116
- ZA +27 11 514 6116
- AU 1800 466 975
- NZ 0800 365 234

- AE 800348786
- BA 0800 202 42
- CN 4006304868
- EG 19900
- HK (852) 21798999
- ID 0800 182 1028
- IL 1-700-50-20-54
- IN +96265902997
- JP 0120-879-816
- KR 080-234-0070
- KW +965 22286847
- LB +9614548593
- ME 020 269 902
- Middle East: +97143634100
- MY 1800 88 3633
- PH 898-0061
- PK 0800-62282
- QA +97444587615
- RU 8-800-700-79-79
- SA 8008971971
- SG 1 800 836 7009
- TH 1-800-295588
- TH 0-2657-8601
- TW 0800-000-338
- VN 1800 6699

