

sall_{ing}



INSTRUCTION MANUAL

ICE MAKER

10100956

INTRODUKTION

Mange tak fordi du har valgt et produkt fra Salling. Dermed har du erhvervet et kvalitetsprodukt som opfylder alle gældende krav til præstation og sikkerhedsstandarder i EU. For at sikre en korrekt behandling og en lang levetid anbefaler vi, at du overholder nedenstående anvisninger.

Du bedes læse vejledningen og især sikkerheds anvisningerne omhyggeligt igennem, inden du tager produktet i brug. Opbevar denne betjeningsvejledning, og overlad altid kun produktet til andre sammen med betjeningsvejledningen.

GENERELLE SIKKERHEDSFORANSTALTNINGER

- Forkert brug af produktet kan medføre personskade og beskadige produktet.
- Anvend kun produktet til det, det er beregnet til. Producenten er ikke ansvarlig for skader, der opstår som følge af forkert brug eller håndtering.
- Anbring altid produktet på et tørt, plant og stabilt underlag på god afstand af bordkant eller lignende.
- Produktet er udelukkende beregnet til husholdningsbrug. Produktet må ikke anvendes til erhvervsbrug.
- Produktet må kun sluttes til 220-240V / 50-60Hz.
- Produktets motordel/elektronik, ledning og stikket må ikke nedsænkes i vand, og der må ikke trænge vand i motordel/elektronik.
- Rør aldrig ved produktet, ledningen eller stikkontakten med våde eller fugtige hænder.
- Udsæt ikke produktet for direkte sollys, høje temperaturer, fugt, støv eller ætsende stoffer.
- Forlad aldrig produktet, når det er tændt.
- Når produktet er i brug, bør det holdes under konstant opsyn.
- Når produktet bruges skal børn der opholder sig i nærheden af

den altid holdes under opsyn.

- Børn må ikke lege med produktet.
- Produktet kan indeholde skarpe dele og bør derfor opbevares utilgængeligt for børn.
- Brug kun tilbehør, der følger med produktet eller er anbefalet af producenten.
- Produktet må ikke bruges af personer med nedsat følsomhed, fysiske eller mentale handicap, eller personer, som ikke er i stand til at betjene produktet, medmindre de overvåges eller instrueres i brugen af en person, som er ansvarlig for deres sikkerhed.

LEDNING OG STIK

- Lad ikke ledningen hænge ud over bordkanten.
- Hold ledningen og produktet væk fra varmekilder, varme genstande og åben ild.
- Tag stikket ud af stikkontakten før rengøring, og hvis produktet ikke er i brug. Undlad at trække i ledningen, når du tager stikket ud af stikkontakten, men tag fat om selve stikket.
- Sørg for, at ledningen er rullet helt ud.
- Kontrollér jævnligt, om ledningen eller stikket er beskadiget, og brug ikke produktet, hvis dette er tilfældet, eller hvis det har været tabt på gulvet, tabt i vand eller er blevet beskadiget på en anden måde.
- Hvis produktet, ledningen eller stikket er beskadiget, skal produktet efterses og om nødvendigt repareres af en autoriseret reparatør. Forsøg aldrig at reparere produktet selv. Kontakt købsstedet, hvis der er tale om en reparation, der falder ind under reklamationsretten. Hvis der foretages uautoriserede indgreb i produktet, bortfalder reklamationsretten.

REKLAMATIONSRETEN GÆLDER IKKE:

- Hvis ovennævnte ikke iagttages.
- Hvis der har været foretaget uautoriserede indgreb i produktet.
- Hvis produktet har været misligholdt, udsat for en voldsom behandling eller lidt anden form for overlast.

BORTSKAFFELSE AF PRODUKTET

Brugte produkter må ikke smides i husholdningsaffaldet. Iht. lovforskrifterne skal det udtjente produkt bortskaffes på ordentlig vis. Derved genanvendes de brugbare materialer, og miljøet skånes. Nærmere informationer fås hos den ansvarlige kommunale myndighed eller det lokale bortskaffelsesfirma. Produktet er forsynet med følgende logo:

 


VIGTIGE MEDDELELSER

Følg altid grundlæggende sikkerhedsforholdsregler for at reducere faren for brand, elektrisk stød og/eller personskaade, når du bruger elektriske apparater, herunder:

1. Læs alle anvisninger, før du bruger ismaskinen.
2. Fjern al emballagen, og tjek omhyggeligt din ismaskine for at sikre, at den er i god stand, og at den samt ledningen og stikket ikke er beskadiget.
3. Vent to timer efter placeringen af ismaskinen, før du bruger den første gang, og lad det gennemsigtige låg stå åbent i mindst to timer.
4. Der må ikke bruges destilleret vand i apparatet. Kildevand anbefales.
5. Kontrollér, at spændingen svarer til spændingsintervallet angivet på typepladen, og kontrollér, at jordforbindelsen i stikkontakten er i god stand.
6. Hvis ledningen er defekt, skal den udskiftes af producenten eller dennes servicetekniker eller en tilsvarende kvalificeret person, så der ikke opstår farlige situationer.
7. Vend ikke apparatet på hovedet, og stil det ikke i en vinkel på over 45°.
8. Hæld ikke vand på ledningen, stikket og ventilationsåbninger, og sænk ikke apparatet ned i vand eller andre væsker. Der er fare for elektrisk stød.
9. Træk ledningen til apparatet ud af stikkontakten efter brug og før rengøring.
10. Placer apparatet i en afstand af 8 cm fra andre genstande for at sikre en god varmeafledning.
11. Brug ikke tilbehør, der ikke anbefales af producenten.
12. Apparatet må bruges af børn på 8 år eller derover og personer med reducerede fysiske, sensoriske eller mentale evner, eller som mangler erfaring og viden, hvis de er under opsyn eller har modtaget instruktion i sikker brug af apparatet og forstår de involverede farer. Børn må ikke lege med apparatet. Børn må kun udføre rengøring og brugervedligeholdelse under opsyn.
13. Brug ikke apparatet i nærheden af åben ild, varmeplader eller komfurer.
14. Tænd ikke strømmen for ofte (hold en pause på mindst fem minutter) for at undgå at beskadige kompressoren.
15. Stik ikke metalplader eller elektriske genstande ind i apparatet for at undgå brand og kortslutning.
16. Må ikke bruges udendørs.
17. Brug aldrig skurepulver eller hårde redskaber til rengøring.
18. Gem brugsanvisningen til senere brug.
19. Advarsel: Opbevar ikke eksplosive materialer som fx aerosolbeholdere med brændbar drivgas i apparatet.
20. Apparatet er beregnet til brug i en husholdning.
21. Kontrollér, at ledningen ikke sidder i klemme eller er beskadiget, når du placerer apparatet.
22. Placer ikke stikdåser med flere stik eller bærbar strømforsyninger bag apparatet.

BESKRIVELSE

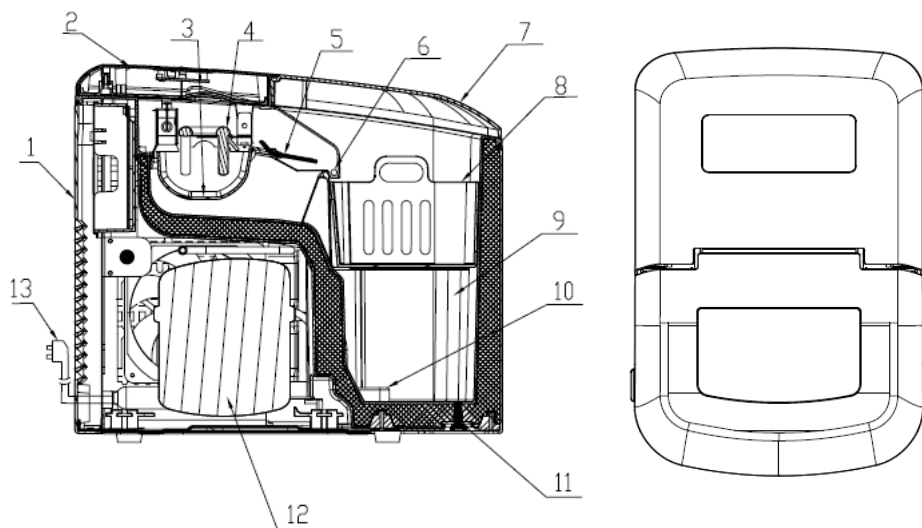

- | | |
|---|-----------------------|
| 1. Bagkabinet | 9. Vandbeholder |
| 2. Bagerste metaldæksel | 10. Filterskærm |
| 3. Vandbakke | 11. Afløbsprop |
| 4. Fordamper | 12. Kompressor |
| 5. Isskovl | 13. Ledning |
| 6. Sensor til fuld beholder til isterninger | 14. Touchpanel |
| 7. Forreste metaldæksel | 15. Gennemsigtigt låg |
| 8. Opsamlingsbakke til isterninger | |

FUNKTION

- Hurtig frysning af isterninger
- To forskellige størrelser af isterninger
- Besked, når beholderen til isterninger er fuld, og der ikke er tilstrækkeligt vand
- Kugleformede isterninger
- Der kan laves 10 isterninger på ni minutter
- Touchkontrolpanel
- Timer og forudindstilling

 
ADVARSEL

1. Stil ikke apparatet i en vinkel på mere end 45 grader under transport. Vend ikke maskinen på hovedet. Det kan beskadige kompressoren og forseglingerne.
2. Fjern al emballagen. Tjek apparatet omhyggeligt, og kontrollér, at apparatet samt ledning og stik er i god stand.
3. Apparatet skal stå på en plan overflade. Afstanden fra bagsiden af ismaskinen til

væggen skal være mindst 150 mm for at sikre tilstrækkelig ventilation. Hold apparatet væk fra ovne, radiatorer og andre varmekilder.

4. Lad apparatet stå med åbent topdæksel i mindst to timer, før du bruger apparatet første gang.
5. Kontrollér, at spændingen i elnettet svarer til spændingen på apparatets typeplade.
6. Det må ikke bruges destilleret vand. Kildevand anbefales.
7. Små isterninger anbefales, når temperaturen indendørs er under 15 °C. Store isterninger anbefales, når temperaturen indendørs er over 30 °C.

BETJENING AF KONTROLPANEL

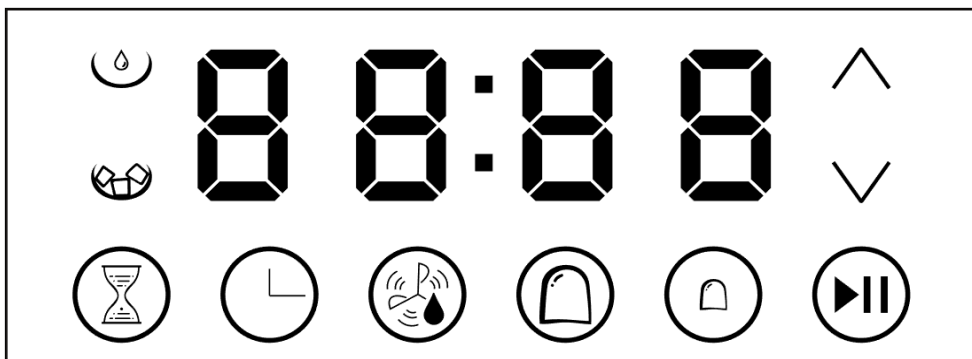

 
IKON

		Viser den samlede tid for frysning af isterninger. Timer vises først og minutter sidst. Lyser hvidt
	_____	Status for vandbeholder. Vises ikke normalt. Lyser rødt, når der mangler vand
	_____	Status for beholder til isterninger. Vises ikke normalt. Lyser rødt, når beholderen er fuld af isterninger
	_____	Rengøringsprogram. Lyser blå under brug, hvidt i standbytilstand og blinker blå i standbytilstand
	_____	Store isterninger. Lyser blå under brug, hvidt i standbytilstand og blinker blå i standbytilstand
	_____	Små isterninger. Lyser blå under brug, hvidt i standbytilstand og blinker blå i standbytilstand

	_____	Strøm. Lyser hvidt
	_____	Forudindstilling. Lyser blå under brug, hvidt i standbytilstand og blinker blå i standbytilstand
	_____	Timer. Lyser blå under brug, hvidt i standbytilstand og blinker blå i standbytilstand
	_____	Ekstra tid. Lyser hvidt under brug. Er slukket i standbytilstand
	_____	Termisk reduktion af tid. Lyser hvidt under brug. Er slukket i standbytilstand

1. Produktet er ikke tilsluttet strømforsyningen. Kontrolpanelet er slukket.


 
2. Tilslut strømmen. Ikonet for kontrolpanel  lyser i fem sekunder og slukkes derefter. Tryk på kontrolpanelet. Ikonet for kontrolpanel  lyser konstant hvidt. Tryk på ikonet for strøm , og kontrolpanelet lyser hvidt i tre sekunder. Apparatet går i standbytilstand. Ikonet for store isterninger  blinker blå på displayet i standbytilstand. Ikonet for rengøringsprogrammet  og ikonet for små isterninger  lyser hvidt. Ikonet for tid  lyser hvidt og viser 00:00. Ikonet for forudindstilling  lyser hvidt. Ikonet for timer  lyser hvidt. Ikonet for ekstra tid  og ikonet for termisk reduktion af tid  lyser hvidt. De øvrige funktioner vises ikke.

3.1 Tilstand for små isterninger: Tryk på ikonet for små isterninger , når apparatet går i standbytilstand. Ikonet for små isterninger  blinker blå. Tryk på ikonet for strøm . Ikonet for strøm  lyser hvidt. Ikonet for små lysterninger  lyser konstant blå. Apparatet starter og aktiverer tilstanden for små isterninger. Ikonet for tid  lyser hvidt og viser tiden 00:00. Tiden begynder at tælle. Når tiden  er øget fra 00:00 til 00:07, begynder isterningerne at afise. Når afisningen er afsluttet, og den næste portion isterninger er uden frysning, akkumuleres tiden .

 
3.2 Tilstand for store isterninger: Tilstanden for store isterninger er standardtilstanden, når apparatet går i standardtilstand. Ikonet for store isterninger  blinker blå. Tryk på ikonet for strøm . Ikonet for store isterninger  lyser konstant blå, og apparatet starter tilstanden for store isterninger. Ikonet for tid  lyser hvidt. Starttiden vises som 00:00. De øvrige angivelser for frysning af isterninger svarer til angivelserne for tilstanden for små isterninger.

3.3 Rengøringsprogram: Tryk på ikonet for rengøringsprogrammet , når apparatet går i standbytilstand. Ikonet for rengøringsprogrammet  blinker blå. Tryk på ikonet for strøm . Apparatet aktiverer rengøringsprogrammet. Nu lyser ikonet for rengøringsprogrammet

blåt. Ikonet for strøm  lyser hvidt, og ikonet for tid  lyser hvidt. Ikonet for tid  viser tiden, der nedtælles fra 05:00 til 00:00. Rengøringsprogrammet  er afsluttet. Apparatet bipper fem gange og kan betjenes.

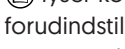3.4 Forudindstilling: Tryk på ikonet for forudindstilling , når apparatet går i standbytilstand, for at aktivere tilstanden for forudindstilling. Ikonet for forudindstilling blinker blåt. (Tryk igen på ikonet for forudindstilling  for at afslutte tilstanden for forudindstilling. Ikonet for forudindstilling  lyser hvidt). Store isterninger er standardtilstanden for frysning af isterninger. Ikonet for store isterninger  blinker blåt, og ikonet for ekstra tid  og ikonet for termisk reduktion af  tid lyser hvidt. Tryk på ikonet for ekstra tid , og forøg tiden med 30 minutter. Tryk på ikonet for termisk reduktion af tid , og reducer tiden med 30 minutter. Standardvisningen for ikonet  er 02:00 [2 timer]. Ikonet for tid  viser den indstillede tid. Tryk på ikonet for strøm . Ikonet for strøm  lyser konstant hvidt. Ikonet for store isterninger  lyser konstant blåt, og ikonet for forudindstilling  lyser konstant blåt. Når den forudindstillede tid er udløbet, viser ikonet for tid  00:00. Apparatet bipper fem gange og begynder at fryse isterninger, og ikonet for tid  registrerer tiden for frysning af isterningerne. Ikonet for store isterninger  lyser konstant blåt, og ikonet for forudindstilling  lyser konstant  hvidt, når frysningen af isterninger begynder.

Forudindstillet tilstand for små isterninger: Tryk på ikonet for forudindstilling  for at aktivere tilstanden for forudindstilling, når apparatet går i standbytilstand. Ikonet for forudindstilling  blinker blåt. Store isterninger er standardtilstanden for frysning af isterninger. Tryk på ikonet for små isterninger  for at aktivere den forudindstillede tilstand for små isterninger. Betjeningen er den samme som for den forudindstillede tilstand for store isterninger.

3.5 Timertilstand: Tryk på ikonet for timer , når apparatet går i standbytilstand, for at aktivere tilstanden for timer. Ikonet for timer  blinker rødt. (Tryk igen på ikonet for timer  for at afslutte tilstanden for timer. Ikonet for timer  lyser hvidt). Store isterninger er standardtilstanden for frysning af isterninger, og ikonet for store isterninger  blinker blåt. Ikonet for ekstra tid  og ikonet for termisk reduktionstid  lyser hvidt. Tryk på ikonet for ekstra tid  for at forøge tiden med 30 minutter. Tryk på ikonet for termisk reduktionstid  for at reducere tiden med 30 minutter. Standardvisningen for ikonet  er 01:00 [1 time]. Ikonet for tid  viser den indstillede tid. Tryk på ikonet for strøm . Ikonet for strøm  lyser konstant hvidt, og ikonet for store isterninger  lyser konstant blåt. Ikonet for timer  lyser konstant blåt. Frysningen af isterninger starter. Når den indstillede tid er udløbet, viser ikonet for tid  00:00. Apparatet bipper fem gange, holder op med at fryse isterninger og kan igen betjenes.

4. Timertilstand for små isterninger: Tryk på ikonet for timer , når apparatet går i standbytilstand, for at aktivere tilstanden for timer. Ikonet for timer  blinker blåt. Store isterninger er standardtilstanden for frysning af isterninger. Tryk på ikonet for små  isterninger for at aktivere timertilstanden for små isterninger. Betjeningen er den samme som for timertilstanden for store isterninger.

5. Timer for rengøringsprogram: Tryk på ikonet for timer  for at aktivere timertilstanden, når apparatet går i standbytilstand. Ikonet for timer  blinker blå. Store isterninger er standardtilstanden for frysning af isterninger. Tryk på ikonet for rengøringsprogrammet  for at aktivere timertilstanden for rengøringsprogrammet. Standardvisningen for ikonet

 er 03:00 [3 minutter]. Tryk på ikonet for ekstra tid  for at forøge tiden med 1 minut. Tryk på ikonet for termisk reduktionstid  for at reducere tiden med 1 minut. Ikonet for tid  viser den indstillede tid. Tryk på ikonet for strøm . Ikonet for strøm  lyser konstant hvidt. Ikonet for rengøringsprogrammet  lyser konstant blå, og ikonet for timer  lyser konstant blå. Rengøringsprogrammet starter. Når den indstillede tid er udløbet, viser ikonet for tid  00:00. Apparatet bipper fem gange, stopper rengøringsprogrammet og kan igen betjenes.

5.1 Status for isterninger: Ikonet for strøm  lyser konstant hvidt. Ikonet for store isterninger  lyser blå, eller ikonet for små isterninger  lyser blå.

5.2 Status for vandbeholder: Ikonet for vandbeholder  lyser konstant rødt, når der er for lidt vand på apparatet, og der lyder fem bip. Alle ikonerne        

lyser hvidt. Ikonet  lyser hvidt og viser 00:00.

5.3 Status for beholder til isterninger: Ikonet for alarm for fuld beholder til isterninger  lyser konstant rødt, når kapaciteten af beholderen til isterninger når det indstillede niveau. Apparatet bipper fem gange, og alle ikonerne          lyser hvidt. Tiden vises som 00:00.

6. Når du trykker på ikonet for strøm  i alle tilstande, sættes apparatet på pause. Ikonet for den oprindelige tilstand blinker blå. Nu kan du vælge alle tilstande, fra ikonet for store isterninger , ikonet for små isterninger , ikonet for rengøringsprogrammet , ikonet for timer  og ikonet for forudindstilling , eller du kan trykke igen på ikonet for strøm  for at vende tilbage til den oprindelige driftstilstand.

7. Ikonet for tid  viser E1:00, når der er fejl på motoren. Tryk på ikonet for strøm  for at fjerne fejlen.

8. Lydsignal: Der lyder et bip hver gang, du trykker på ikonerne        .

Der lyder fem bip ved alarm om manglende vand, fuld beholder til isterninger, afslutning af rengøringsprogram og udløb af timer.

9. Ikonet for strøm : Kan vælges i alle tilstande. Tryk på ikonet for strøm for at starte apparatet. Tryk på ikonet for strøm  i alle tilstande for at sætte apparatet på pause. Nu kan du vælge andre funktioner. Hvis du ikke udfører en handling inden for 10 minutter, lukker apparatet ned, og displayet bliver sort. Tryk på ikonet for strøm  i tre sekunder. Ikonet for strøm  vises, skærmen bliver sort, og apparatet lukker ned.

BRUGSANVISNING

Trin 1

Åbn låget, tag kurven ud, og hæld vand i beholderen.

Bemærk: Der er et maksimumsmærke, MAX, i beholderen. Vandet må ikke overstige MAX-mærket. Hvis vandet overstiger MAX-mærket, skal du åbne afløbsproppen i bunden, lukke det overskydende vand ud og lægge det gennemsigtige dæksel på igen.

Trin 2

Slut til strømforsyningen. Tryk på touchscreenen. Tænd/sluk-knappen lyser. Tryk på tænd/sluk-knappen for at aktivere standbytilstanden for apparatet.

Trin 3

Vælg størrelsen af isterninger, der skal fryses. Store isterninger er standard.



FORSIGTIG

1. Det anbefales at vælge små isterninger, når indendørstemperaturen er under 15 grader. Det anbefales at vælge store isterninger, når indendørstemperaturen er over 30 grader.
2. De første tre gange, du bruger maskinen, er isterningerne små og uregelmæssige.
3. Tag straks isterningerne ud, når opsamlingsbakken til isterninger er fuld. Undgå, at isterningerne løber ud over kanten af bakken.

RENGØRING OG PLEJE

1. Rengør de indvendige flader, opsamlingsbakken til isterninger, overløbsbeholderen, isskovlen og fordamperen hyppigt. Træk ledningen til apparatet ud af stikkontakten, og fjern isterningerne under rengøring af apparatet. Brug en opløsning af vand og eddike til rengøringen af indvendige og udvendige flader på ismaskinen. Sprøjt ikke kemikalier eller opløsningsmidler, som f.eks. syre, benzin og olie, på ismaskinen. Skyl grundigt, før apparatet bruges igen.
2. Hold ventilationsåbningerne på apparatet eller i indbygningselementet frie for forhindringer. Brug ikke mekaniske redskaber eller andre hjælpemidler til at fremskynde optøningen, medmindre de er anbefalet af producenten.
3. Når du skal bruge apparatet efter en længere periode uden brug, er der muligvis ikke tilstrækkeligt vand til at pumpe på grund af luft i systemet. Tryk i dette tilfælde på knappen **POWER** for at genstarte ismaskinen.
4. Skift vandet i vandbeholderen mindst en gang om dagen for at sikre, at isterningerne er rene. Hæld vandet ud, og rengør apparatet, hvis det ikke skal bruges i en længere periode.
5. Hvis kompressoren slukkes på grund af for lidt vand, for meget vand eller en strømafbrydelse, starter den først tre minutter efter genstart.
6. Brug altid frisk vand, før du starter frysning af isterninger ved første ibrugtagning eller efter en længere periode uden brug.

FEJLFINDING

1. Bemærk, at der kan dannes små isstykker, der blokerer den automatiske skovl, hvis strømmen afbrydes ved, at ledningen trækkes ud af stikkontakten, eller der trykkes på tænd/sluk-knappen under frysningen af isterninger. Du kan fjerne isstykkerne ved at trække ledningen ud af stikkontakten og forsigtigt skubbe skovlen mod bagsiden af

kabinettet. Genstart derefter apparatet. Kontrollér, om vandbeholderen er tom, når iskovlen ikke kan tømme kurven med is. Er dette ikke tilfældet skal du forsigtigt skubbe til iskovlen med en finger og trykke på knappen Power for at genstarte.

PROBLEM	MULIG ÅRSAG	FORESLÅET LØSNING
Kompressoren kører unormalt med en brummende lyd	Spændingen er lavere end den anbefalede spænding	Stop ismaskinen, og start den ikke igen, før spændingen er normal
Kontrollampen for manglende vand lyser	1. Vandbeholderen er tom 2. Pumpen er fuld af luft	1. Hæld vand på op til MAX-mærket 2. Tryk på knappen POWER for at genstarte apparatet
Kontrollamperne på displayet lyser ikke	Der er gået en sikring, eller der er ikke tændt for strømmen	Udskift sikringen. Tænd strømmen
Isternerne er for store, og de hænger sammen.	1. Der er valgt forkert størrelse på isternerne 2. Isterner fra tidligere frysninger af isterner efterladt i vandbakken	1. Vælg en mindre størrelse 2. Tag isternerne ud, når apparatet er i standbytilstand
Ismaskinen fungerede korrekt, men den lavede ingen isterner	1. Kompressoren mangler kølemiddel 2. Kompressoren er beskadiget 3. Blæsermotoren er beskadiget	Kontakt salgsstedet
Apparatet er fastlåst og virker ikke	1. Overløbsbeholderen er blokeret af isterner. 2. Motoren sidder fast, stopper eller er beskadiget 3. Mikrokontakten er beskadiget	1. Fjern isternerne under iskovlen, sæt ledningen i stikkontakten igen, og tryk på Power-knappen. Motoren genstarter automatisk efter tre minutter. 2. Kontakt salgsstedet
Apparatet kører, men vandet bliver varmt	Spolen er beskadiget	Udskift solenoidspolen
Apparatet viser ikke ikonet ice full, når beholderen til isterner er fuld	Sensoren til fuld beholder til isterner er beskadiget	1. Udskift sensoren til fuld beholder til isterner 2. Kontakt salgsstedet

ADVARSEL

1. Hvis ledningen er beskadiget, skal den udskiftes af producenten, dennes serviceagent eller en lignende kvalificeret person for at undgå fare.
2. Hæld kun drikkevand på ismaskinen.
3. Det er normalt, at overfladerne på kompressoren og kondensatoren opnår en temperatur på 70-90 °C under brug. Tilstødende områder kan være meget varme.
4. Isterningerne kan blive uigennemsigtige på grund af hurtig frysning. Det skyldes luft i vandet og påvirker ikke kvaliteten af isterningerne eller deres smag.
5. Apparatet er ikke beregnet til brug af personer, herunder børn, med nedsatte fysiske, sensoriske eller mentale evner, eller som mangler erfaring og viden, medmindre de er under opsyn eller instrueres i brugen af apparatet af en person, der er ansvarlig for deres sikkerhed.
6. Børn skal være under opsyn for at sikre, at de ikke leger med apparatet.
7. Sænk ikke apparatet ned i vand.

SPECIFIKATIONER

Artikelnr.: 10100956

Spænding: 220-240V / 50-60Hz

Effektforbrug: 120 Watt

Daglig kapacitet: 15 kg/24 timer

Rumindhold: 600 g

Rumindhold af vandbeholder: 2,1 l

Nettovægt: 9,3 kg

Bruttovægt: 10,5 kg

Isterningestørrelse: store og små

Afkøling med kompressor: 220-240V / 50-60Hz

Kølemiddel: Kølemiddel R600a, miljøvenligt

Maks. overordnede mål (B x D x H): 248,7 x 363,5 x 323 mm

Mål på pakke: 435 x 310 x 370 mm

INTRODUCTION

Thank you for choosing a product from Epiq. You have acquired a quality product which meets all applicable performance and safety standards in the EU. In order to ensure proper treatment and a long product life, we recommend that you comply with the instructions below.

Please read the manual and especially the safety instructions carefully before using the product. Keep this manual and provide it for referral along with the product when others are using it.

GENERAL SAFETY INSTRUCTIONS

- Improper use of the product can cause personal injury and damage.
- Only use the product for what it is intended. The manufacturer is not liable for damages arising from improper use or handling.
- Always place the product on a dry, flat and stable surface well away from table edge or similar.
- The product is intended for household use only. The product is not for professional use.
- The product may only be connected to 220-240V / 50-60Hz.
- The product engine/electronics, cord or plug cannot be submerged in water, and no water may get in contact with the engine/electronics.
- Never touch the product, cord or plug with wet or damp hands.
- Do not expose the product to direct sunlight, high temperatures, humidity, dust or corrosive substances.
- Never leave the product when it is turned on.
- When the product is in use, it should be kept under constant supervision. Children should always be supervised when using the product to ensure that they do not play with the product. The product is not a toy.
- The product may have sharp parts and must, therefore, be kept

out of reach of children.

- Only use the accessories that come with the product or that are recommended by the manufacturer.
- The product must not be used by people with reduced sensitivity, physical or mental disability, or people who are not able to operate the product unless they are supervised or instructed by a person responsible for their safety.

CORD AND PLUG

- Do not let the cord hang over the edge.
- Keep the cord and the product away from heat sources, hot objects and open flames.
- Unplug the power cord before cleaning and if the product is not in use. Do not pull the cord when removing the plug from the socket, rather grasp the plug itself.
- Make sure that the cord is fully extended.
- Check regularly that the cord and the plug are not damaged and do not use the product if this is the case, or if it has been dropped on the floor, dropped in water or damaged in another way.
- If the product or plug is damaged, the product must be inspected and, if necessary, repaired by an authorised repairer. Never try to repair the product yourself. Please, contact the store to see if there is a repair that falls under warranty. Tampering of the product will void the warranty.

RULES OF COMPLAINTS THE WARRANTY DOES NOT APPLY:

- If the above is not observed.
- If there has been unauthorised intervention of the product.
- If the product has been mishandled, subjected to rough treatment or some other form of damage.

PRODUCT DISPOSAL

Used product should not be disposed as household waste. According to legislation, the product should be disposed of

properly so that the materials can be recycled in an environmentally friendly manner. Further information is available from the responsible local authority or local disposal company. The product is equipped with the following logo:

 


IMPORTANT NOTICES

When using an electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

1. Read all instructions before using.
2. Remove all packing material and carefully check your ice maker to ensure it is in good condition and that there is no damage to the ice maker or power cord and plug.
3. Before using the Ice maker for the first time, please wait 2 hours after positioning it, and keep the transparent lid open for at least 2 hours.
4. Pure water is not allowed to be used on this unit, spring water is recommended.
5. Ensure the voltage is compliant with the voltage range stated on the rating label, and ensure the earthing of the socket is in good condition.
6. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
7. Do not upend this product or incline it over a 45°C angle.
8. To protect against risk of electric shock, do not pour water on cord, plug and ventilation, immerse the appliance in water or any other liquid.
9. Unplug the appliance after using or before cleaning.
10. Keep the appliance 8cm from other objects to ensure the good heat releasing.
11. Do not use the accessories which are not recommended by Manufacturer.
12. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
13. Do not use the appliance close by flames, hot plates or stoves.
14. Do not switch on the power button frequently (ensure 5min. interval at least) to avoid the damage of compressor.
15. Metal sheet or other electric objects are not allowed to be inserted into the appliance to avoid fire and short circuit.
16. Do not use outdoors.
17. Never clean with scouring powders or hard implements.
18. Please keep the instruction manual.
19. Warning: Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
20. This appliance is intended to be used in household.
21. When positioning the appliance, ensure the supply cord is not trapped or damaged.
22. Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

DESCRIPTION

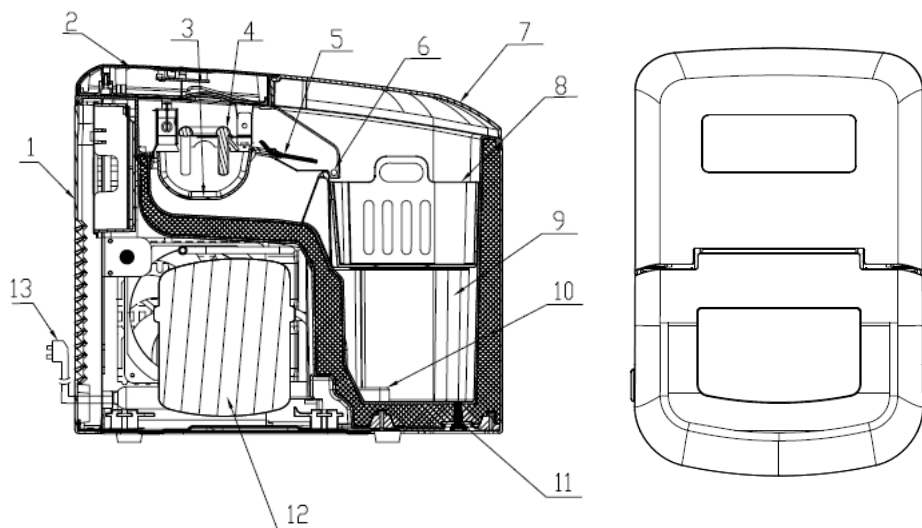

- | | |
|------------------------|---------------------|
| 1. Rear Housing | 9. Water Tank |
| 2. Rear Metal Cover | 10. Filter Screen |
| 3. Water Pan | 11. Drain Plug |
| 4. Evaporator | 12. Compressor |
| 5. Ice Shovel | 13. Power Cord |
| 6. Ice-Bin-Full Sensor | 14. Touch Panel |
| 7. Front Metal Cover | 15. Transparent Lid |
| 8. Ice Collecting Tray | |

FEATURE

- Quick ice making
- Two different sizes of ice can be made
- Prompt when the ice is full and water is insufficient
- Bullet ice
- 10 pcs ice can be made in nine minutes
- Touch screen control
- Timing function and preset function



 
WARNING

1. During transportation, do not tilt the machine more than 45 degrees, do not reverse the machine. This may damage the compressor and the sealing system.
2. Remove all packing materials, check the machine carefully and make sure that the machine, power cord and plug are normal.
3. The machine should be on a level surface. To ensure sufficient ventilation, the distance of the back of ice maker to the wall should be at least 150 mm, it should be away from

the oven, radiator or other heat source.

4. Before using the machine for the first time, place the machine and leave the transparent cover open for at least two hours.
5. Make sure that the home voltage is consistent with the voltage indicated by the machine.
6. Distilled water is not allowed. Mineral water is recommended.
7. When the indoor temperature is lower than 15 °C, small ice is recommended. When the indoor temperature is higher than 30 °C, large ice is recommended. skal være mindst 150 mm for at sikre tilstrækkelig ventilation. Hold apparatet væk fra ovne, radiatorer og andre varmekilder.

CONTROL PANEL OPERATION

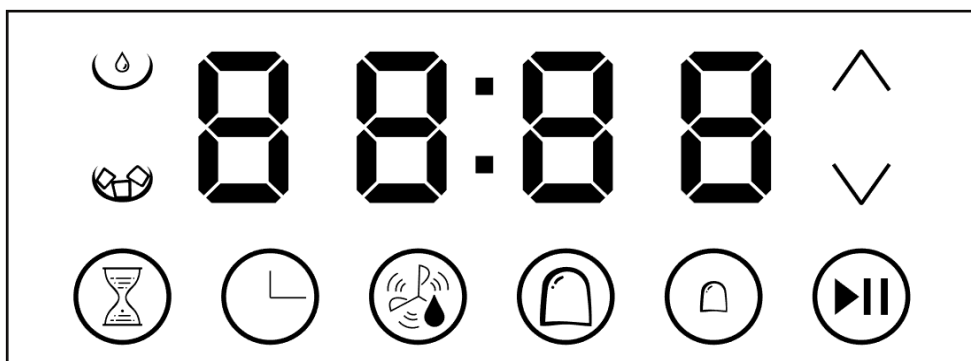

ICON NAME

		Indicates the total ice making time icon, hours ahead, minutes behind, white
	_____	Water shortage status icon, usually not displayed, red light when water shortage
	_____	The full ice icon is usually not displayed, and the red light is on when the ice is full
	_____	Cleaning function icon, blue light in working mode, white light in standby mode, blue light flashes in standby mode
	_____	Large ice function icon, blue light in working mode, white light in standby mode, blue light flashes in standby mode
	_____	Small ice function icon, blue light in working mode, white light in standby mode, blue light flashes in standby mode

	_____	Power icon, only white light on
	_____	Preset function icon, blue light in working mode, white light in standby mode, blue light flashes in standby mode
	_____	Timing function icon, blue light in working mode, white light in standby mode, blue light flashes in standby mode
	_____	Extra time icon, white light in working state and no display in standby state
	_____	Thermal reduction time icon, white light in working state and no display in standby state

1. The product is not connected to the power supply, and the control panel is in the blank screen state.

2. Plug in the power, the control panel lights up for 5 seconds, and then goes out. Touch the control panel, the control panel is always white, press the power icon , full screen of touch panel turns on white for 3 seconds, the machine will enter the standby mode. In standby mode, the large ice function icon on the display will flash blue, the cleaning function icon and the small ice function icon will turn on white, the time icon will turn on white and display 00:00, the preset function icon will turn on white, the timing function icon will turn on white, the extra time icon and the thermal reduction time icon will turn on white, and the other states will not be displayed.

3. Small ice mode: when the machine enters the standby mode, touch the small ice function icon once, the small ice function icon blue light flashes. To touch the power icon once, the power icon white light on, small ice function icon blue light always on, the machine enters the working mode, enter the small ice mode, the time icon white light on, display time is 00:00 and start timing. When the time increases from 00:00 to 00:07, the ice begins to de ice. When the deicing is finished and the next ice making cycle is started, the time is accumulated.

3.2 Large ice mode: when the machine enters the standby mode, the default mode is large ice, large ice function icon blue light flashes, touch the power icon once, large ice function icon blue light always on, the machine enters the working mode, enter large ice mode, time icon white light on, start display time is 00:00. Other indications of the ice making process are the same as that of the small ice mode.

3.3 Cleaning mode: when the machine enters the standby mode or other modes, touch

the cleaning function icon  once, and the blue light of the function icon  flashes. Touch the power icon  once, and the machine enters the cleaning mode. At this time, the blue light of the cleaning function icon  is on, the white light of the power icon  is on, and the white light of the time icon  **88:88** is on. The display time is the countdown of 05:00 when time icon  **88:88** turns to 00:00. The cleaning is finished, the buzzer beeps 5 times and the machine enters the selection state.

3.4 Preset mode: when the machine enters the standby mode, touch the preset function icon  once to enter the preset function mode, and the preset function icon  blue light flashes. [To touch the preset function icon  again to exit the preset mode, and the function icon  lights up in white]. The default ice mode is large ice, and the large ice function icon  blue light flashes, and the extra time icon  $\wedge$ and thermal reduction time icon  $\vee$ lights up in white. Touch the extra time icon  $\wedge$ once, increase the time by 30 minutes, touch the thermal reduction time icon  $\vee$ once, and reduce the time by 30 minutes. The  **88:88** default display is 02:00, and the time is 2 hours. After setting the time, the time icon  **88:88** displays the set time. Touch the power icon  once, the power icon  is always on white, the large ice function icon  is always on blue, and the preset function icon  is always on blue. When the preset time is up, the time icon  **88:88** will be displayed as 00:00, the buzzer beeps 5 times and the machine will start to make ice, the time icon  **88:88** will start to record the ice making time. The large ice function icon  will always be on blue light, and the preset function icon  will be on white light to enter the ice making process.

Preset small ice mode: when the product enters the standby mode, touch the preset function icon  once to enter the preset function mode. The preset function icon  flashes blue. The default ice mode is large ice. Touch the small ice function icon  once to enter the small ice preset mode. The operation is the same as large ice preset mode.

3.5 Timing mode: when the machine enters the standby mode, touch the timing function icon  once to enter the timing function mode, and the timing function icon  will flash blue. [Touch the timing function icon  again to exit the timing mode, and the timing function icon  will be on white light]. The default ice mode is large ice, and the large ice function icon  will flash blue light. The extra time icon  $\wedge$ and thermal reduction time icon  $\vee$ are on white light. Touch the extra time icon  $\wedge$ once and the time will increase by 30 minutes. Touch the thermal reduction time icon  $\vee$ once and the time will decrease by 30 minutes. The  **88:88** default display is 01:00 and the time is 1 hour. After setting the time, the time icon  **88:88** will display the set time. Touch the power supply icon  once and the power supply icon  will always be on white light and large ice function icon  always on blue light. The timing function icon  always on blue light, start ice making. When the set time is up, the time icon  **88:88** will be displayed as 00:00, the buzzer will sound 5 times, and the machine will stop making ice and enter the selection state.

4. Timing small ice mode: when the machine enters the standby mode, touch the timing function icon  to enter the timing function mode and the timing function icon  flashes

blue. The default ice mode is large ice. Touch the small ice function icon  once to enter the small ice timing mode. The operation is the same as the large ice timing mode.

5. Timing cleaning function: when the machine enters the standby mode, touch the timing function icon  to enter the timing function mode. The timing function icon  flashes blue. The default ice mode is large ice. Touch the cleaning function icon  to enter the timing cleaning mode. The **88:88** default display is 03:00, and the time is 3 minutes. Touch the extra time icon  once, and the time increases by 1 minute. Touch the thermal reduction time icon  once, the time is reduced by 1 minute. After setting the time, the time icon **88:88** displays the set time. Touch the power icon  once, the power icon  is always on white light, the cleaning function icon  is always on blue light, and the timing function icon  is always on blue light to start cleaning. When the set time is up, the time icon **88:88** will be displayed as 00:00, the buzzer will sound 5 times, and the machine will stop cleaning and enter the selection state.

5.1 Ice making status: when the machine is in ice making status, the power icon  white light is always on, the large ice function icon  blue light on or the small ice function icon  blue light on.

5.2 Water shortage status: when the machine is in water shortage status, the icon of water shortage status  is always on red light, and the buzzer sounds 5 times, all of which         are on white light, and the **88:88** on white light and shows 00:00.

5.3 Full ice state: when the ice storage capacity of the product reaches the set value, the full ice alarm icon  is always on red light, the buzzer sounds 5 times, all of which are         **88:88** on white light and shows 00:00.

6. In all States, touch the power icon  once, and the product will enter the pause state. The icon in the original state will be on and the blue light will flash. At this time, you can select any mode from the large ice , small ice , self-cleaning icon , timing function icon  and preset function icon , or touch the power icon  once again to restore the original working state.

7. When the motor fails, the time icon **88:88** shows E1:00, and press the power icon to remove the fault.

8. Buzzer: every time you touch         these icons, the buzzer will sound once. In case of water shortage alarm, ice full alarm, cleaning completion, preset time completion and timing completion, the buzzer will sound 5 times.

9. Power icon : in all modes to be selected, touch the power icon once to enter the working state. In all working modes, touch the power icon  once to enter the pause state. At this time, you can select other functions. If you do not carry out the next operation for more than 10 minutes, you will shut down, the screen will be black. Long press the power icon  for 3 seconds, only the power icon  will be displayed, the screen will be black and shutdown.

OPERATING INSTRUCTIONS

Step 1

Open the lid and take out the basket and add water to the reservoir.

Note: There is a maximum scale MAX in the reservoir. The water should not exceed the MAX position. If the water exceeds the maximum scale MAX, you need to open the bottom drain plug, release the excess water, and cover with a transparent cover.

Step 2

Plug in the power, touch the touch screen, the power button lights up, touch the power button, the machine enters the standby mode.

Step 3

Select the size of the ice you want to make, the default is large ice.



CAUTION

1. When the indoor temperature is lower than 15 degrees, please choose small ice. When the indoor temperature is higher than 30 degrees, it is recommended to choose large ice.
2. The three cycles used for the first time, the ice produced is small and irregular.
3. When the ice collecting tray is full, please take out the ice immediately, do not let the ice overflow the ice collecting tray.

CLEANING & USE GUIDANCE

1. Clean the inner liner, ice collecting tray, water box, ice shovel and evaporator frequently. When cleaning, unplug the unit and remove the ice cubes. Use a diluted solution of water and vinegar to clean the inside and the outside surface of the Ice maker. Do not spray Ice maker with chemicals or diluted agents such as acids, gasoline or oil. Rinse thoroughly before starting.
2. Keep ventilation openings in the appliance enclosure, or in the built-in structure, clear of obstruction. Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
3. Reuse the machine after being idled for a period of time, it may not have enough water to pump for air retard, in this case, repress **POWER** button to restart the ice maker is okay.
4. To ensure the cleanness of ice, please change water for water reservoir at least once one day. If do not use for a long time, please drain the water out and clean it up.
5. If the compressor takes a strike action for shortage water, fully water or interruption of power supply, it will delay for 3 minutes to start up after restarted.
6. Always use fresh water before starting ice production either at initial installation or after a long shut-off period.

TROUBLESHOOTING

1. Please note, if a power failure occurs due to disconnection of the power cord, or the power button has been pushed off during an ice making cycle, small ice chips may form and lodge in the automatic shovel causing it to jam. If this occurs, the ice chips

may be removed by disconnecting the power cord and gently pushing the shovel to the rear of the cabinet and removing the ice chips, then restarting.

2. Please check if the water reservoir is flat when the ice shovel cannot remove the ice to ice basket. If not, please push the ice shovel gently by finger, then press **Power** button to restart.

PROBLEM	POSSIBLE CAUSE	SUGGESTED SOLUTIONS
The compressor works abnormally with a buzzing noise	The voltage is lower than recommended	Stop the Ice maker and do not restart until the voltage is normal.
Water shortage indicator light is on	1. There is no water 2. The pump is full of air	1. Add to some water until it reaches MAX position 2. Press POWER button to restart
Indicator lights on display are not on	Blown fuse/ No power	Replace fuse / Turn power on
The ice made is too large and with pieces sticking together.	1. Wrong ice size selected 2. Ice of previous cycles left in the water tray	1. Select small size 2. Take out the ice under the standby state
The ice making process was correct, but no ice came out?	1. The compressor has no refrigerant 2. Compressor damaged 3. Fan motor damaged	Contact the place of purchase.
Machine stuck and not working	1. The water box is blocked by ice. 2. The motor is stuck, or the motor falls off, or the motor is damaged 3. Micro switch damaged	1. Take out the ice under the ice shovel, plug in the power again, and press the Power button. After 3 minutes, the machine will restart automatically. 2. Contact the place of purchase.
The machine has been working, but the water has been warming	Solenoid broke down	Replace the solenoid valve
When the ice is full, the machine does not display the ice full icon	Ice full sensor damaged	1. Replace the ice full sensor 2. Contact the place of purchase.

WARNING

1. If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person to avoid a hazard.
2. Fill with potable water only.
3. It is normal for the compressor and condenser surface to reach temperatures between 70°C and 90°C during operation and surrounding areas may be very hot.
4. Due to fast freezing, ice cubes may opaque. This is air trapped in the water and will not affect quality or taste of ice.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Children should be supervised to ensure that they do not play with the appliance.
7. Do not immerse in water.

SPECIFICATIONS

Article No.: 10100956

Voltage: 220-240V / 50-60Hz

Power Consumption: 120 Watt

Daily Ice Output: 15kg/24 hours

Ice Storage Capacity: 600g

Water Reservoir Capacity: 2.1 L

N.W: 9.3kg

G.W: 10.5kg

Ice making mode: large and small

Compression-type refrigeration: 220-240V / 50-60Hz

Cooling agent: R600a environmental friendly refrigerant

Max overall dimensions (W X D X H): 248.7X 363.5X323mm

Packing Dimensions: 435X 310X 370mm