

HAIR CLIPPER

WAHL

Models: 5598

When using your electrical appliance, basic precautions should always be followed, including the points listed below. Read the manual before using.

Manufacturer: Wahl Clipper Corporation

Add: 2900 North Locust Street, Sterling, Illinois 61081, United States of America

DANGER

To reduce the risk of electric shock:

1. Do not use while bathing or in a shower.
2. The appliance is not suitable for cleaning under an open water tap except the detachable blade part or comb guide.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
4. Except when charging, always unplug this appliance from the electrical outlet immediately after using and charging.
5. Unplug this appliance before cleaning.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

1. Close supervision is necessary when this appliance is used by, on or near children or invalids.
2. Use this appliance only for its intended use, as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Never drop or insert any object into any opening on this appliance.
4. Battery may be self-discharging. Charge the clipper before using it for the first time or when it has not been in use for long-term putting in place, the inner blade has the possibility of no operating or rotating power.
5. Do not charge the clipper where the room temperature is below 0°C or above 40°C, the rate of charge for battery may be lowered, and it can effect on the battery's life.
6. Do not put in place or charge the clipper where it will be the near of a heat source or exposed to direct sunlight.
7. When charging, push down switch, otherwise appliance can not be charged.
8. To avoid damage to skin, extra care should be taken when using the clipper without the comb guide. If the comb guide become damaged or broken, cease use immediately and replace, further use could result in cut or scratched skin.

9. WARNING: Keep the appliance dry.
10. Warning: only use the attached adaptor.
11. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction
12. Children being supervised not to play with the appliance
13. The battery must be removed from the appliance before it is scrapped.
14. The battery is to be disposed of safely.
15. Keep the appliance dry
16. The appliance must be disconnected from the supply when removing the battery.

1. Charge the shaver where the temperature is above 0°C and below 40°C.
2. Avoid charging the clipper too long time since it will shorten the product life.
3. Connect the power cord to the clipper, and plug the other end to an AC outlet.
4. This appliance may be normal used under 50Hz or 60Hz power supply input, no adjusted need to do

Operating the clipper

Fit comb guide if required. Push the switch (1) position. When finished clipping, always turn the clipper off.

Comb guide

Press palm of hand against the blade guard and push comb onto the blade. Precaution should be taken when pressing palm of hand against comb. This comb guide cutting lengths between 20mm and 40mm.

Cleaning the unit

Clean the hair clippers from the blades using the cleaning brush supplied. Wipe the unit with a clean, dry cloth.

Maintenance

Oil the stainless steel blade after each use to maintain cutting performance.

Storage

Always unplug when not in use. Do not wrap the cord around the clipper as this may cause the cord to wear prematurely and break. Always store the unit in a dry location.

Hair trimming tip

1. To start the hair trim, comb the hair so it falls in its natural direction, the way the person has been wearing it.
2. Attach the comb guide onto your clipper, and begin the haircut by trimming the sides of the

head. Don't necessarily follow the contour of the head.

3. Hold the clipper firmly against the scalp, and clip in a straight upward direction. You will find the hair actually feeding into the clipper by gravity.
4. Continue trimming around to the back of the head, and then to the other side.
5. Now, comb out any loose hair. This will reveal any possible uneven spots that might need further trimming.
6. It's now time to trim the top. First, make certain the hair is in its proper place. Comb the hair forward over the eyes. Then, standing behind the person being trimmed, lift a small section at a time of the front hair, and grasp between two fingers. The amount of hair you wish to clip should extend beyond your fingers. You can trim the top hair using comb guide or not.
7. Continue this procedure, working from the front to the back of the head. As you work to the back, you can gradually cut hair shorter (if so desired) by reducing the space between fingers and head.
8. To give a smooth, well-groomed line at edge of hair, trim hairline by holding clipper over ears with lower edge against hairline. Be sure upper edge is tipped far enough away from head to avoid cutting ears. Slowly and carefully follow outline of hair over and behind ears and down side of neck.
9. Last, comb hair again, then trim the front hairline, and give the entire job a final inspection for any uneven spots.

Specification

5598: 2,4VDC

Adaptor input (ZDJ024070EU and ZDJ024070BS):

Input: 100-240V~, 50/60Hz, 0,2A, Class II; Output: 2,4Vdc, 700mA

Environment

Take your cordless appliance at the end of the long lifetime is not easy in the garbage, but disposed of it in an environmentally friendly way.



Ni-MH

Batteries

Discarded batteries are environmentally friendly and disposed of in accordance with applicable regulations.

♣ discharge the battery by running the appliance to stop the engine at idle.

♣ Remove the battery from the appliance.

♣ Dispose of the battery to a collection of chemical waste from.

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Warranty Information

The manufacturer provides warranty in accordance with the legislation of the customer's own country of residence, with a minimum of 1 year (Germany: 2 years), starting from the date on which the appliance is sold to the end user.

The warranty only covers defects in material or workmanship.

The repairs under warranty may only be carried out by an authorized service centre. When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted.

The warranty will not apply in cases of:

- Normal wear and tear
- Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
- Use of force, damage caused by external influences
- Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions
- Partially or completely dismantled appliances

HAIR CLIPPER

WAHL

Models: 9918, 9953, 9855

When using your electrical appliance, basic precautions should always be followed, including the points listed below. Read the manual before using.

Manufacturer: Wahl Clipper Corporation

Add: 2900 North Locust Street, Sterling, Illinois 61081, United States of America

DANGER

To reduce the risk of electric shock:

1. Do not use while bathing or in a shower.
2. The appliance is not suitable for cleaning under an open water tap except the detachable blade part or comb guide.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
4. Except when charging, always unplug this appliance from the electrical outlet immediately after using and charging.
5. Unplug this appliance before cleaning.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

1. Close supervision is necessary when this appliance is used by, on or near children or invalids.
2. Use this appliance only for its intended use, as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Never drop or insert any object into any opening on this appliance.
4. Battery may be self-discharging. Charge the clipper before using it for the first time or when it has not been in use for long-term putting in place, the inner blade has the possibility of no operating or rotating power.
5. Do not charge the clipper where the room temperature is below 0°C or above 40°C, the rate of charge for battery may be lowered, and it can effect on the battery's life.
6. Do not put in place or charge the clipper where it will be the near of a heat source or exposed to direct sunlight.
7. When charging, push down switch, otherwise appliance can not be charged.
8. To avoid damage to skin, extra care should be taken when using the clipper without the comb guide. If the comb guide become damaged or broken, cease use immediately and replace, further use could result in cut or scratched skin.

9. WARNING: Keep the appliance dry.
10. Warning: only use the attached adaptor.
11. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction
12. Children being supervised not to play with the appliance
13. The battery must be removed from the appliance before it is scrapped.
14. The battery is to be disposed of safely.
15. Keep the appliance dry
16. The appliance must be disconnected from the supply when removing the battery.

9918, 9953, 9855

1. Charge the shaver where the temperature is above 0°C and below 40°C.
2. Avoid charging the clipper too long time since it will shorten the product life.
3. Connect the power cord to the clipper, and plug the other end to an AC outlet.
4. This appliance may be normal used under 50Hz or 60Hz power supply input, no adjusted need to do

Operating the clipper

Fit comb guide if required. Push the switch (1) position. When finished clipping, always turn the clipper off.

Comb guide

Press palm of hand against the blade guard and push comb onto the blade. Precaution should be taken when pressing palm of hand against comb. This comb guide cutting lengths between 20mm and 40mm.

Cleaning the unit

Clean the hair clippers from the blades using the cleaning brush supplied. Wipe the unit with a clean, dry cloth.

Maintenance

Oil the stainless steel blade after each use to maintain cutting performance.

Storage

Always unplug when not in use. Do not wrap the cord around the clipper as this may cause the cord to wear prematurely and break. Always store the unit in a dry location.

Hair trimming tip

1. To start the hair trim, comb the hair so it falls in its natural direction, the way the person has been wearing it.

2. Attach the comb guide onto your clipper, and begin the haircut by trimming the sides of the head. Don't necessarily follow the contour of the head.
3. Hold the clipper firmly against the scalp, and clip in a straight upward direction. You will find the hair actually feeding into the clipper by gravity.
4. Continue trimming around to the back of the head, and then to the other side.
5. Now, comb out any loose hair. This will reveal any possible uneven spots that might need further trimming.
6. It's now time to trim the top. First, make certain the hair is in its proper place. Comb the hair forward over the eyes. Then, standing behind the person being trimmed, lift a small section at a time of the front hair, and grasp between two fingers. The amount of hair you wish to clip should extend beyond your fingers. You can trim the top hair using comb guide or not.
7. Continue this procedure, working from the front to the back of the head. As you work to the back, you can gradually cut hair shorter (if so desired) by reducing the space between fingers and head.
8. To give a smooth, well-groomed line at edge of hair, trim hairline by holding clipper over ears with lower edge against hairline. Be sure upper edge is tipped far enough away from head to avoid cutting ears. Slowly and carefully follow outline of hair over and behind ears and down side of neck.
9. Last, comb hair again, then trim the front hairline, and give the entire job a final inspection for any uneven spots.

Specification

9918: 3,5VDC

Adaptor (ZDJ035020EU and ZDJ035020BS):

Input: 100-240V, 50/60Hz, 0,2A, Class II; Output: 3,5Vdc, 200mA

9953, 9855: 2,4VDC

Adaptor input (ZDJ024070EU and ZDJ024070BS):

Input: 100-240V~, 50/60Hz, 0,2A, Class II; Output: 2,4Vdc, 700mA

Environment

Take your cordless appliance at the end of the long lifetime is not easy in the garbage, but disposed of it in an environmentally friendly way.



Ni-MH

- Batteries
- Discarded batteries are environmentally friendly and disposed of in accordance with applicable regulations.
- ♣ discharge the battery by running the appliance to stop the engine at idle.
 - ♣ Remove the battery from the appliance.
 - ♣ Dispose of the battery to a collection of chemical waste from.

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Warranty Information

The manufacturer provides warranty in accordance with the legislation of the customer's own country of residence, with a minimum of 1 year (Germany: 2 years), starting from the date on which the appliance is sold to the end user.

The warranty only covers defects in material or workmanship.

The repairs under warranty may only be carried out by an authorized service centre. When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted.

The warranty will not apply in cases of:

- Normal wear and tear
- Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
- Use of force, damage caused by external influences
- Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions
- Partially or completely dismantled appliances