


# Energizer®

## UE27062PQ

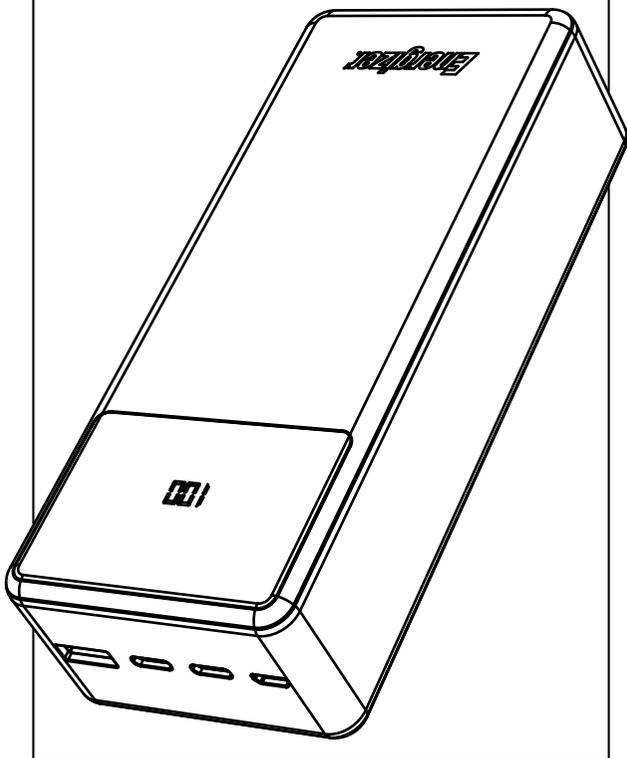

EN

### Specification :

Model Name : UE27062PQ

Cell Type : Lithium Polymer

Battery Capacity : 27000mAh/99.9Wh(Max.)

Rated Input : USB-C PD 5V/3A, 9V/3A, 12V/3A, 15V/3A, 20V/3A

Rated Input : Micro USB 5V/2A, 9V/2A

Rated Output 1 : USB-C1 PD 5V/3A, 9V/3A, 12V/3A, 15V/3A, 20V/3.25A

Rated Output 2 : USB-C2 PD 5V/3A, 9V/2A

Rated Output 3 : USB-A 5V/3A, 9V/2A

Total Output : 65W(Max.)


Dimensions : 151(L) x64(W) x38(H) mm

Weight : 523g ± 10g


### Package Contents



② User Manual

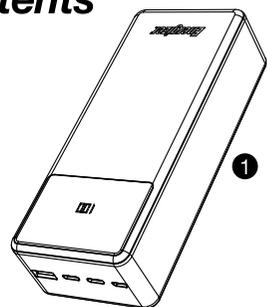

① UE27062PQ

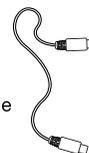

③ Charging Cable

### Safety Instruction

- Avoid water, heat, fire, penetration of the battery, and severe drops at all times.
- Do not insert other objects into the USB ports other than the USB connectors.
- Once the product is fully charged, your power pack automatically shuts off to save power.
- During charge & recharge, battery may feel slightly warm.
- Do not clean the battery with water or other cleaning products, clean the exterior with a lightly wetted cloth or napkin.
- Normally the battery performance will decline after 2 years
- Any intentional and physical damage to the battery will not be under the warranty conditions.
- Battery storage temperature is between -10°C~+60°C , operating temperature is 0°C~45°C.
- Fully charge the battery before first use to maximize the battery life.



#### PowerSafe Management

Guarantees against short circuit and over-charging for your power bank and devices.



#### Customer Service



For any question about the product, please contact us at [service@energizerpowerbanks.com](mailto:service@energizerpowerbanks.com)



©2024 Energizer. Energizer, Energizer Character and certain graphic designs are trademarks of Energizer Brands, LLC and related subsidiaries and are used under license by TennRich International Corp..

Dispose the battery properly, seek for local disposal facility for advice. Do not dispose, disassemble, damage, or incinerate the battery at all time.

# How to USE

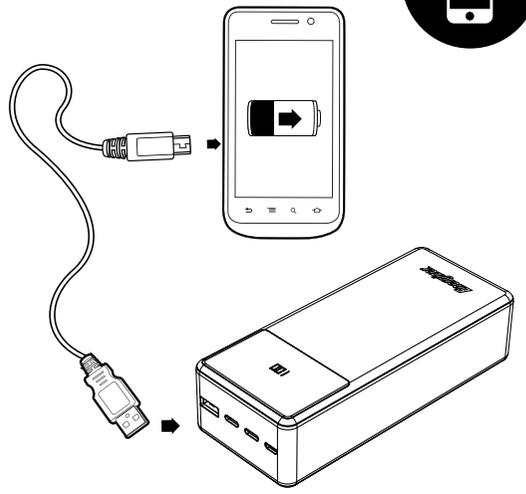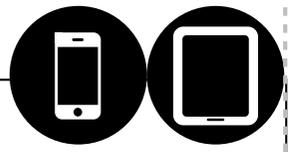


Press the power button to activate charging on your device



Recharge Mode  
Blinking light indicates recharging.  
Solid light indicates fully charged.

When the fast-charging icon ⚡ indicates, fast charge or fast recharge is activated.

# How to Recharge

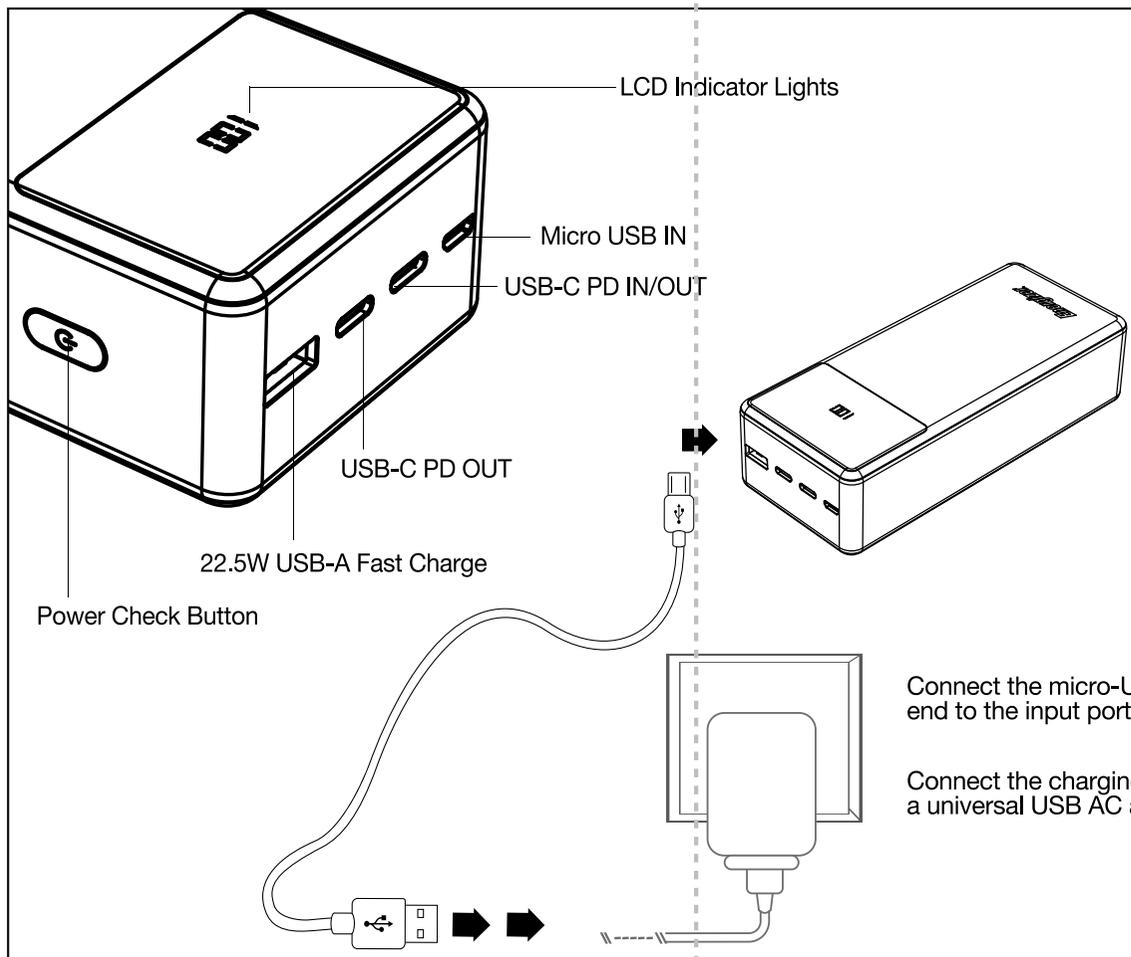

Connect the micro-USB/USB-C end to the input port to recharge  
Connect the charging cable to a universal USB AC adapter.

Adapter NOT included