




 




 


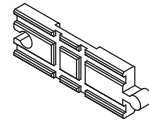


 





 Ax12	 Bx4	 Cx1
 Dx1	 Ex2	 Fx1
 Gx1	 Hx1	 Ix1
 Jx2	 Kx1	 Lx1
 Mx1	 Nx1	 Ox1
 Px1	 Qx1	 Rx1
 Sx1	 Tx1	 Ux1
 Vx1	 Wx1	

- ⒸB Surface clean with dry cloth.
- ⒹK Rengør overfladen med en tør klud.
- ⒺE Rengör ytan med en torr trasa.
- ⒻI Puhdistä pinta kuivalla liinalla.
- ⒼE Puhastage pind kuiva lapiga.
- ⒼV Tīriet virsmu ar sausu drānu.
- ⒼT Nuvalykite paviršius sausa šluoste.