



6+

Instruction




Robot Dog



BATTERY INFORMATION

- 1) Requires 2 AA batteries. Not included.
- 2) Batteries should only be replaced by an adult.
- 3) Do not mix old and new batteries.
- 4) Do not mix alkaline, standard or rechargeable batteries.
- 5) Do not re-charge non-rechargeable batteries.
- 6) Rechargeable batteries are only to be charged under adult supervision.
- 7) Rechargeable batteries are to be removed from the product before being charged.
- 8) Ensure batteries are inserted with the correct polarity.
- 9) Exhausted batteries should always be removed.
- 10) The terminals should not be short circuited.

DOG

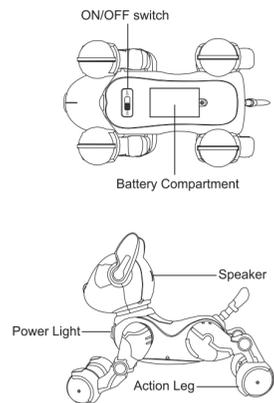


- EN1 -

REMOTE CONTROL




INSERTING BATTERIES

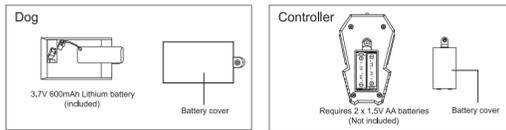

LITHIUM BATTERY CHARGE INSTRUCTIONS

 - Charging time: about 60-80 minutes.
- Playing time: about 60 minutes.
- The LED will light up when charging and it will turn off when charging is completed.
- Additional safety information: Do not overcharge the battery. Do not charge the battery right after using the dog. Let the battery cool down for at least 30 minutes. Do not put the battery into a fire, a microwave, an oven, or a pressure tank: it can cause the battery to explode.



- EN2 -



6+

Instruktion




Robot Dog



BATTERI INFORMATION

- 1) Kræver 2 AA-batterier. Medfølger ikke.
- 2) Batterierne bør kun udskiftes af en voksen.
- 3) Bland ikke gamle og nye batterier.
- 4) Bland ikke alkaliske, standard eller genopladelige batterier
- 5) Prøv ikke at genoplade batterier, som ikke er genopladelige.
- 6) Genopladelige batterier bør kun oplades under voksenopsyn.
- 7) Genopladelige batterier skal tages ud af produktet, før de oplades.
- 8) Sørg for, at batterierne indsættes med korrekt polaritet.
- 9) Udtjente batterier bør altid fjernes.
- 10) Terminalerne må ikke kortsluttes.

HUND

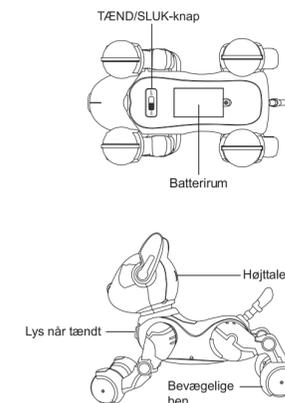


- DK1 -

FJERNBETJENING




INDSÆT BATTERIER

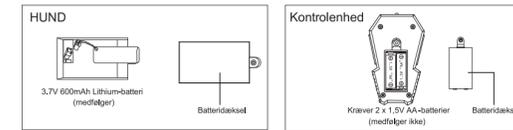

INSTRUKTIONER TIL OPLADNING AFLITHIUMBATTERIER

 
- Opladningstid: ca. 60-80 minutter.
- Spilletid: ca. 60 minutter.
- LED pæren lyser, når der oplades, og slukker, når opladningen er fuldført.
- Yderligere sikkerhedsinformation: Oplad ikke batteriet lige efter brug af hunden. Lad batteriet køle af i mindst 30 minutter. Placer ikke batteriet i en brand, mikrobølgeovn, ovn eller tryktank: det kan forårsage, at batteriet eksploderer.



- DK2 -

OPERATION INSTRUCTIONS


1. GO FORWARD/BACKWARD, TURN LEFT AND RIGHT.

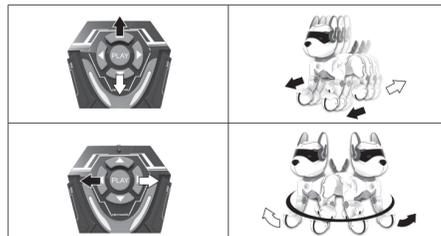

2. VOICE COMMAND

There are 9 types of commands in total, one command can be executed when you press the voice command button once.

Note: Optimal range between the control and dog is 3m - 5m. Hold remote control within 30cm when speaking.

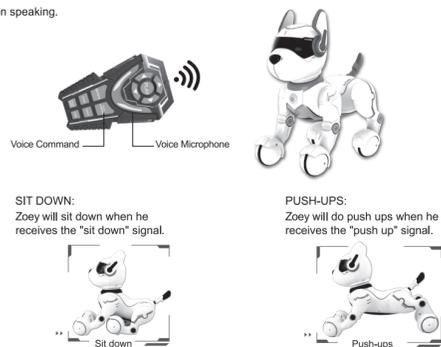

- EN3 -

YOGA:

Zoey will practice yoga when he receives the "yoga" signal.



ACT CUTE

Zoey will behave Behave nice when he receives the "act cute" signal.



SOMERSAULT:

Zoey will do a somersault when he receives the "somersault" signal.



ANGRY:

Zoey will start barking when he receives the "angry" signal.



HELLO ZOELY:

Zoey will say hello to you when he receives the "Hello Zoey" signal.



SING A SONG:

Zoey will play music when he receives the "sing a song" signal.



STAND UP:

Zoey will stand up when he receives the "stand up" signal.



- EN4 -

3. IMITATE

Zoey will imitate animal noises and movements once the imitate button is pressed.

4. GUARD

Press the guard button and Zoey will bark protectively.

5. DANCE

Press the dance button and Zoey will dance with music.

6. PROGRAMMING

Press the programming button followed by a sequence of up to 30 commands on the controller. Press the programming button again to perform your sequence.

7. STOP

Press the stop button and Zoey will stop and move to standby.

8. PLAY

Press the play button and Zoey will perform a demo.

Imported by Salling Group A/S,
Rostbjergvej 33, DK-8220 Brabrand,
www.sallinggroup.com


Produced By Shantou City Daye Plastic Toys Co.,Ltd
Baisha Industry Areas, Chenghai Borough,
Shantou City, Guangdong Province, China
info@shantoudaye.com

11004842

- EN5 -

BETJENINGSINSTRUKTIONER


1. GÅ FREMAD/ BAGLÆNS, SVING VENSTRE OG HØJRE.

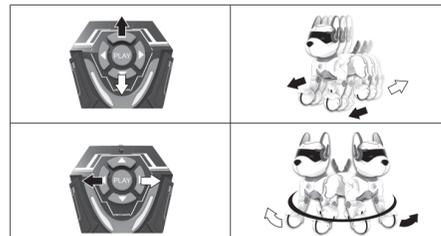

2. STEMME KOMMANDO

Der er i alt 9 typer kommandoer, og en kommando kan udføres, når du trykker på stemmekommandoknappen én gang.

Bemærk: Optimal rækkevidde mellem fjernbetjeningen og hunden er 3 m-5 m. Hold fjernbetjeningen inden for 30 cm, når du taler.

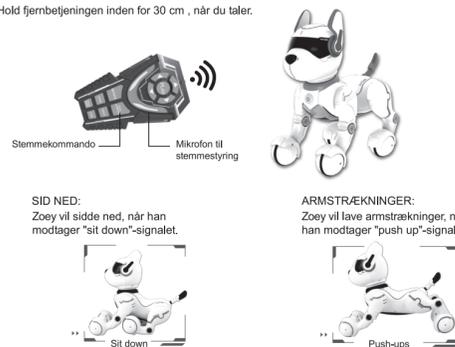

- DK3 -

YOGA:

Zoey vil lave yoga, når han modtager "yoga"-signalet.



OPFØR DIG SØDT

Zoey vil opføre sig sødt, når han modtager signalet "act cute".



KOLBØTTE:

Zoey vil lave en kolbøtte, når han modtager signalet "somersault".



VRED:

Zoey vil begynde at gå, når han modtager signalet "angry".



HEJ ZOELY:

Zoey vil sige hej til dig, når han modtager signalet "Hello Zoey".



SYNG EN SANG:

Zoey vil spille musik, når han modtager signalet "sing a song".



STÅ UP:

Zoey vil rejse sig op, når han modtager signalet "stand up".



- DK4 -

Imported by Salling Group A/S,
Rostbjergvej 33, DK-8220 Brabrand,
www.sallinggroup.com

Produced By Shantou City Daye Plastic Toys Co.,Ltd
Baisha Industry Areas, Chenghai Borough,
Shantou City, Guangdong Province, China
info@shantoudaye.com

- DK5 -

11004842