
Set alarm timer

Set alarm

- You can set two alarms to ring at different time.



Note

- Make sure that the clock is set correctly.

- 1 In standby mode, press and hold  for two second to access alarm menu.
- 2 Press **TUNING+/-** to select Alarm 1 or Alarm 2.
- 3 Press **SCAN/SELECT** to confirm.
- 4 Repeat steps 2 to 3 if any sub-option is available (alarm time, duration, source, days, volume, on/off)

Activate/deactivate alarm timer

- Press  repeatedly to activate or deactivate the alarm timer:
 - ↳ If the alarm timer is activated, **[AL1]** or **[AL2]** is displayed.
- To stop the alarm, press  .
 - ↳ The alarm repeats ringing for the next day.

Snooze the alarm

- When alarm sounds, press  .
 - ↳ The alarm snoozes and repeat ringing nine minutes later.