

CARNELIAN

MODEL: 651075 / ZV-9015 (CARNELIAN 250)

MODEL: 651074 / ZV-9014 (CARNELIAN 500)

MODEL: 651076 / ZV-9016 (CARNELIAN 1000)

1. REMOVABLE LAMP SHADE

4. HANGER

3. BUTTON

5. BOTTOM HANGING HOOK

2. BATTERY COMPARTMENT LID

UK: INSTRUCTION MANUAL

Light modes:

- Press the button (3) to turn the lamp on or off.
- Press and hold the button to dim the light. The light can be dimmed stepless to any setting between min. and max.

Use of the lamp:

- Open the battery compartment, by rotating the lid (2) counterclockwise.
- Insert batteries (not included, see type under Technical data), observe polarity.
- Please use batteries of high quality and take out the batteries if you do not use the light for a long time, or the light can be damaged by electrolyte leakage or battery explosion which is caused by low quality battery.
- Please clean the contacts of your light from time to time, especially if the light flickers or doesn't light up.
- Lamp can be used standing, hanging from the hanger (4) or hanging from the bottom hook (5).
- When hanging from the bottom hook, the removable lampshade can be removed by rotating it counterclockwise.
- Lamp can be cleaned with water or a damp rag.
- Lamp is water resistant to IP44.
- Do not use corrosive liquids to clean the lamp.
- Do not stare into the light source.
- Do not modify the product.

Light source: LED

Technical data (Carnelian 250):

4.5V + ——— , 5W

*3x1.5V AA not included



Class 3 appliance

Technical data (Carnelian 500):

4.5V + ——— , 8W

*3x1.5V D not included



Class 3 appliance

Technical data (Carnelian 1000):

4.5V + ——— , 15W

*6x1.5V D not included



Class 3 appliance



Dispose of product according to local regulations.