

&me.



INSTRUCTION MANUAL MASSAGESTAV

10546443

INTRODUKTION

Mange tak fordi du har valgt et produkt fra &me. Dermed har du erhvervet et kvalitetsprodukt som opfylder alle gældende krav til præstation og sikkerhedsstandarder i EU. For at sikre en korrekt behandling og en lang levetid anbefaler vi, at du overholder nedenstående anvisninger.

Du bedes læse vejledningen og især sikkerheds anvisningerne omhyggeligt igennem, inden du tager produktet i brug. Opbevar denne betjeningsvejledning, og overlad altid kun produktet til andre sammen med betjeningsvejledningen.

GENERELLE SIKKERHEDSFORANSTALTNINGER

- Forkert brug af produktet kan medføre personskade og beskadige produktet.
- Anvend kun produktet til det, det er beregnet til. Producenten er ikke ansvarlig for skader, der opstår som følge af forkert brug eller håndtering.
- Anbring altid produktet på et tørt, plant og stabilt underlag på god afstand af bordkant eller lignende.
- Produktet er udelukkende beregnet til husholdningsbrug. Produktet må ikke anvendes til erhvervsbrug.
- Produktets motordel/elektronik, ledning og stikket må ikke nedsænkes i vand, og der må ikke trænge vand i motordel/elektronik.
- Rør aldrig ved produktet, ledningen eller stikkontakten med våde eller fugtige hænder.
- Udsæt ikke produktet for direkte sollys, høje temperaturer, fugt, støv eller ætsende stoffer.
- Forlad aldrig produktet, når det er tændt.
- Når produktet er i brug, bør det holdes under konstant opsyn.
- Når produktet bruges skal børn der opholder sig i nærheden af den altid holdes under opsyn.

- Børn må ikke lege med produktet.
- Produktet kan indeholde skarpe dele og bør derfor opbevares utilgængeligt for børn.
- Brug kun tilbehør, der følger med produktet eller er anbefalet af producenten.
- Produktet må ikke bruges af personer med nedsat følsomhed, fysiske eller mentale handicap, eller personer, som ikke er i stand til at betjene produktet, medmindre de overvåges eller instrueres i brugen af en person, som er ansvarlig for deres sikkerhed.

LEDNING OG STIK

- Lad ikke ledningen hænge ud over bordkanten.
- Hold ledningen og produktet væk fra varmekilder, varme genstande og åben ild.
- Tag stikket ud af stikkontakten før rengøring, og hvis produktet ikke er i brug. Undlad at trække i ledningen, når du tager stikket ud af stikkontakten, men tag fat om selve stikket.
- Sørg for, at ledningen er rullet helt ud.
- Kontrollér jævnligt, om ledningen eller stikket er beskadiget, og brug ikke produktet, hvis dette er tilfældet, eller hvis det har været tabt på gulvet, tabt i vand eller er blevet beskadiget på en anden måde.
- Hvis produktet, ledningen eller stikket er beskadiget, skal produktet efterses og om nødvendigt repareres af en autoriseret reparatør. Forsøg aldrig at reparere produktet selv. Kontakt købsstedet, hvis der er tale om en reparation, der falder ind under reklamationsretten. Hvis der foretages uautoriserede indgreb i produktet, bortfalder reklamationsretten.

REKLAMATIONSRETEN GÆLDER IKKE:

- Hvis ovennævnte ikke iagttages.
- Hvis der har været foretaget uautoriserede indgreb i produktet.
- Hvis produktet har været misligholdt, udsat for en voldsom behandling eller lidt anden form for overlast.

BORTSKAFFELSE AF PRODUKTET

Brugte produkter må ikke smides i husholdningsaffaldet. Iht. lovforskrifterne skal det udtjente produkt bortskaffes på ordentlig vis. Derved genanvendes de brugbare materialer, og miljøet skånes. Nærmere informationer fås hos den ansvarlige kommunale myndighed eller det lokale bortskaffelsesfirma. Produktet er forsynet med følgende logo:



PAKKEN INDEHOLDER:

- 1 x opladningskabel
- 1 x opbevaringspose i fløj
- 1 x brugervejledning
- 1 x massagestav



SÅDAN BRUGES APPARATET

1. Tryk længe på tænd/sluk-knappen for at tænde massagestaven.
2. Tryk kort på hastighedsknappen for at skifte hastighed.
3. Tryk kort på funktionsknappen for at skifte vibrationsfunktion.
4. Tryk længe på tænd/sluk-knappen for at slukke massagestaven efter brug.

OPLADNINGSANVISNINGER

1. Når massagestavens vibrationer bliver svage, eller hvis staven ikke vil tænde, skal den genoplades. [Advarsel om lavt batteriniveau: Lysdioderne bag de tre knapper blinker skiftevis og angiver, at massagestaven skal oplades].
2. Sæt stikket til jævnstrøm ind i opladningsstikket til jævnstrøm i enden af massagestaven.
3. Sæt USB-kablet i et USB-strømskik.
4. Lysdioderne på massagestaven blinker under opladningen og stopper, når massagestaven er fuldt opladet.

ADVARSLER

1. Produktet kan ikke bruges under opladningen.
2. Brug et par dråber vandbaseret smøremiddel for at opnå en endnu mere behagelig følelse, når du bruger massagestaven.
3. Brug aldrig produktet på sår. Hold straks op med at bruge produktet, hvis du føler ubehag, når du bruger det. Søg råd hos din læge.
4. Rengør massagestaven med vådservietter. Det giver det bedste resultat. Dup derefter tør med et blødt håndklæde.
5. Brug ikke rensmiddel med benzin eller acetone. Hold massageapparatet væk fra olie og cremer (solcreme, spiseolie, læbebalsam osv.) for at undgå skader.
6. Opbevar massagestaven ved en temperatur mellem 0-40°C. Udsæt ikke staven for sollys.
7. Opbevar produktet i et støvfrit område.

TEKNISKE DATA

Artikelnr. 10546443

5V

PRODUCENT

Epiq ApS

Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Danmark

www.epiq.dk

Vi tager forbehold for trykfejl.

INTRODUCTION

Thank you for choosing a product from &me. You have acquired a quality product which meets all applicable performance and safety standards in the EU. In order to ensure proper treatment and a long product life, we recommend that you comply with the instructions below.

Please read the manual and especially the safety instructions carefully before using the product. Keep this manual and provide it for referral along with the product when others are using it.

GENERAL SAFETY INSTRUCTIONS

- Improper use of the product can cause personal injury and damage.
- Only use the product for what it is intended. The manufacturer is not liable for damages arising from improper use or handling.
- Always place the product on a dry, flat and stable surface well away from table edge or similar.
- The product is intended for household use only. The product is not for professional use.
- The product engine/electronics, cord or plug cannot be submerged in water, and no water may get in contact with the engine/electronics.
- Never touch the product, cord or plug with wet or damp hands.
- Do not expose the product to direct sunlight, high temperatures, humidity, dust or corrosive substances.
- Never leave the product when it is turned on.
- When the product is in use, it should be kept under constant supervision. Children should always be supervised when using the product to ensure that they do not play with the product. The product is not a toy.
- The product may have sharp parts and must, therefore, be kept out of reach of children.

- Only use the accessories that come with the product or that are recommended by the manufacturer.
- The product must not be used by people with reduced sensitivity, physical or mental disability, or people who are not able to operate the product unless they are supervised or instructed by a person responsible for their safety.

CORD AND PLUG

- Do not let the cord hang over the edge.
- Keep the cord and the product away from heat sources, hot objects and open flames.
- Unplug the power cord before cleaning and if the product is not in use. Do not pull the cord when removing the plug from the socket, rather grasp the plug itself.
- Make sure that the cord is fully extended.
- Check regularly that the cord and the plug are not damaged and do not use the product if this is the case, or if it has been dropped on the floor, dropped in water or damaged in another way.
- If the product or plug is damaged, the product must be inspected and, if necessary, repaired by an authorised repairer. Never try to repair the product yourself. Please, contact the store to see if there is a repair that falls under warranty. Tampering of the product will void the warranty.

RULES OF COMPLAINTS THE WARRANTY DOES NOT APPLY:

- If the above is not observed.
- If there has been unauthorised intervention of the product.
- If the product has been mishandled, subjected to rough treatment or some other form of damage.

PRODUCT DISPOSAL


Used product should not be disposed as household waste. According to legislation, the product should be disposed of properly so that the materials can be recycled in an environmentally

friendly manner. Further information is available from the responsible local authority or local disposal company. The product is equipped with the following logo:



PACKAGE INCLUDED

- 1 x Charging Cable
- 1 x Velvet Storage Bag
- 1 x User Manual
- 1 x Massager

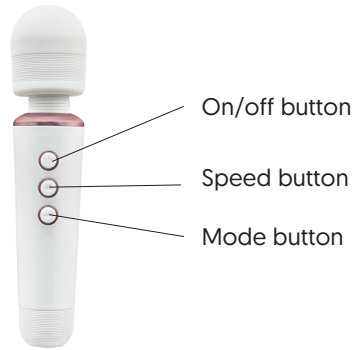

HOW TO USE

1. Long press the on/off button to start the massager.
2. Short press the speed button to switch the speed.
3. Short press the mode button to change the vibration mode.
4. Long press the on/off button to turn off the massager after use.

CHARGING INSTRUCTION

1. When your massager's vibration gets weak, or if the massager does not turn on, please recharge it. [Low battery warning: The LED lights behind the 3 buttons will keep flashing one by one, which means that the massager needs to be charged.]
2. Insert the DC plug into the DC charging hole at the end tip of the massager.
3. Insert the USB cable into a USB power outlet.
4. The LED lights on the massager will keep flashing when charging and stop flashing when the massager is fully charged.

WARNINGS

1. The product cannot be used when charging.
2. Please use a few drops of water-based lubricant to ensure an even more pleasant feeling when using the massager.
3. Never use the product on your wound. If you feel uncomfortable while using it, please stop using it immediately and consult medical staffs.
4. To clean the massager use wet wipes for best results and then pat dry with a soft towel.
5. Do not use cleanser with gasoline or acetone. Keep the massager away from oil and cream (sunscreen, edible oil, lip balm, etc.) to avoid damage.
6. Please store the massager between 0-40 degrees, and do not expose the massager to sunlight.
7. Keep the product in a dust-free area.

TECHNICAL DATA

Article No. 10546443
5V

PRODUCER

Epiq ApS
Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Denmark
www.epiq.dk

We cannot be held responsible for any printing errors.