

&me.



INSTRUCTION MANUAL SAMMENFOLDELIG FODSPA

10958538

INTRODUKTION

Mange tak fordi du har valgt et produkt fra &me. Dermed har du erhvervet et kvalitetsprodukt som opfylder alle gældende krav til præstation og sikkerhedsstandarder i EU. For at sikre en korrekt behandling og en lang levetid anbefaler vi, at du overholder nedenstående anvisninger.

Du bedes læse vejledningen og især sikkerheds anvisningerne omhyggeligt igennem, inden du tager produktet i brug. Opbevar denne betjeningsvejledning, og overlad altid kun produktet til andre sammen med betjeningsvejledningen.

GENERELLE SIKKERHEDSFORANSTALTNINGER

- Forkert brug af produktet kan medføre personskade og beskadige produktet.
- Anvend kun produktet til det, det er beregnet til. Producenten er ikke ansvarlig for skader, der opstår som følge af forkert brug eller håndtering.
- Anbring altid produktet på et tørt, plant og stabilt underlag på god afstand af bordkant eller lignende.
- Produktet er udelukkende beregnet til husholdningsbrug. Produktet må ikke anvendes til erhvervsbrug.
- Produktet må kun sluttes til 220-240V~, 50/60Hz.
- Produktets motordel/elektronik, ledning og stikket må ikke nedsænkes i vand, og der må ikke trænge vand i motordel/elektronik.
- Rør aldrig ved produktet, ledningen eller stikkontakten med våde eller fugtige hænder.
- Udsæt ikke produktet for direkte sollys, høje temperaturer, fugt, støv eller ætsende stoffer.
- Forlad aldrig produktet, når det er tændt.
- Når produktet er i brug, bør det holdes under konstant opsyn.
- Når produktet bruges skal børn der opholder sig i nærheden af

den altid holdes under opsyn.

- Børn må ikke lege med produktet.
- Produktet kan indeholde skarpe dele og bør derfor opbevares utilgængeligt for børn.
- Brug kun tilbehør, der følger med produktet eller er anbefalet af producenten.
- Produktet må ikke bruges af personer med nedsat følsomhed, fysiske eller mentale handicap, eller personer, som ikke er i stand til at betjene produktet, medmindre de overvåges eller instrueres i brugen af en person, som er ansvarlig for deres sikkerhed.

LEDNING OG STIK

- Lad ikke ledningen hænge ud over bordkanten.
- Hold ledningen og produktet væk fra varmekilder, varme genstande og åben ild.
- Tag stikket ud af stikkontakten før rengøring, og hvis produktet ikke er i brug. Undlad at trække i ledningen, når du tager stikket ud af stikkontakten, men tag fat om selve stikket.
- Sørg for, at ledningen er rullet helt ud.
- Kontrollér jævnligt, om ledningen eller stikket er beskadiget, og brug ikke produktet, hvis dette er tilfældet, eller hvis det har været tabt på gulvet, tabt i vand eller er blevet beskadiget på en anden måde.
- Hvis produktet, ledningen eller stikket er beskadiget, skal produktet efterses og om nødvendigt repareres af en autoriseret reparatør. Forsøg aldrig at reparere produktet selv. Kontakt købsstedet, hvis der er tale om en reparation, der falder ind under reklamationsretten. Hvis der foretages uautoriserede indgreb i produktet, bortfalder reklamationsretten.

REKLAMATIONSRETEN GÆLDER IKKE:


- Hvis ovennævnte ikke iagttages.
- Hvis der har været foretaget uautoriserede indgreb i produktet.
- Hvis produktet har været misligholdt, udsat for en voldsom behandling eller lidt anden form for overlast.

BORTSKAFFELSE AF PRODUKTET

Brugte produkter må ikke smides i husholdningsaffaldet. Iht. lovforskrifterne skal det udtjente produkt bortskaffes på ordentlig vis. Derved genanvendes de brugbare materialer, og miljøet skånes. Nærmere informationer fås hos den ansvarlige kommunale myndighed eller det lokale bortskaffelsesfirma. Produktet er forsynet med følgende logo:



KEND DIN FODSPA

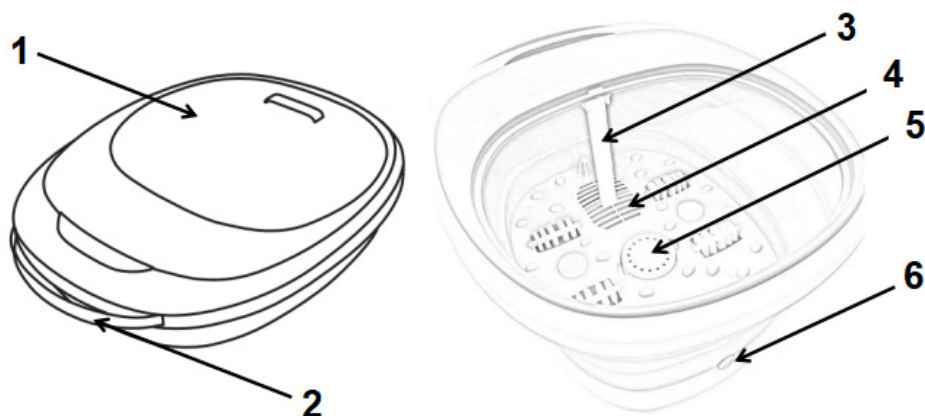

1. Støvtæt låg
2. Bærbart håndtag
3. Støttestang
4. Varmezone
5. Rum til badesalt
6. Tænd/sluk-knap

VIGTIGE SIKKERHEDSINSTRUKTIONER

ADVARSEL!

Nedsæk aldrig dit fodbad i vand eller anden væske.

Tjek altid vandtemperaturen, inden du placerer fødderne i dit fodbad.

Brug ikke fodbadet stående. Sæt dig altid ned og placer dine fødder i fodbadet.

Tag altid stikket ud af stikkontakten, når det ikke er i brug, og når apparatet fyldes, tømmes, rengøres eller flyttes.

Sørg for, at dine hænder er tørre, når du betjener kontakten eller tager stikket ud.

Hvis der lækker vand fra fodbadet, bør det ikke længere benyttes.

Fodbadet har en opvarmet overflade. Personer, der er ufølsomme overfor varme, skal udvise forsigtighed ved brug af fodbadet.

FORSIGTIG!

Fodbadet bør aldrig stå uovervåget, når det er forbundet til elnettet. Tag altid stikket ud af kontakten, når apparatet ikke er i brug.

Undlad at tabe eller stikke genstande ind i produktets åbninger.

Benyt ikke apparatet under et tæppe eller en pude. Overdreven opvarmning kan opstå og forårsage brand, elektrisk stød eller personskaade.

Hvis du har helbredsbekymringer, bør du konsultere din læge, inden du benytter fodbadet.

SÅDAN BENYTTES DIT FODBAD

FØR APPARATET TAGES I BRUG FØRSTE GANG

1. Fjern alle indpakningsmaterialer fra apparatet, og bortskaf dem på miljømæssigt forsvarlig vis.
2. Placer apparatet vandret og fjern låget (1).
3. Fold apparatet ud, og fastgør støttearmen (3).

SÅDAN BRUGER DU DIT FODBAD

1. Fyld fodspaen med rent vand (ikke højere end 40°C).

Tips:

Du kan lægge badesalt i rummet (5), før du fylder fodbadet op med vand.

2. Sæt dig ned og placer dine fødder i fodbadet.
3. Tilslut apparatet, og tryk på tænd/sluk-knappen (6) for at tænde for fodbadet.
4. Du kan bevæge dine fødder ved at røre rullerne frem og tilbage, for at få en bedre effekt af massage.

OBS: Kom ikke for tæt på varmezonen (4), når du bevæger dine fødder for at undgå forbrændinger!

5. Når vandtemperaturen er opvarmet til den ønskede temperatur, skal du slukke for tænd/sluk-knappen for at stoppe opvarmningen.

Maksimal opvarmningstemperatur er mellem 40°C og 45°C.

6. Når vandet er afkølet, skal du tænde for tænd/sluk-knappen for at starte opvarmningen igen.
7. Efter brug skal du slukke for apparatet og tage netledningen ud.

RENGØRING OG OPBEVARING AF DIT FODBAD

RENGØRING AF FODBADET

Tag stikket ud af stikkontakten, og lad enheden køle af inden rengøring. Fodbadet må kun rengøres med en blød, let fugtet klud.

Brug aldrig slibende eller kradse rengøringsmidler.

Efter rengøring skal du tørre overfladerne af med en tør klud.

OPBEVARING AF FODBADET

Tag stikket ud af stikkontakten, og lad enheden køle af inden opbevaring.

Fold produktet sammen og luk låget for at forhindre støv i at trænge ind.



Opbevar enheden i æsken på et rent, tørt sted udenfor børns rækkevidde.
Pak netledningen ind under produktet.

TEKNISKE DATA

Artikelnr. 10958538
220-240V~, 50/60Hz
330 Watt
7 liter
KB time: 60 minutes

PRODUCENT

Epiq ApS
Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Danmark
www.epiq.dk

Vi tager forbehold for trykfejl.

INTRODUCTION

Thank you for choosing a product from &me. You have acquired a quality product which meets all applicable performance and safety standards in the EU. In order to ensure proper treatment and a long product life, we recommend that you comply with the instructions below.

Please read the manual and especially the safety instructions carefully before using the product. Keep this manual and provide it for referral along with the product when others are using it.

GENERAL SAFETY INSTRUCTIONS

- Improper use of the product can cause personal injury and damage.
- Only use the product for what it is intended. The manufacturer is not liable for damages arising from improper use or handling.
- Always place the product on a dry, flat and stable surface well away from table edge or similar.
- The product is intended for household use only. The product is not for professional use.
- The product may only be connected to 220-240V~, 50/60Hz.
- The product engine/electronics, cord or plug cannot be submerged in water, and no water may get in contact with the engine/electronics.
- Never touch the product, cord or plug with wet or damp hands.
- Do not expose the product to direct sunlight, high temperatures, humidity, dust or corrosive substances.
- Never leave the product when it is turned on.
- When the product is in use, it should be kept under constant supervision. Children should always be supervised when using the product to ensure that they do not play with the product. The product is not a toy.
- The product may have sharp parts and must, therefore, be kept

out of reach of children.

- Only use the accessories that come with the product or that are recommended by the manufacturer.
- The product must not be used by people with reduced sensitivity, physical or mental disability, or people who are not able to operate the product unless they are supervised or instructed by a person responsible for their safety.

CORD AND PLUG

- Do not let the cord hang over the edge.
- Keep the cord and the product away from heat sources, hot objects and open flames.
- Unplug the power cord before cleaning and if the product is not in use. Do not pull the cord when removing the plug from the socket, rather grasp the plug itself.
- Make sure that the cord is fully extended.
- Check regularly that the cord and the plug are not damaged and do not use the product if this is the case, or if it has been dropped on the floor, dropped in water or damaged in another way.
- If the product or plug is damaged, the product must be inspected and, if necessary, repaired by an authorised repairer. Never try to repair the product yourself. Please, contact the store to see if there is a repair that falls under warranty. Tampering of the product will void the warranty.

RULES OF COMPLAINTS THE WARRANTY DOES NOT APPLY:

- If the above is not observed.
- If there has been unauthorised intervention of the product.
- If the product has been mishandled, subjected to rough treatment or some other form of damage.


PRODUCT DISPOSAL

Used product should not be disposed as household waste. According to legislation, the product should be disposed of

properly so that the materials can be recycled in an environmentally friendly manner. Further information is available from the responsible local authority or local disposal company. The product is equipped with the following logo:



KNOW YOUR FOOT SPA

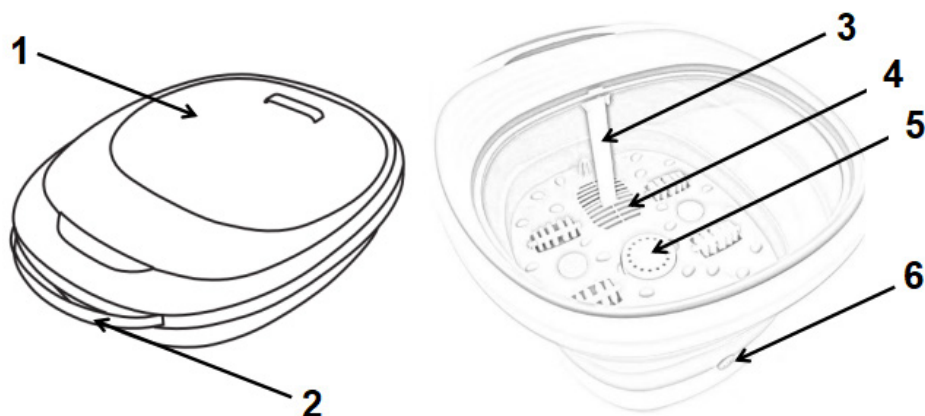

1. Dust proof lid
2. Portable handle
3. Support rod
4. Heating area
5. Compartment for bath salt
6. Power button

IMPORTANT SAFETY INSTRUCTIONS

WARNING!

Never immerse the foot spa in water or other liquids.

Do not stand in the unit. Always sit down and place your feet in the foot spa.

Always unplug the appliance when not in use and when filling, emptying, cleaning, or moving the appliance.

Ensure that your hands are dry when operating the switch or removing the plug.

If water leaks from the foot spa, the appliance should no longer be used.

The foot spa has a heated surface. Persons insensitive to heat must be careful when using the foot spa.

CAUTION!

The foot spa should never be left unattended when plugged in. Always unplug it from the power outlet when it is not in use.

Never drop or insert any object into any opening of the appliance.

Do not operate under a blanket or pillow. Excessive heating can occur and cause fire, electrical shock or injury.

If you have any concerns regarding your health consult your doctor before using the foot spa.

USING YOUR FOOT SPA

BEFORE FIRST USE

1. Remove all packaging materials from the appliance and dispose of them responsibly.
2. Place the appliance horizontally and remove the lid (1).
3. Unfold the appliance, fix the support rod (3).

USING THE FOOT SPA

1. Fill the foot spa with clean water (not higher than 40°C).

Tips:

You can place bath salt in the compartment (5) before filling the foot spa with water.

2. Sit down and place your feet in the foot spa.
 3. Plug in the appliance and press the power button (6) to switch on the foot spa, to turn on all functions: heating, red light and bubbles.
 4. You can move your feet back and forth over the rollers to enhance the massage effect.
- ATTENTION: Do not get too close to the heating area (4) while moving your feet to avoid burns!

5. When the water temperature reaches your desired level, please turn off the power button to stop heating.

The maximum heating temperature range is 40°C to 45°C.

6. When the water cools down, please turn on the power button to start heating again.
7. After use, please turn off the appliance and unplug the power cord.

CLEANING AND STORING YOUR FOOT SPA

CLEANING THE FOOT SPA

Unplug the appliance from the power outlet and allow it to cool before cleaning. Clean the foot spa only with a soft damp cloth.

Never use abrasive detergents or harsh cleaning agents.

After cleaning, wipe the surfaces with a dry cloth.

STORING THE FOOT SPA

Unplug the appliance from the power outlet and allow it to cool before storage.

Fold this product and close the lid to prevent dust from entering.



Store the unit in its box in a clean, dry place, out of reach of children.
Wrap the power cord under the product.

TECHNICAL DATA

Article No. 10958538
220-240V~, 50/60Hz
330 Watt
7 liters
KB time: 60 minutes

PRODUCER

Epiq ApS
Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Denmark
www.epiq.dk

We cannot be held responsible for any printing errors.