

KØKKENHEF



# INSTRUCTION MANUAL

## KITCHEN MACHINE

10556390

## INTRODUKTION

Mange tak fordi du har valgt et produkt fra Køkkenchef. Dermed har du erhvervet et kvalitetsprodukt som opfylder alle gældende krav til præstation og sikkerhedsstandarder i EU. For at sikre en korrekt behandling og en lang levetid anbefaler vi, at du overholder nedenstående anvisninger.

Du bedes læse vejledningen og især sikkerheds anvisningerne omhyggeligt igennem, inden du tager produktet i brug. Opbevar denne betjeningsvejledning, og overlad altid kun produktet til andre sammen med betjeningsvejledningen.

## GENERELLE SIKKERHEDSFORANSTALTNINGER

- Forkert brug af produktet kan medføre personskade og beskadige produktet.
- Anvend kun produktet til det, det er beregnet til. Producenten er ikke ansvarlig for skader, der opstår som følge af forkert brug eller håndtering.
- Anbring altid produktet på et tørt, plant og stabilt underlag på god afstand af bordkant eller lignende.
- Produktet er udelukkende beregnet til husholdningsbrug. Produktet må ikke anvendes til erhvervsbrug.
- Produktet må kun sluttes til 220-240V~, 50/60Hz.
- Produktets motordel/elektronik, ledning og stikket må ikke nedsænkes i vand, og der må ikke trænge vand i motordel/elektronik.
- Rør aldrig ved produktet, ledningen eller stikkontakten med våde eller fugtige hænder.
- Udsæt ikke produktet for direkte sollys, høje temperaturer, fugt, støv eller ætsende stoffer.
- Forlad aldrig produktet, når det er tændt.
- Når produktet er i brug, bør det holdes under konstant opsyn.
- Når produktet bruges skal børn der opholder sig i nærheden af

den altid holdes under opsyn.

- Børn må ikke lege med produktet.
- Produktet kan indeholde skarpe dele og bør derfor opbevares utilgængeligt for børn.
- Brug kun tilbehør, der følger med produktet eller er anbefalet af producenten.
- Produktet må ikke bruges af personer med nedsat følsomhed, fysiske eller mentale handicap, eller personer, som ikke er i stand til at betjene produktet, medmindre de overvåges eller instrueres i brugen af en person, som er ansvarlig for deres sikkerhed.

## **LEDNING OG STIK**

- Lad ikke ledningen hænge ud over bordkanten.
- Hold ledningen og produktet væk fra varmekilder, varme genstande og åben ild.
- Tag stikket ud af stikkontakten før rengøring, og hvis produktet ikke er i brug. Undlad at trække i ledningen, når du tager stikket ud af stikkontakten, men tag fat om selve stikket.
- Sørg for, at ledningen er rullet helt ud.
- Kontrollér jævnligt, om ledningen eller stikket er beskadiget, og brug ikke produktet, hvis dette er tilfældet, eller hvis det har været tabt på gulvet, tabt i vand eller er blevet beskadiget på en anden måde.
- Hvis produktet, ledningen eller stikket er beskadiget, skal produktet efterses og om nødvendigt repareres af en autoriseret reparatør. Forsøg aldrig at reparere produktet selv. Kontakt købsstedet, hvis der er tale om en reparation, der falder ind under reklamationsretten. Hvis der foretages uautoriserede indgreb i produktet, bortfalder reklamationsretten.

## **REKLAMATIONSRETEN GÆLDER IKKE:**


- Hvis ovennævnte ikke iagttages.
- Hvis der har været foretaget uautoriserede indgreb i produktet.
- Hvis produktet har været misligholdt, udsat for en voldsom behandling eller lidt anden form for overlast.

## **BORTSKAFFELSE AF PRODUKTET**

Brugte produkter må ikke smides i husholdningsaffaldet. Iht. lovforskrifterne skal det udtjente produkt bortskaffes på ordentlig vis. Derved genanvendes de brugbare materialer, og miljøet skånes. Nærmere informationer fås hos den ansvarlige kommunale myndighed eller det lokale bortskaffelsesfirma. Produktet er forsynet med følgende logo:



## OVERSIGT OVER DELE

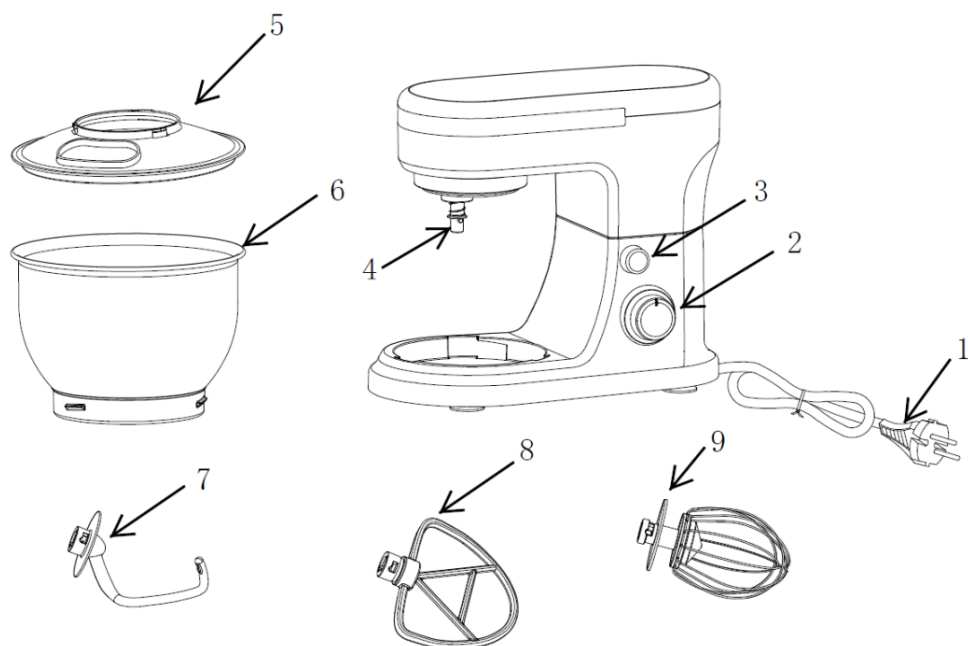

1. Ledning og Stik
2. Hastighedsknap
3. Udløserknap

4. Drejeaksel
5. Låg
6. Skål

7. Dejkrog
8. Kagespade
9. Piskeris

## KONTROLPANEL

|                                                                                                                                                                                                                               |                                                                                                                                                                                                                                                                                                                                                                  |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>The speed control dial has a central knob and a surrounding ring with markings for settings 0, 1, 2, 3, 4, 5, and 6. A 'Pulse' button is located at the top left of the dial. The dial is shown in a perspective view.</p> | <p>Setting Pulse-----Maksimumhastighed - hurtig. Du kan trykke på og holde impulsknappen nede, hvis du vil blende hurtigere.</p> <p>0-----Denne indstilling angiver positionen "Stop" eller "Fra".</p> <p>Indstilling 1-6 ----- Driftshastighed</p> <p>Indstilling 1 ----- Minimumshastighed - langsom</p> <p>Indstilling 6 ----- Maksimumhastighed - hurtig</p> |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

## HASTIGHEDSINDSTILLINGER

### BEMÆRK:

1. Justering af niveau og brug af krog til en blanding på højst 1,2 kgs.
2. Drej kontakten til stillingen "INTERVAL" for intervaldrift (æltning med korte intervaller). Kontakten skal holdes i denne stilling i den ønskede intervalperiode. Kontakten vender automatisk tilbage til stillingen "0", når den slippes.

| Tilbehør | Billede                                                                           | Hastighedsindstilling | Type af blanding                                                |
|----------|-----------------------------------------------------------------------------------|-----------------------|-----------------------------------------------------------------|
| Dejkroge |  | 1--4                  | Tunge blandinger (f.eks. brød eller tærter)                     |
| Dejspade |  | 2--4                  | Halvtunge blandinger (f.eks. pandekager eller svampet blanding) |
| Piskeris |  | 5--6                  | Lette blandinger (f.eks. fløde, æggehvider, blanch-manger)      |
| Piskeris |  | Interval              | Interval (f.eks. til svampet blanding, piskning af æggehvider)  |

## FØR APPARATET TAGES I BRUG FØRSTE GANG

- Tag apparatet og tilbehøret ud af kassen. Tag klistermærker, beskyttelsesfolie og plastik af apparatet.
- Placer apparatet på en plan overflade og sørg for, at der er 10 cm frirum rundt om apparatet. Dette apparat må ikke installeres i et skab eller bruges udendørs.
- Før du bruger apparatet første gang, skal du tørre alle aftagelige dele af med en fugtig klud. Brug aldrig slibende produkter.
- Sæt strømkablet i kontakten. [Bemærk: Sørg for, at den angivne spænding på apparatet stemmer overens med den stedlige spænding, før apparatet tilsluttes. Spænding 220V-240V~, 50/60 Hz]
- Brug aldrig maskinen uafbrudt i mere end 10 min. Lad efterfølgende maskinen køle af i ca. 10 min.
- Undgå at overfylde apparatet – den maksimale mængde ingredienser er 1,2 kg.

## DRIFTSPOSITIONER

**ADVARSEL:** Idriftsæt kun køkkenmaskinen, når tilbehør/redskab er monteret iht, til nedenstående tabeog er i driftspositionen.

| Punkt | Position                                                                          | Tilbehør                                                                          |                                                                                   |                                                                                    |
|-------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
| 1     |  |  |  |  |
| 2     |  | Monter dejkrog, k-spade, piskeris efter behov                                     |                                                                                   |                                                                                    |


De roterende redskaber kan medføre personskade!

Hold fingrene væk fra skålen, når apparatet er idriftsæt.

Udskift ikke redskaber før apparatet er holdt helt op med at rotere og stikket er taget ud af kontakten. Vent altid til de bevægelige dele er holdt helt op med at rotere, når apparatet slukkes. Derefter skal apparatet tages ud af stikkontakten, før armen løftes af holderen, eller når nogen af tilbehørets dele åbnes, tages af eller fjernes fra maskinen.


## BRUG AF DEJKROG, FLADT PISKERIS, PISKERIS

|                                                                                           |                                                                                                            |
|-------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|
| 1.<br> | 1. Placer apparatet på en plan overflade, f. eks. et køkkenbord, og sørg for at det står forsvarligt fast. |
|-------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|
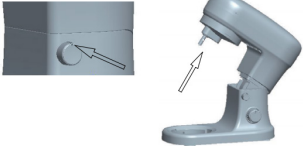
|                                                                                               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|-----------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>2.</p>    | <ol style="list-style-type: none"> <li>1. Tryk på armens udløserknapp[3], og løft samtidig svingarmen med hånden, så den låser på plads med et klik. Svingarmen svinger op.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <p>3.</p>    | <ol style="list-style-type: none"> <li>1. Sæt låget [5] på svingarmen, og drej det en smule med uret, så det låser forsvarligt på plads.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <p>4.</p>    | <ol style="list-style-type: none"> <li>1. Hæld madvarer i skålen [6].</li> <li>2. Monter skålen i indhakkets på motorhuset.</li> <li>3. Drej skålen en smule med uret, så den låser på plads.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <p>5.</p>  | <ol style="list-style-type: none"> <li>1. Monter det ønskede redskab [7 med 8 eller 9] på motorens drejeaksel [4] på undersiden af svingarmen.</li> <li>2. A. Dejkrogen [7] bruges til tung dej, hakket kød eller anden tung aeltning.<br/>B. K-spaden [8] bruges til at blande lettere dejtyper.<br/>C. Piskeriset [9] bruges til at piske fløde, æggeghvider osv.</li> <li>3. Drej redskabet, så pindene på akslen passer med fordybningerne på redskabets øverste kant. Tryk redskabet op mod svingarmen, og drej det samtidig mod uret, indtil pindene og redskabet låser sikkert på plads. Redskabet må ikke sidde løst og må ikke kunne trækkes ud.</li> </ol> |





6.



1. Tryk på armens udløserknap, og sænk samtidig svingarmen, så den låser på plads med et klik. Låget skal sidde helt fast på skålen, ellers er det monteret forkert. Apparatet er nu klar til brug.
2. Sæt el-ledningen i stikkontakten..
3. Vælg den rette hastighed (1-6). Hastighed 1 er langsom, og hastighed 6 er hurtig. Anbefalede hastigheder, tid og kapacitet er vist i tabellen oven for.
4. Hvis du har brug for at skrabe nede i skålen, skal du vente, indtil redskabet er helt stoppet. Brug spatelen, aldrig fingrene.

7.



1. Sluk for apparatet ved at dreje hastighedsknappen hen til 0, når du er færdig med at blande. Sluk apparatet, og tag stikket ud, før du udskifter redskaberne, eller før du fjerner apparatets dele, eller når apparatet ikke er i brug.
2. Tryk på armens udløserknap, og løft samtidig svingarmen med hånden, så den låser på plads med et klik. Svingarmen svinger op.

8.

8.1



8.2



1. Tag redskabet af ved dreje det med uret.
2. Tag skålen af med de færdigblandede fødevarer.

## VIGTIGT

Hvis vand skal hældes i dejen under æltning, skal det have en temperatur på 40 grader[+/-5°C]. Hæld ikke vand på over 45°C i skålen.

## RENGORING

Når apparatet skal rengøres, skal du være opmærksom på følgende:

- Træk stikket ud af stikkontakten, og lad apparatet køle af før rengøring.
- Motordelen må ikke nedsænkes i vand, og vand må ikke trænge ind i apparatet.
- Rengør motordelen ved at tørre den af med en fugtig klud. En lille smule rengøringsmiddel kan benyttes, hvis apparatet er meget snavset.
- Komponenterne er ikke egnede til at lægge i opvaskemaskinen. De kan blive misdannede eller misfarvede, hvis de udsættes for varme eller ætsende rengøringsmidler.
- Brug ikke skuresvampe, ståluld eller stærke opløsningsmidler eller slibende rengøringsmidler til at rengøre apparatet, da de kan beskadige apparatets udvendige overflader.
- Fjern apparatets dele, og rengør alle redskaberne særskilt.
- Sørg for ikke at berøre knive eller skarpe dele under brug og rengøring.
- VIGTIGT! Lad køkkenmaskinen tørre grundigt efter rengøring, før den bruges igen. Brug ikke apparatet, hvis det er fugtigt.

## TEKNISKE DATA

Artikelnr. 10556390  
220-240V~, 50/60Hz  
1300 Watt

## PRODUCENT

Epiq ApS  
Krøyer Kielbergs Vej 3, 3. th  
8660 Skanderborg, Danmark  
**[www.epiq.dk](http://www.epiq.dk)**

Vi tager forbehold for trykfejl.

## INTRODUCTION

Thank you for choosing a product from Køkkenchef. You have acquired a quality product which meets all applicable performance and safety standards in the EU. In order to ensure proper treatment and a long product life, we recommend that you comply with the instructions below.

Please read the manual and especially the safety instructions carefully before using the product. Keep this manual and provide it for referral along with the product when others are using it.

## GENERAL SAFETY INSTRUCTIONS

- Improper use of the product can cause personal injury and damage.
- Only use the product for what it is intended. The manufacturer is not liable for damages arising from improper use or handling.
- Always place the product on a dry, flat and stable surface well away from table edge or similar.
- The product is intended for household use only. The product is not for professional use.
- The product may only be connected to 220-240V~, 50/60Hz.
- The product engine/electronics, cord or plug cannot be submerged in water, and no water may get in contact with the engine/electronics.
- Never touch the product, cord or plug with wet or damp hands.
- Do not expose the product to direct sunlight, high temperatures, humidity, dust or corrosive substances.
- Never leave the product when it is turned on.
- When the product is in use, it should be kept under constant supervision. Children should always be supervised when using the product to ensure that they do not play with the product. The product is not a toy.
- The product may have sharp parts and must, therefore, be kept

out of reach of children.

- Only use the accessories that come with the product or that are recommended by the manufacturer.
- The product must not be used by people with reduced sensitivity, physical or mental disability, or people who are not able to operate the product unless they are supervised or instructed by a person responsible for their safety.

## **CORD AND PLUG**

- Do not let the cord hang over the edge.
- Keep the cord and the product away from heat sources, hot objects and open flames.
- Unplug the power cord before cleaning and if the product is not in use. Do not pull the cord when removing the plug from the socket, rather grasp the plug itself.
- Make sure that the cord is fully extended.
- Check regularly that the cord and the plug are not damaged and do not use the product if this is the case, or if it has been dropped on the floor, dropped in water or damaged in another way.
- If the product or plug is damaged, the product must be inspected and, if necessary, repaired by an authorised repairer. Never try to repair the product yourself. Please, contact the store to see if there is a repair that falls under warranty. Tampering of the product will void the warranty.

## **RULES OF COMPLAINTS THE WARRANTY DOES NOT APPLY:**

- If the above is not observed.
- If there has been unauthorised intervention of the product.
- If the product has been mishandled, subjected to rough treatment or some other form of damage.


## **PRODUCT DISPOSAL**

Used product should not be disposed as household waste. According to legislation, the product should be disposed of

properly so that the materials can be recycled in an environmentally friendly manner. Further information is available from the responsible local authority or local disposal company. The product is equipped with the following logo:




## PARTS LIST

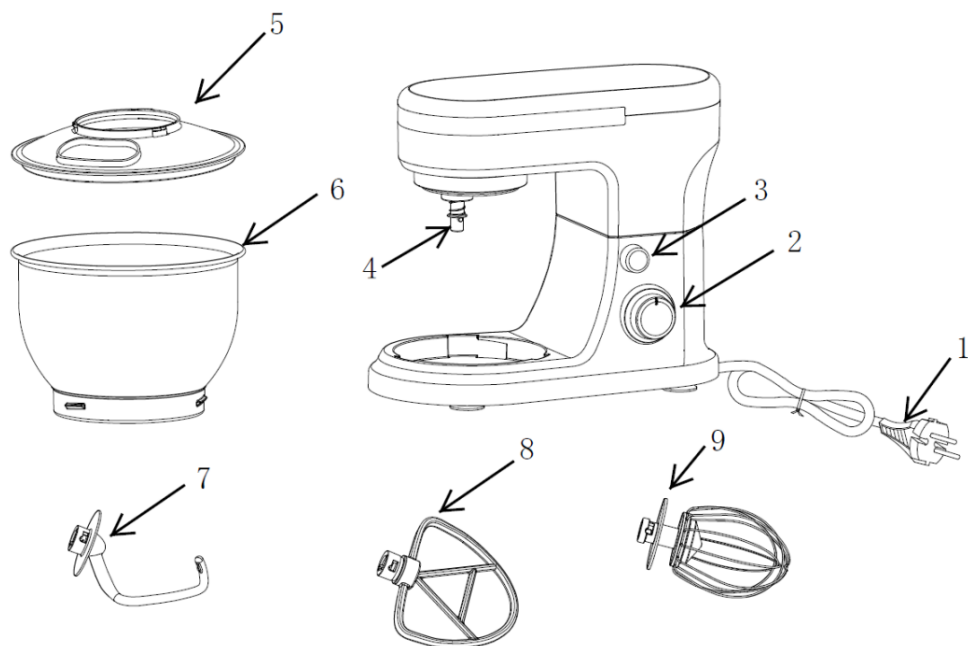

- |                       |            |                |
|-----------------------|------------|----------------|
| 1. Cord and Plug      | 4. Spindle | 7. Dough Hook  |
| 2. Speed control knob | 5. Lid     | 8. Cake Beater |
| 3. Release button     | 6. Bowl    | 9. Whisk       |

## CONTROL PANEL

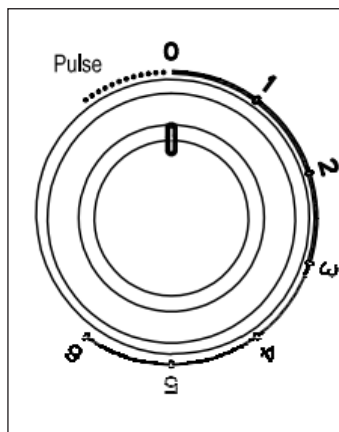

**Setting Pulse:** This setting activates the maximum speed, which is fast. To accelerate the blending process, press down and hold the Pulse Setting without releasing it.

**Setting 0:** This setting indicates the "Stop" or "Off" position.

**Setting 1-6:** These settings represent the operating speed levels.

**Setting 1:** This setting corresponds to the minimum speed, which is slow.

**Setting 6:** This setting represents the maximum speed, which is fast.

## SPEED SETTINGS

### NOTE:

1. Adjust the levels and use the hook for a mixture weighing no more than 1.2 kgs.
2. For pulse operation (kneading at short intervals), turn the switch to the "PULSE" position. Hold the switch in this position for the desired interval length. When the switch is released, it will automatically return to the "0" position.

| Accessories | Picture                                                                           | Speed setting | Type of Mixture                                      |
|-------------|-----------------------------------------------------------------------------------|---------------|------------------------------------------------------|
| Dough Hook  |  | 1--4          | Heavy mixtures[e.g. bread or short pastry]           |
| Cake Beater |  | 2--4          | Medium-heavy mixtures[e.g. crepes or sponge mixture] |
| Whisk       |  | 5--6          | Light mixtures (e.g. cream, egg white, blancmange)   |
| Whisk       |  | Pulse         | Interval [e.g. for mixing under sponge, egg white]   |

## BEFORE FIRST USE

- Take the appliance and accessories out of the box. Remove any stickers, protective foil, or plastic from the appliance.
- Place the appliance on a flat, stable surface, ensuring a minimum of 10cm of free space around it. This appliance is not suitable for installation in a cabinet or for outdoor use.
- Before using your appliance for the first time, wipe off all removable parts with a damp cloth. Avoid using abrasive products.
- Insert the power cable into the socket. [Note: Ensure that the voltage indicated on the appliance matches the local voltage before connecting it. Voltage: 220V-240V~, 50/60Hz]
- Do not use the appliance continuously for more than 10 minutes. After this, allow the appliance to cool down for approximately 10 minutes.
- Avoid overfilling the appliance; the maximum quantity of ingredients is 1.2 kgs.

**OPERATING POSITIONS**

**WARNING:** Operate the Kitchen Machine only when the accessory/tool is attached.


| Item | Position                                                                          | Accessory                                                                         |                                                                                   |                                                                                    |
|------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
| 1    |  |  |  |  |
| 2    |  | Set up the dough hook, cake beater, or whisk according to your preference.        |                                                                                   |                                                                                    |



Risk of injury from rotating tools! While the appliance is in operation, keep fingers clear of the mixing bowl. Do not change tools until the appliance has come to a complete stop and has been unplugged. Always wait for the moving parts to stop running after switching off, and then unplug the appliance before lifting the stand's arm or opening, disassembling, or removing any parts or accessories from the machine.

**HOW TO USE THE DOUGH HOOK, CAKE BEATER AND WHISK**

|                                                                                           |                                                                                                                          |
|-------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|
| 1.<br> | 1. Place the appliance on a flat surface, such as a kitchen counter, and ensure that it is stable and standing securely. |
|-------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|

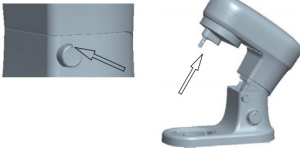

|                                                                                               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|-----------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>2.</p>    | <ol style="list-style-type: none"> <li>1. Press the arm release button [3] and simultaneously lift the swivel arm with your hand until it locks into place with a click. The swivel arm will tilt up.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <p>3.</p>    | <ol style="list-style-type: none"> <li>1. Fit the lid [5] onto the swivel arm and turn it slightly clockwise until it securely locks into position.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <p>4.</p>    | <ol style="list-style-type: none"> <li>1. Place the food in the mixing bowl [6].</li> <li>2. Fit the mixing bowl into the recess on the motor housing.</li> <li>3. Turn the mixing bowl slightly clockwise until it locks into position.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <p>5.</p>  | <ol style="list-style-type: none"> <li>1. Fit the required accessory [7 with 8 or 9] onto the motor spindle [4] located on the underside of the swivel arm.</li> <li>2. A. The dough hook [7] is used for heavy dough, minced meat, or other demanding kneading jobs.<br/>B. The cake beater [8] is used to mix lighter types of dough.<br/>C. The whisk [9] is used for whisking cream, egg whites, and other ingredients.</li> <li>3. Align the pins on the spindle with the depressions on the top edge of the accessory. Press the accessory against the swivel arm and simultaneously turn it counterclockwise until the pins engage and the accessory locks securely into position. Ensure that the accessory is not loose and cannot be pulled free.</li> </ol> |
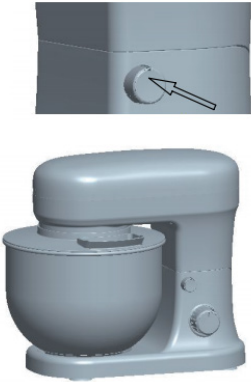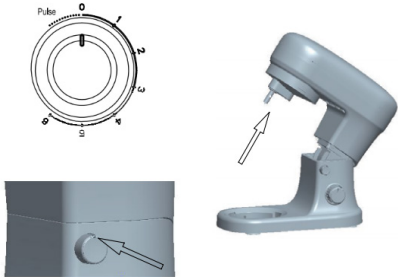
|                                                                                                                                                                                                                                                                                                                                                              |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>6.</p>                                                                                                                                                                                                                                                                   | <ol style="list-style-type: none"> <li>1. Press the arm release button and simultaneously lower the swivel arm until it locks into place with a click. Ensure that the lid fits tightly with the mixing bowl; otherwise, it is fitted incorrectly. The appliance is now ready for use.</li> <li>2. Plug the power cord into a main power outlet.</li> <li>3. Select the desired speed from 1 to 6. Speed 1 is the slowest, while speed 6 is the fastest. Refer to the table above for recommended speeds, time, and capacity.</li> <li>4. If you need to scrape the inside of the mixing bowl, wait until the accessory has come to a complete stop. Use a spatula for this purpose, never your fingers.</li> </ol> |
| <p>7.</p>                                                                                                                                                                                                                                                                  | <ol style="list-style-type: none"> <li>1. Switch off the appliance by turning the speed control knob to 0 when you have finished mixing. Remember to switch off the appliance and unplug it before changing accessories, disassembling the appliance, or when it is not in use.</li> <li>2. Press the arm release button while lifting the swivel arm with your hand so that it locks into place with a click. The swivel arm will tilt up.</li> </ol>                                                                                                                                                                                                                                                              |
| <p>8.</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>8.1</p>  </div> <div style="text-align: center;"> <p>8.2</p>  </div> </div> | <ol style="list-style-type: none"> <li>1. Detach the accessory by turning it clockwise.</li> <li>2. Remove the mixing bowl with the prepared food by turning it counterclockwise.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |

## IMPORTANT

The recommended water temperature for adding to the dough is 40 degrees +/- 5°C during the dough-making process. Please avoid adding water that exceeds 45°C when mixing the dough.

## CLEANING

When cleaning the appliance, please pay attention to the following points:

- Remove the plug from the mains socket and allow the appliance to cool down before cleaning.
- Do not immerse the motor section of the appliance in water and ensure that no water enters the appliance.
- Clean the motor section by wiping it with a damp cloth. If the appliance is heavily soiled, a small amount of detergent can be added.
- The components are not suitable for cleaning in a dishwasher. Exposing them to heat or caustic cleaners may cause them to become misshapen or discolored.
- Avoid using scouring pads, steel wool, strong solvents, or abrasive cleaning agents to clean the appliance as they may damage its exterior surfaces.
- Disassemble the appliance and clean all accessories separately.
- Exercise caution and avoid touching the blades or sharp parts during use and cleaning.
- **IMPORTANT:** Ensure that the kitchen machine is properly dried after cleaning before using it again. Do not use the appliance if it is damp.

## TECHNICAL DATA

Article No. 10556390  
220-240V~, 50/60Hz  
1300 Watt

## PRODUCER

Epiq ApS  
Krøyer Kielbergs Vej 3, 3. th  
8660 Skanderborg, Denmark  
**[www.epiq.dk](http://www.epiq.dk)**

We cannot be held responsible for any printing errors.