

salling



INSTRUCTION MANUAL PIZZA OVEN

10725974

INTRODUKTION

Mange tak fordi du har valgt et produkt fra Salling. Dermed har du erhvervet et kvalitetsprodukt som opfylder alle gældende krav til præstation og sikkerhedsstandarder i EU. For at sikre en korrekt behandling og en lang levetid anbefaler vi, at du overholder nedenstående anvisninger.

Du bedes læse vejledningen og især sikkerheds anvisningerne omhyggeligt igennem, inden du tager produktet i brug. Opbevar denne betjeningsvejledning, og overlad altid kun produktet til andre sammen med betjeningsvejledningen.

GENERELLE SIKKERHEDSFORANSTALTNINGER

- Forkert brug af produktet kan medføre personskade og beskadige produktet.
- Anvend kun produktet til det, det er beregnet til. Producenten er ikke ansvarlig for skader, der opstår som følge af forkert brug eller håndtering.
- Anbring altid produktet på et tørt, plant og stabilt underlag på god afstand af bordkant eller lignende.
- Produktet er udelukkende beregnet til husholdningsbrug. Produktet må ikke anvendes til erhvervsbrug.
- Produktet må kun sluttes til 220-240V~, 50/60Hz.
- Produktets motordel/elektronik, ledning og stikket må ikke nedsænkes i vand, og der må ikke trænge vand i motordel/elektronik.
- Rør aldrig ved produktet, ledningen eller stikkontakten med våde eller fugtige hænder.
- Udsæt ikke produktet for direkte sollys, høje temperaturer, fugt, støv eller ætsende stoffer.
- Forlad aldrig produktet, når det er tændt.
- Når produktet er i brug, bør det holdes under konstant opsyn.
- Når produktet bruges skal børn der opholder sig i nærheden af

den altid holdes under opsyn.

- Børn må ikke lege med produktet.
- Produktet kan indeholde skarpe dele og bør derfor opbevares utilgængeligt for børn.
- Brug kun tilbehør, der følger med produktet eller er anbefalet af producenten.
- Produktet må bruges af børn på 8 år eller derover og personer med reducerede fysiske, sensoriske eller mentale evner, eller som mangler erfaring og viden, hvis de er under opsyn eller har modtaget instruktion i sikker brug af produktet og forstår de involverede farer.
- Hold produktet og ledningen uden for rækkevidden af børn under 8 år.
- Rengøring og vedligeholdelse må ikke udføres af børn med mindre de er ældre end 8 år og under opsyn.

LEDNING OG STIK

- Lad ikke ledningen hænge ud over bordkanten.
- Hold ledningen og produktet væk fra varmekilder, varme genstande og åben ild.
- Tag stikket ud af stikkontakten før rengøring, og hvis produktet ikke er i brug. Undlad at trække i ledningen, når du tager stikket ud af stikkontakten, men tag fat om selve stikket.
- Sørg for, at ledningen er rullet helt ud.
- Kontrollér jævnligt, om ledningen eller stikket er beskadiget, og brug ikke produktet, hvis dette er tilfældet, eller hvis det har været tabt på gulvet, tabt i vand eller er blevet beskadiget på en anden måde.
- Hvis produktet, ledningen eller stikket er beskadiget, skal produktet efterses og om nødvendigt repareres af en autoriseret reparatør. Forsøg aldrig at reparere produktet selv. Kontakt købsstedet, hvis der er tale om en reparation, der falder ind under reklamationsretten. Hvis der foretages uautoriserede indgreb i produktet, bortfalder reklamationsretten.

REKLAMATIONSRETEN GÆLDER IKKE:

- Hvis ovennævnte ikke iagttages.
- Hvis der har været foretaget uautoriserede indgreb i produktet.
- Hvis produktet har været misligholdt, udsat for en voldsom behandling eller lidt anden form for overlast.

BORTSKAFFELSE AF PRODUKTET

Brugte produkter må ikke smides i husholdningsaffaldet. Iht. lovforskrifterne skal det udtjente produkt bortskaffes på ordentlig vis. Derved genanvendes de brugbare materialer, og miljøet skånes. Nærmere informationer fås hos den ansvarlige kommunale myndighed eller det lokale bortskaffelsesfirma. Produktet er forsynet med følgende logo:




FARE

- Lad ikke vand eller anden væske løbe ind i pizzaovnen. Der er risiko for elektrisk stød.
- Dæk ikke luftudtaget til, når pizzaovnen er i brug.
- Rør aldrig overfladen og de indvendige sider af pizzaovnen under brug.
- Overfladetemperaturen kan blive høj under brugen.
- Under bagningen afgives der varm damp gennem åbningerne til luftudtaget. Hold hænder og ansigt i sikker afstand fra dampen og åbningerne til luftudtaget. Pas også på varm damp og luft, når du tager pizzaen ud af pizzaovnen.
- Blæseren kører videre, når pizzaovnen slukkes, for at køle pizzaovnen hurtigt ned. Rør ikke pizzaovnen, før den er kølet ned til en acceptabel temperatur. Længden af nedkølingsprocessen afhænger af bagetemperaturen. Nedkølingen kan tage længere tid, hvis pizzaovnen var indstillet til en meget høj temperatur. Det anbefales at lade pizzaovnen køle ned automatisk, da blæseren automatisk stopper, når temperaturen er reduceret tilstrækkeligt.

FORSIGTIG

- Sæt pizzaovnen på en vandret, plan og stabil overflade.
- Pizzaovnen er kun beregnet til husholdningsbrug.
- Træk altid stikket ud af stikkontakten, når pizzaovnen ikke bruges.

KEND DIN PIZZAOVN

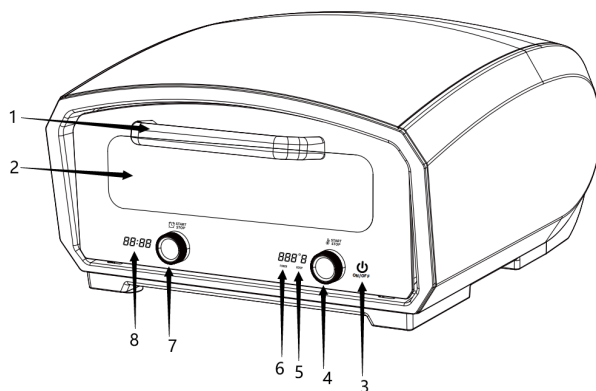

1. Håndtag
2. Glaslåge
3. Tænd/sluk-knap
4. Knap til justering af temperatur og knap til bekræftelse
5. Kontrollampe for temperatur klar
6. Kontrollampe for strøm
7. Knap til justering af tid og knap til bekræftelse
8. Tidsvisning

FUNKTIONSIKON:



1. **ON/OFF** Tænd/sluk-knap:
 - Sæt ledningen i en stikkontakt med jordforbindelse, når du skal bruge pizzaovnen. Pizzaovnen bipper en enkelt gang og tænder displayet. Tryk på tænd/sluk-knappen for at aktivere standbytilstanden.
 - Tryk længe på knappen for at slukke apparatet.



2. Knap til justering af temperatur og knap til bekræftelse:
 - Når apparatet er tændt med et tryk på tænd/sluk-knappen, skal du dreje denne knap for at vælge den ønskede temperatur i intervallet 150-430 °C. Den valgte temperatur vises. Tryk derefter på knappen for at starte forvarmningen/tilberedningen.
 - Pizzastenen begynder at dreje rundt, og pizzaovnlyset tændes automatisk.
 - Kontrollampen for strøm lyser rødt, når apparatet er i brug, og angiver, at pizzaovnen varmer op.
 - Apparatet forvarmer automatisk i ca 17-18 minutter.
 - Når pizzaovnen er forvarmet, lyder der et bip, og ikonet for temperatur klar lyser for at vise, at pizzaovnen har nået den indstillede temperatur og nu er klar til brug.
 - Et nyt tryk på knappen sætter tilberedningen på pause.



3. Knap til justering af tid og knap til bekræftelse:
 - Drej knappen for at vælge den ønskede tilberedningstid fra 30 sekunder til 60 minutter. Den valgte tid vises. Tryk derefter på knappen for at starte nedtællingen.
 - Et nyt tryk på knappen sætter nedtællingen på pause.
 - Der lyder et bip, når timeren når 00:00. Nu kan du tage pizzaen ud og nyde den!

VIGTIGT: Bemærk, at udløbet af timerindstillingen ikke betyder, at opvarmningen er afsluttet. Opvarmningen standser først, når du igen trykker på knappen til justering af temperaturen eller trykker længe på tænd/sluk-knappen!

FØR FØRSTE BRUG

Du skal lade pizzaovnen være tændt i op til 30 minutter for at fjerne eventuelle beskyttelsesmaterialer fra varmeelementerne. Sørg for, at området er godt udluftet, da pizzaovnen kan udsende dampe. Dampene er ufarlige og påvirker ikke pizzaovnens ydelse.

1. Fjern og bortskaf på sikker vis eventuel emballage fra pizzaovnen.
2. Tag pizzastenen ud af emballagen. Tør overfladen af med en fugtig klud. Tør pizzastenen grundigt, og anbring den i ovnrummet.
3. Tør det grundigt og læg pizzastenen i ovnrummet.
4. Tør undersiden af pizzaovnen af med en blød, fugtig svamp.
5. Anbring pizzaovnen på en flad, tør overflade, og sørg for, at der er mindst 10 cm frirum på begge sider af pizzaovnen og 15 cm over pizzaovnen.
6. Rul netledningen helt ud, og sæt strømstikket i en jordforbundet stikkontakt.

7. Vælg den ønskede temperatur og tid ved hjælp af de relevante knapper.
8. Lad pizzaovnen køre i op til 30 minutter.
9. Pizzaovnen er nu klar til brug.

BETJENING AF DIN PIZZAOVN

Da der genereres meget høje temperaturer, skal du sikre, at pizzaovnen er anbragt i et område med god udluftning, da der kan udvikles røg under tilberedningen.

1. Læg pizzastenen korrekt i ovnrummet. Når du bruger pizzastenen, skal du altid forvarme pizzaovnen med stenen sat i. Pizzastenen drejer automatisk under opvarmningen.
2. Tænd pizzaovnen ved at trykke på tænd/sluk-knappen . Vælg den ønskede temperatur ved at dreje knappen i højre side. Tryk derefter på knappen for at starte forvarmningen. Det kræver ca. 17-18 minutters forvarmning at nå maksimumstemperaturen.
3. Du kan gøre pizzaerne klar under forvarmningen.
4. Når pizzaovnen når den indstillede temperatur, tændes den grønne kontrollampe for klar. Efter klargøringen af pizzaerne kan du bruge en pizzaspade (medfølger ikke) til forsigtigt at skubbe pizzaen over på den opvarmede pizzasten.
5. Indstil timeren ved hjælp af timerknappen, og tryk på knappen for at starte nedtællingen. Der lyder et bip, når timeren når 00:00.
6. Åbn lågen, og tag pizzaen ud. Nyd den.
7. Apparatet slukker ikke automatisk, når nedtællingen er slut. Det vil være i standbystatus for forvarmning, så du hurtigt kan bage den næste pizza.
8. For at slukke pizzaovnen skal du trykke på tænd/sluk-knappen i to sekunder. Displayet slukker helt.
9. TIPS: Apparatet har en hukommelsesfunktion. Når du slukker og tænder igen, huskes indstillingen for temperatur og tid fra sidste gang, og du kan lave en pizza igen på samme måde.



BEMÆRK.

Når du skal transportere produktet, er det tilrådeligt at tage pizzastenen ud af pizzaovnen og indpakke den særskilt for at forhindre eventuel skade i transit.



BEMÆRK.

Produktet afgiver varme udvendigt, grundet den meget høje temperatur inde i ovnrummet. Det er derfor vigtigt at du tager dine forholdsregler når du placerer ovnen på en overflade/bordplade.



BEMÆRK.

Sørg for at forvarme pizzaovnen, før du lægger pizzaen i hullet. Hvis du bager flere pizzaer, skal

du vente, indtil pizzaovnen er forvarmet, og advarslen høres kontinuerligt, før du lægger den næste pizza i.

READY-indikatoren lyser ikke, før temperaturen når det indstillede niveau. Det tager normalt flere minutter, før du kan begynde at bage din pizza. Hvis du bager forskellige typer pizza, er det tilrådeligt, at du starter med den type, der kræver den laveste temperaturindstilling.



BEMÆRK.

Sikkerhed er af den allerstørste vigtighed for os. Vi anbefaler kraftigt, at du nøje overvåger pizzaovnen, mens du bruger bagefunktioner med høj temperatur, da maden hurtigt kan bages for meget og udgøre en risiko for brand.

ANBEFALET MENUER

Følgende menuer er kun forslag, og de er kun til reference:

PIZZA TYPE	Foreslå temperatur	Foreslå tidspunkt
NEAPOLITAN	430°C	3min
THIN&CRISPY	375°C	2.5min
NEW YORK	400°C	4min
FROZEN	250°C	9min

Det anbefales ikke at grille kød.

Hvis du vil grille kød, skal du sørge for at placere det på en bageplade (medfølger ikke).

Ellers vil fedtet fra kødet dryppe ned på pizzastenen, hvilket gør den meget svær at rengøre, hvilket kan forkorte pizzastenens levetid.

VEDLIGEHOLDELSE OG RENGØRING

Advarsel: Sørg for at trække ledningen til ovnen ud af stikkontakten, og lad ovnen køle ned før rengøring.

Du kan eventuelt rengøre pizzaovnens overflade og hulrumsvæg med en fugtig svamp, klud eller nylonskuresvamp med et mildt rengøringsmiddel.

Brug IKKE skuresvampe i ståluld, slibende rengøringsmidler. Du må heller ikke skrabe ovnens overflade og hulrumsvæg med et metalredskab, da disse metoder kan beskadige den kontinuerlige rene belægning.

Du kan tørre ovnlågen med en fugtig svamp og derefter tørre den af med et stykke køkkenrulle eller et viskestykke.

Det anbefales at lade lågen til ovnen stå åben med henblik på nedkøling, når du har bagt en pizza.

Da pizzaovnen når høje temperaturer under drift, er det meget vigtigt, at du venter, indtil den er kølet helt ned, før du rengør den indvendigt eller pizzastenen eller trækker strømkablets stik ud af stikkontakten.

Den rengjorte pizzasten skal være helt tør inden brug.

Hvis pizzastenen ikke er helt tør, vil forvarmningen tage længere tid, og der kan dannes vanddråber på glasdøren under forvarmningen (disse forsvinder igen).

OPBEVARING

Du kan bruge pizzaovnen udendørs.

Opbevar apparatet et tørt sted indendørs, når det ikke i brug.

Opbevar pizzastenen i pizzaovnen. Opbevar IKKE mad eller andre genstande i ovnrummet.

Støt dig ikke mod toppen af pizzaovnen, og læg ikke genstande oven på pizzaovnen.

Hold pizzaovnen ren under opbevaringen med et ovnomslag (medfølger ikke).

FEJLFINDING

Problem: Pizzaovnen bipper tre gange og viser samtidig teksten E1 eller E2 på displayet.

Pizzaovnen holder op med at fungere. Det betyder, at der er en fejl i temperatursonden.

Løsning: Sluk pizzaovnen, træk stikket ud, og sæt det i igen. Hvis problemet ikke er løst, skal produktet indleveres til reparation det sted, hvor produktet er købt.

TEKNISKE DATA

Artikelnr. 10725974

220-240V~, 50/60 Hz

1765-2100 Watt

PRODUCENT

Epiq ApS

Krøyer Kielbergs Vej 3, 3. th

8660 Skanderborg, Danmark

www.epiq.dk

Vi tager forbehold for trykfejl.

INTRODUCTION

Thank you for choosing a product from Salling. You have acquired a quality product which meets all applicable performance and safety standards in the EU. In order to ensure proper treatment and a long product life, we recommend that you comply with the instructions below.

Please read the manual and especially the safety instructions carefully before using the product. Keep this manual and provide it for referral along with the product when others are using it.

GENERAL SAFETY INSTRUCTIONS

- Improper use of the product can cause personal injury and damage.
- Only use the product for what it is intended. The manufacturer is not liable for damages arising from improper use or handling.
- Always place the product on a dry, flat and stable surface well away from table edge or similar.
- The product is intended for household use only. The product is not for professional use.
- The product may only be connected to 220-240V~, 50/60Hz.
- The product engine/electronics, cord or plug cannot be submerged in water, and no water may get in contact with the engine/electronics.
- Never touch the product, cord or plug with wet or damp hands.
- Do not expose the product to direct sunlight, high temperatures, humidity, dust or corrosive substances.
- Never leave the product when it is turned on.
- When the product is in use, it should be kept under constant supervision. Children should always be supervised when using the product to ensure that they do not play with the product. The product is not a toy.
- The product may have sharp parts and must, therefore, be kept

out of reach of children.

- Only use the accessories that come with the product or that are recommended by the manufacturer.
- This product can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.
- Keep the product and its cord out of reach of children less than 8 years of age.
- Cleaning and user maintenance shall not be made by children without supervision.

CORD AND PLUG

- Do not let the cord hang over the edge.
- Keep the cord and the product away from heat sources, hot objects and open flames.
- Unplug the power cord before cleaning and if the product is not in use. Do not pull the cord when removing the plug from the socket, rather grasp the plug itself.
- Make sure that the cord is fully extended.
- Check regularly that the cord and the plug are not damaged and do not use the product if this is the case, or if it has been dropped on the floor, dropped in water or damaged in another way.
- If the product or plug is damaged, the product must be inspected and, if necessary, repaired by an authorised repairer. Never try to repair the product yourself. Please, contact the store to see if there is a repair that falls under warranty. Tampering of the product will void the warranty.

RULES OF COMPLAINTS THE WARRANTY DOES NOT APPLY:

- If the above is not observed.
- If there has been unauthorised intervention of the product.
- If the product has been mishandled, subjected to rough

treatment or some other form of damage.

PRODUCT DISPOSAL

Used product should not be disposed as household waste. According to legislation, the product should be disposed of properly so that the materials can be recycled in an environmentally friendly manner. Further information is available from the responsible local authority or local disposal company. The product is equipped with the following logo:




DANGER

- Do not let any water or other liquid enter the appliance to prevent electric shock.
- Do not cover the air outlet while the appliance is in use.
- Never touch the surface and inside of the appliance while it is in use.
- The surface temperature may be high when the appliance is in use.
- During baking, hot steam is released through the air outlet openings. Keep your hands and face at a safe distance from the steam and from the air outlet openings. Also, be careful of hot steam and air when you remove the pizza from the appliance.
- After turning off the pizza oven, the fan will continue to run in order to cool down the appliance quickly. Please do not touch the pizza oven until it has cooled down to an acceptable temperature. The duration of the cooling process depends on the baking temperature. If the pizza oven was set to a very high temperature, it may take longer to cool down. It is recommended to allow the pizza oven to cool down automatically, as the fan will stop running on its own once the temperature has sufficiently decreased.

CAUTION

- Ensure the appliance is placed on a horizontal, even, and stable surface.
- This appliance is designed for household use only.
- Always unplug the appliance while not in use.

KNOW YOUR PIZZA OVEN

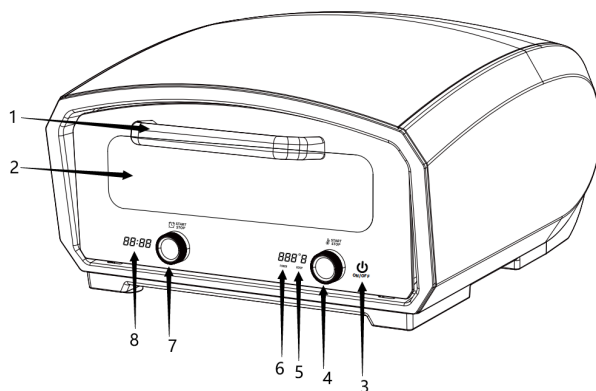

1. Door handle
2. Glass door
3. ON/OFF button
4. Temperature adjustment knob & Confirm knob
5. Temperature READY indicator
6. Power on indicator
7. Time adjustment knob & Confirm knob
8. Time display

ICON FUNCTION:



1. **ON/OFF** On/Off Power button:

- To use the pizza oven, plug it into a grounded power outlet. The pizza oven will emit a single alert and illuminate the entire display. Press this power button to enter standby mode.
- Long-press this button to turn off the appliance.



2. Temperature adjustment knob & Confirm knob:

- Once the appliance is in the operational state after pressing the Power button, turn this knob to select the desired temperature from 150°C to 430°C. The chosen temperature will be displayed, then press this knob to start preheating/cooking.
- The Pizza stone will start to rotate, and the oven light will turn on automatically.
- The POWER indicator will light up in red while in use, indicating that the pizza oven is heating.
- The appliance will automatically preheat for approximately 17-18 minutes.
- After preheating is finished, an alert will sound, and the Temperature READY light will illuminate, indicating that the pizza oven has reached the set temperature and is now ready to cook.
- Pressing this knob again can pause the cooking.



3. Time adjustment knob & Confirm knob:

- Turn this knob to select the desired time from 30 seconds to 60 minutes. The chosen time will be displayed, then press this knob to start the countdown.
- Pressing this knob again can pause the countdown.
- When the timer reaches 00:00, an alert will sound. Please take out the pizza and enjoy it!

IMPORTANT: Please note that the end of the timer cycle does not mean the heating has finished. The heating will not stop unless you press the temperature adjustment knob again or long-press the ON/OFF button!

BEFORE FIRST USE

Running the oven empty for up to 30 minutes is necessary to remove any protective substances on the heating elements. Ensure that the area is well-ventilated, as the pizza oven may emit vapors. These vapors are safe and will not affect the performance of the pizza oven.

1. Remove and safely discard any packing material from the pizza oven.
2. Remove the pizza stone from its packaging. Gently wipe the top surface with a damp cloth.
3. Dry it thoroughly and place the pizza stone in the oven cavity.
4. Wipe the inside of the oven with a soft, damp sponge.
5. Place the pizza oven on a flat, dry surface, ensuring there is a minimum of 4 inches (10cm) of space on both sides of the pizza oven and 6 inches (15cm) above.

6. Unwind the power cord completely and insert the power plug into a grounded power outlet.
7. Select the desired temperature and time by using the appropriate buttons.
8. Let the pizza oven run for up to 30 minutes.
9. The pizza oven is now ready to use.

OPERATING YOUR PIZZA OVEN

Due to the extremely high temperatures being achieved, please make sure to place the oven in a well-ventilated area, as it may emit smoke during cooking.

1. Insert the pizza stone into the pizza oven cavity correctly. When using the pizza stone, always preheat the oven with the stone in place. The pizza stone will remain rotating automatically during heating.
2. Turn on the pizza oven by pressing the power  button. Choose the desired temperature by turning the knob on the right, then press the knob to start preheating. Maximum temperature requires approximately 17-18 minutes of preheating time.
3. During preheating, you can prepare the pizzas.
4. When the Pizza Oven reaches the set temperature, the green READY indicator will turn on. After your pizzas have been prepared, use the pizza peel (not included) to carefully slide the pizza onto the heated pizza stone.
5. Set the timer using the timer knob and press the timer knob to start the countdown. When the timer reaches 00:00, an alert will sound.
6. Open the pizza oven door, remove your pizza, and enjoy it.
7. The appliance will not turn off automatically after the countdown finishes. It will remain in standby preheat status to quickly bake the next pizza.
8. To turn off the pizza oven at any time, long press the ON/OFF button for 2 seconds. The entire display will turn off.
9. TIPS: This appliance has a memory function, once turn off and turn on again, it will records the temperature and time setting for last time, then you can make the same effect Pizza type.



ATTENTION.

For product transportation, it is advisable to remove the pizza stone from the pizza oven and pack it separately to avoid any potential damage during transit.



ATTENTION.

The product emits heat externally due to the very high temperature inside the oven chamber. Therefore, it is important that you take precautions when placing the oven on a surface/countertop.



ATTENTION.

Make sure to preheat the pizza oven before placing the pizza in the cavity. If you're cooking multiple pizzas, wait until the preheating process is complete and the alert sounds continuously before loading the next pizza.

The READY indicator will not illuminate until the temperature reaches the set level, which typically takes several minutes before you can start baking your pizza. If you are preparing different types of pizza, it is advisable to start with the type that requires the lowest temperature setting.

 ATTENTION.

Safety is of utmost importance to us. We strongly advise you to closely monitor the pizza oven when using high-temperature cooking functions, as your food can quickly become overcooked and may pose a fire risk.

 WARNING

After cooking, it is essential to allow the pizza oven to cool completely before unplugging it from the wall. This practice helps safeguard the internal electrical components.

RECOMMENDED MENUS

The following menus are only suggestions and are for reference only.

PIZZA TYPE	Suggest Temperature	Suggest time
NEAPOLITAN	430°C	3mins
THIN&CRISPY	375°C	2.5mins
NEW YORK	400°C	4mins
FROZEN	250°C	9mins

Grilling meat is not recommended.

If you want to grill meat, make sure to place it on a baking tray (not included).

Otherwise, the fat from the meat will drip onto the pizza stone, making it very difficult to clean, which can shorten the lifespan of the stone.

CARE AND CLEANING

Warning: Ensure to unplug the pizza oven from the power source and allow it to cool down before cleaning.

If desired, you can clean the pizza oven’s surface and cavity wall with a damp sponge, cloth, or a nylon scouring pad along with a mild detergent.

DO NOT use steel wool scouring pads, abrasive cleaners, or scrape the pizza oven surface and cavity wall with a metal utensil, as these methods may damage the continuous clean coating.

You can wipe the oven door with a damp sponge and then dry it using a paper or cloth towel.

Since the pizza oven reaches high temperatures during operation, it's essential to wait for it to cool completely before cleaning the inside or pizza stone or unplugging the power cord. After baking pizza, it is recommended to open the door to allow the oven to cool down.

The cleaned pizza stone must be completely dry before use.

If the pizza stone is not fully dry, the preheating time will be longer, and water droplets may form on the glass door during preheating (these will disappear again).

STORING

You can use the oven outside.

Store it indoors in dry conditions when not in use.

Only store the baking stone inside the oven, **DO NOT** store food or other items in the oven cavity.

Do not lean on or put items on top of your oven.

Keep your oven clean while in storage with the Oven Cover (not included).

TROUBLESHOOTING

Problem: When the oven beeps three times, simultaneously displaying E1 or E2 on the screen, the oven stops working. This indicates that the temperature probe is malfunctioning.

Solution: Turn off the oven and re-plug it. If the issue is not resolved, the product must be returned for repair at the place of purchase.

TECHNICAL DATA

Article No. 10725974

220-240V~, 50/60Hz

1765-2100 Watt

PRODUCER

Epiq ApS

Krøyer Kielbergs Vej 3, 3. th

8660 Skanderborg, Denmark

www.epiq.dk

We cannot be held responsible for any printing errors.