

KØKKENHEF



INSTRUCTION MANUAL DOUBLE COOKING HOTPLATE

10662226

INTRODUKTION

Mange tak fordi du har valgt et produkt fra Køkkenchef. Dermed har du erhvervet et kvalitetsprodukt som opfylder alle gældende krav til præstation og sikkerhedsstandarder i EU. For at sikre en korrekt behandling og en lang levetid anbefaler vi, at du overholder nedenstående anvisninger.

Du bedes læse vejledningen og især sikkerheds anvisningerne omhyggeligt igennem, inden du tager produktet i brug. Opbevar denne betjeningsvejledning, og overlad altid kun produktet til andre sammen med betjeningsvejledningen.

GENERELLE SIKKERHEDSFORANSTALTNINGER

- Forkert brug af produktet kan medføre personskade og beskadige produktet.
- Anvend kun produktet til det, det er beregnet til. Producenten er ikke ansvarlig for skader, der opstår som følge af forkert brug eller håndtering.
- Anbring altid produktet på et tørt, plant og stabilt underlag på god afstand af bordkant eller lignende.
- Produktet er udelukkende beregnet til husholdningsbrug. Produktet må ikke anvendes til erhvervsbrug.
- Produktet må kun sluttes til 220-240V~, 50/60Hz.
- Produktets motordel/elektronik, ledning og stikket må ikke nedsænkes i vand, og der må ikke trænge vand i motordel/elektronik.
- Rør aldrig ved produktet, ledningen eller stikkontakten med våde eller fugtige hænder.
- Udsæt ikke produktet for direkte sollys, høje temperaturer, fugt, støv eller ætsende stoffer.
- Forlad aldrig produktet, når det er tændt.
- Når produktet er i brug, bør det holdes under konstant opsyn.
- Når produktet bruges skal børn der opholder sig i nærheden af

den altid holdes under opsyn.

- Børn må ikke lege med produktet.
- Produktet kan indeholde skarpe dele og bør derfor opbevares utilgængeligt for børn.
- Brug kun tilbehør, der følger med produktet eller er anbefalet af producenten.
- Produktet må bruges af børn på 8 år eller derover og personer med reducerede fysiske, sensoriske eller mentale evner, eller som mangler erfaring og viden, hvis de er under opsyn eller har modtaget instruktion i sikker brug af produktet og forstår de involverede farer.
- Hold produktet og ledningen uden for rækkevidden af børn under 8 år.
- Rengøring og vedligeholdelse må ikke udføres af børn med mindre de er ældre end 8 år og under opsyn.

LEDNING OG STIK

- Lad ikke ledningen hænge ud over bordkanten.
- Hold ledningen og produktet væk fra varmekilder, varme genstande og åben ild.
- Tag stikket ud af stikkontakten før rengøring, og hvis produktet ikke er i brug. Undlad at trække i ledningen, når du tager stikket ud af stikkontakten, men tag fat om selve stikket.
- Sørg for, at ledningen er rullet helt ud.
- Kontrollér jævnligt, om ledningen eller stikket er beskadiget, og brug ikke produktet, hvis dette er tilfældet, eller hvis det har været tabt på gulvet, tabt i vand eller er blevet beskadiget på en anden måde.
- Hvis produktet, ledningen eller stikket er beskadiget, skal produktet efterses og om nødvendigt repareres af en autoriseret reparatør. Forsøg aldrig at reparere produktet selv. Kontakt købsstedet, hvis der er tale om en reparation, der falder ind under reklamationsretten. Hvis der foretages uautoriserede indgreb i produktet, bortfalder reklamationsretten.

REKLAMATIONSRETEN GÆLDER IKKE:


- Hvis ovennævnte ikke iagttages.
- Hvis der har været foretaget uautoriserede indgreb i produktet.
- Hvis produktet har været misligholdt, udsat for en voldsom behandling eller lidt anden form for overlast.

BORTSKAFFELSE AF PRODUKTET

Brugte produkter må ikke smides i husholdningsaffaldet. Iht. lovforskrifterne skal det udtjente produkt bortskaffes på ordentlig vis. Derved genanvendes de brugbare materialer, og miljøet skånes. Nærmere informationer fås hos den ansvarlige kommunale myndighed eller det lokale bortskaffelsesfirma. Produktet er forsynet med følgende logo:



KEND DIN DOBBELTE KOGEPLADE

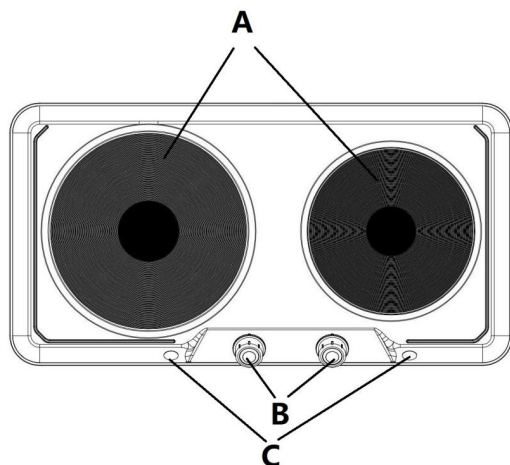

- A. Varmeområde/Kogeplader
- B. Temperaturknap
- C. Kontrollampe

FØR FØRSTE BRUG

- Fjern alle indpakningsmaterialer, før du tager kogepladerne i brug.
- Kontrollér, at spændingen på produktets mærkeplade matcher spændingen på brugsstedet.
- Vælg en passende placering på en tør, jævn overflade og tæt på en stikkontakt.
- Kontrollér, at knapperne står på OFF (MIN vender opad). Slut til.
- Den usynlige beskyttende belægning skal fjernes, inden du tager apparatet i brug. Dette gøres ved at stille temperaturknapperne på højeste indstilling og lade apparatet være tændt i ca. 4 minutter. Der forekommer en vis røgudvikling, så sørg for god udluftning. Sluk kogepladen, og lad den køle helt af. Kogepladen er nu klar til brug.

VELEGNEDE GRYDER:

Stor kogeplade: Kontrollér, at grydens bund er plan og har en diameter på ikke under 200 mm.

Lille kogeplade: Kontrollér, at grydens bund er plan og har en diameter på ikke under 160 mm.







BRUG

- Brug altid fladbundede gryder, der har god kontakt med kogepladen. Ideelt bør gry-

dens bund være samme størrelse som kogepladen.

- Vælg temperatur. Kogepladen kan indstilles til en række forskellige temperaturer. Brug de lavere varmeindstillinger (min til 4) til simring og forsigtig opvarmning og de højere indstillinger [5 til MAX] til kogning.
- Pga. kogepladens konstruktion vil der forekomme restvarme, efter at kogepladen er slukket. Dette kan anvendes til at holde maden varm i en kortere periode.
- Efter brugen skal du dreje temperaturknappen over på "MIN" og koble apparatet fra lysnettet.

ADVARSEL

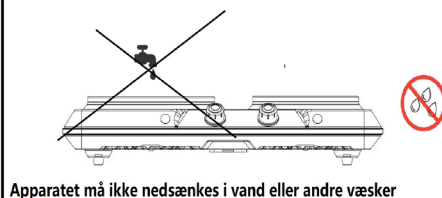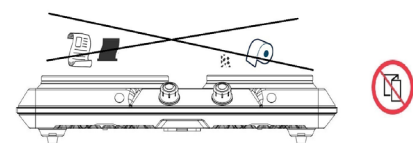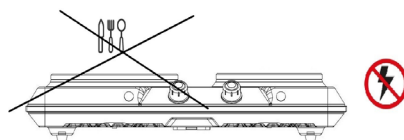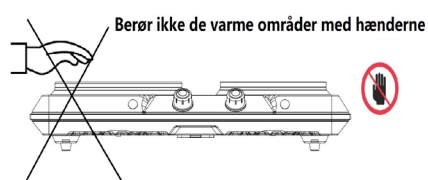

RENGØRING

- Kobl apparatet fra lysnettet, og lad det køle af inden rengøring.
- Tør over med en fugtig klud.
- Brug ikke slibende skuresvampe eller ståluld til rengøringen, da dette kan beskadige belægningen.
- Apparatet må ikke nedsænkes i vand eller andre væsker.

TEKNISKE DATA

Artikelnr. 10662226
220-240V~, 50/60Hz
1900-2250 Watt

PRODUCENT

Epiq ApS
Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Danmark
www.epiq.dk

Vi tager forbehold for trykfejl.

INTRODUCTION

Thank you for choosing a product from Køkkenchef. You have acquired a quality product which meets all applicable performance and safety standards in the EU. In order to ensure proper treatment and a long product life, we recommend that you comply with the instructions below.

Please read the manual and especially the safety instructions carefully before using the product. Keep this manual and provide it for referral along with the product when others are using it.

GENERAL SAFETY INSTRUCTIONS

- Improper use of the product can cause personal injury and damage.
- Only use the product for what it is intended. The manufacturer is not liable for damages arising from improper use or handling.
- Always place the product on a dry, flat and stable surface well away from table edge or similar.
- The product is intended for household use only. The product is not for professional use.
- The product may only be connected to 220-240V~, 50/60Hz.
- The product engine/electronics, cord or plug cannot be submerged in water, and no water may get in contact with the engine/electronics.
- Never touch the product, cord or plug with wet or damp hands.
- Do not expose the product to direct sunlight, high temperatures, humidity, dust or corrosive substances.
- Never leave the product when it is turned on.
- When the product is in use, it should be kept under constant supervision. Children should always be supervised when using the product to ensure that they do not play with the product. The product is not a toy.
- The product may have sharp parts and must, therefore, be kept

out of reach of children.

- Only use the accessories that come with the product or that are recommended by the manufacturer.
- This product can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.
- Keep the product and its cord out of reach of children less than 8 years of age.
- Cleaning and user maintenance shall not be made by children without supervision.

CORD AND PLUG

- Do not let the cord hang over the edge.
- Keep the cord and the product away from heat sources, hot objects and open flames.
- Unplug the power cord before cleaning and if the product is not in use. Do not pull the cord when removing the plug from the socket, rather grasp the plug itself.
- Make sure that the cord is fully extended.
- Check regularly that the cord and the plug are not damaged and do not use the product if this is the case, or if it has been dropped on the floor, dropped in water or damaged in another way.
- If the product or plug is damaged, the product must be inspected and, if necessary, repaired by an authorised repairer. Never try to repair the product yourself. Please, contact the store to see if there is a repair that falls under warranty. Tampering of the product will void the warranty.

RULES OF COMPLAINTS THE WARRANTY DOES NOT APPLY:

- If the above is not observed.
- If there has been unauthorised intervention of the product.
- If the product has been mishandled, subjected to rough


treatment or some other form of damage.

PRODUCT DISPOSAL

Used product should not be disposed as household waste. According to legislation, the product should be disposed of properly so that the materials can be recycled in an environmentally friendly manner. Further information is available from the responsible local authority or local disposal company. The product is equipped with the following logo:



KNOW YOUR DOUBLE COOKING HOTPLATE

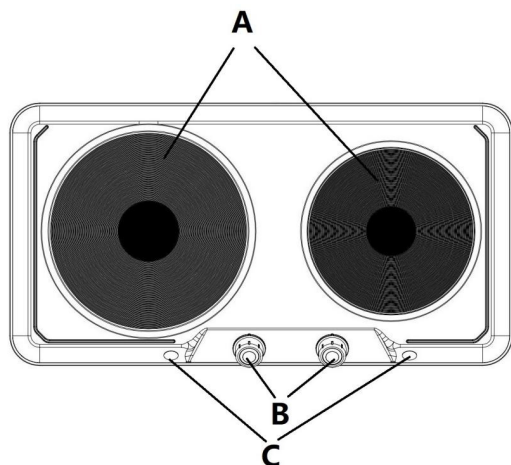

- A. Heating Area/Cooking Plates
- B. Temperature Controller
- C. Indicator Light

BEFORE FIRST USE

- Remove all packaging material before using the cooking plates.
- Check that the voltage marked on the product matches your supply voltage.
- Choose a suitable position close to an electrical socket on a dry and even surface.
- Ensure the controls are in the OFF position [MIN facing upwards]. Plug in.
- The invisible protective coating must be removed before using the appliance. To do this, set the controls to the maximum setting and leave switched on for approximately 4 minutes. Smoke will develop, so ensure the room is well-ventilated. Switch off the cooking plate and allow it to cool down completely. The cooking plate is now ready for use.

APPLICABLE POTS:

Large Heating Plate: Ensure the bottom of the pot is flat, with a bottom diameter of less than 200mm.

Small Heating Plate: Ensure the bottom of the pot is flat, with a bottom diameter of less than 160mm.







USE

- Always use flat-bottomed saucepans that make good contact with the cooking plate.

Ideally, the saucepan bases should be the same size as the cooking plate.

- Select the temperature. The cooking plate has a range of temperatures. Use the lower heat settings [min to 4] for simmering and gentle heating, and the high settings [5 to MAX] for boiling.
- Due to the cooking plate's construction, residual heat will remain after switching off. This may be used to keep food warm for a short period.
- After use, turn the temperature dial to "MIN" and unplug the appliance from the electrical outlet.

WARNING

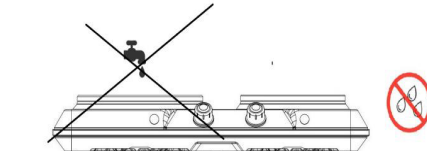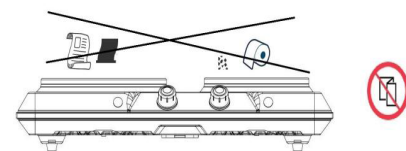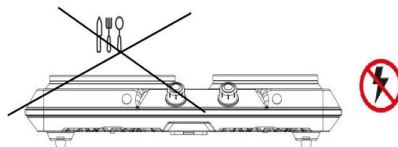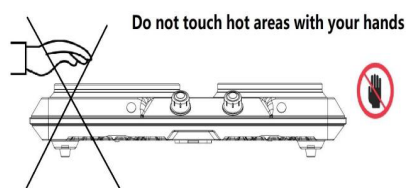

CLEANING

- Before cleaning, unplug the appliance and wait for it to cool down.
- Wipe with a moistened cloth.
- Do not clean with any abrasive scouring pad or steel wool, as this can damage the finish.
- Do not immerse in water or any other liquid.

TECHNICAL DATA

Article No. 10662226
220-240V~, 50/60Hz
1900-2250 Watt

PRODUCER

Epiq ApS
Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Denmark
www.epiq.dk

We cannot be held responsible for any printing errors.