

KØKKENHEF



INSTRUCTION MANUAL

SMOOTHIE TO GO

11152458

INTRODUKTION

Mange tak fordi du har valgt et produkt fra Køkkenchef. Dermed har du erhvervet et kvalitetsprodukt som opfylder alle gældende krav til præstation og sikkerhedsstandarder i EU. For at sikre en korrekt behandling og en lang levetid anbefaler vi, at du overholder nedenstående anvisninger.

Du bedes læse vejledningen og især sikkerheds anvisningerne omhyggeligt igennem, inden du tager produktet i brug. Opbevar denne betjeningsvejledning, og overlad altid kun produktet til andre sammen med betjeningsvejledningen.

GENERELLE SIKKERHEDSFORANSTALTNINGER

- Forkert brug af produktet kan medføre personskade og beskadige produktet.
- Anvend kun produktet til det, det er beregnet til. Producenten er ikke ansvarlig for skader, der opstår som følge af forkert brug eller håndtering.
- Anbring altid produktet på et tørt, plant og stabilt underlag på god afstand af bordkant eller lignende.
- Produktet er udelukkende beregnet til husholdningsbrug. Produktet må ikke anvendes til erhvervsbrug.
- Produktet må kun sluttes til 220-240V~, 50/60Hz.
- Produktets motordel/elektronik, ledning og stikket må ikke nedsænkes i vand, og der må ikke trænge vand i motordel/elektronik.
- Rør aldrig ved produktet, ledningen eller stikkontakten med våde eller fugtige hænder.
- Udsæt ikke produktet for direkte sollys, høje temperaturer, fugt, støv eller ætsende stoffer.
- Forlad aldrig produktet, når det er tændt.
- Når produktet er i brug, bør det holdes under konstant opsyn.
- Når produktet bruges skal børn der opholder sig i nærheden af

den altid holdes under opsyn.

- Børn må ikke lege med produktet.
- Produktet kan indeholde skarpe dele og bør derfor opbevares utilgængeligt for børn.
- Brug kun tilbehør, der følger med produktet eller er anbefalet af producenten.
- Produktet må ikke bruges af personer med nedsat følsomhed, fysiske eller mentale handicap, eller personer, som ikke er i stand til at betjene produktet, medmindre de overvåges eller instrueres i brugen af en person, som er ansvarlig for deres sikkerhed.

LEDNING OG STIK

- Lad ikke ledningen hænge ud over bordkanten.
- Hold ledningen og produktet væk fra varmekilder, varme genstande og åben ild.
- Tag stikket ud af stikkontakten før rengøring, og hvis produktet ikke er i brug. Undlad at trække i ledningen, når du tager stikket ud af stikkontakten, men tag fat om selve stikket.
- Sørg for, at ledningen er rullet helt ud.
- Kontrollér jævnligt, om ledningen eller stikket er beskadiget, og brug ikke produktet, hvis dette er tilfældet, eller hvis det har været tabt på gulvet, tabt i vand eller er blevet beskadiget på en anden måde.
- Hvis produktet, ledningen eller stikket er beskadiget, skal produktet efterses og om nødvendigt repareres af en autoriseret reparatør. Forsøg aldrig at reparere produktet selv. Kontakt købsstedet, hvis der er tale om en reparation, der falder ind under reklamationsretten. Hvis der foretages uautoriserede indgreb i produktet, bortfalder reklamationsretten.

REKLAMATIONSRETEN GÆLDER IKKE:

- Hvis ovennævnte ikke iagttages.
- Hvis der har været foretaget uautoriserede indgreb i produktet.
- Hvis produktet har været misligholdt, udsat for en voldsom behandling eller lidt anden form for overlast.

BORTSKAFFELSE AF PRODUKTET


Brugte produkter må ikke smides i husholdningsaffaldet. Iht. lovforskrifterne skal det udtjente produkt bortskaffes på ordentlig vis. Derved genanvendes de brugbare materialer, og miljøet skånes. Nærmere informationer fås hos den ansvarlige kommunale myndighed eller det lokale bortskaffelsesfirma. Produktet er forsynet med følgende logo:



VIGTIG SIKKERHEDSVEJLEDNING

- Apparatet er kun beregnet til husholdningsbrug og må ikke bruges til kommercielle eller industrielle formål.
- Knivene er meget skarpe og skal håndteres med forsigtighed.
- Betjen ikke apparatet i mere end 30 sekunder ad gangen.
- Kortvarige impulser på få sekunder hver giver de bedste resultater.
- Anbring aldrig varme væsker eller frugt med sten eller skaller i beholderen, da de kan beskadige knivene.

GENEREL BESKRIVELSE

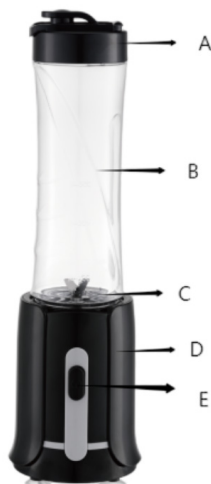

- A. Spildsikkert drikkelåg
- B. Sportsflaske
- C. Knivenhed
- D. Blenderfod
- E. Kontakt

BRUGSANVISNING

1. Placer sportsflasken på en flad overflade med den åbne ende vendt opad. Fyld flasken op til 600 ml mærket med dine ønskede ingredienser. Fastgør knivenheden forsvarligt til flaskens åbne ende.
2. Vend flasken på hovedet, flugt med pilene på foden, og placer flasken på blenderfoden.
3. Tryk flasken ned i foden, idet du samtidig trykker på tænd/sluk-knappen. Blenderen starter og bliver ved med at køre, så længe der trykkes på knappen.
Bemærk: For at betjene blenderen uden kontinuerligt at trykke på knappen skal du låse flasken på foden ved at dreje den med uret. Tryk derefter på tænd/sluk-knappen, hvorefter apparatet kører automatisk.
4. Efter blendingen skal du vende flasken om igen og stille den på en flad overflade. Fjern knivenheden, og sæt i stedet det spildsikre drikkelåg på.
5. Lad ikke apparatet køre i mere end 30 sekunder ad gangen. Hvis blendingen ikke gennemføres efter 30 sekunder, skal du slukke for apparatet og lade det hvile i nogle få minutter, inden du fortsætter.



NYTTIGE TIPS

- Tilsæt altid væsker til beholderen først, medmindre opskriften angiver andet.
- Skær hårde frugter og grøntsager i stykker med en størrelse på 1,8-2,5 cm.
- Fyld beholderen (B) ikke for meget. Hvis strømbasen holder op med at virke, skal du slukke for blenderen med det samme, trække blenderens stik ud og lade den køle af i mindst 15 minutter. Fjern alle overskydende ingredienser, før du fortsætter med at blende.
- Dette apparat kan ikke bruges til at mose kartofler, piske æggeghvider, blande fast dej eller hakke råt kød.
- For at opnå bedste resultater skal du tilsætte ingredienser i følgende rækkefølge: væsker, friske ingredienser, frossen frugt, yoghurt og is.

RENGØRING AF APPARATET:

Det er nemmest at rengøre apparatet og tilhørende dele lige efter brugen. Brug ikke slibemidler, grydesvampe, alkohol eller tilsvarende stoffer til at rengøre apparatet. Hoveddelen må aldrig nedsænkes i vand, skylle den under vandhanen eller lægge den i opvaskemaskinen.

1. Træk stikket til apparatet ud af stikkontakten, og fjern de aftagelige dele.
2. Rengør disse dele i lunkent vand med en lille mængde opvaskemiddel, skyl derefter under vandhanen, eller læg dem i opvaskemaskinen, hvis det er muligt.
3. Fjern eventuelt tætningsringen fra knivenheden, og skyl den grundigt med vand.
4. Aftør apparatets overflade kun med en fugtig klud.

TEKNISKE DATA

Artikelnr. 11152458
220-240V~, 50/60Hz
300 Watt
Kørselstid: 30 sekunder

PRODUCENT

Epiq ApS
Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Danmark
www.epiq.dk

Vi tager forbehold for trykfejl.

INTRODUCTION

Thank you for choosing a product from Køkkenchef. You have acquired a quality product which meets all applicable performance and safety standards in the EU. In order to ensure proper treatment and a long product life, we recommend that you comply with the instructions below.

Please read the manual and especially the safety instructions carefully before using the product. Keep this manual and provide it for referral along with the product when others are using it.

GENERAL SAFETY INSTRUCTIONS

- Improper use of the product can cause personal injury and damage.
- Only use the product for what it is intended. The manufacturer is not liable for damages arising from improper use or handling.
- Always place the product on a dry, flat and stable surface well away from table edge or similar.
- The product is intended for household use only. The product is not for professional use.
- The product may only be connected to 220-240V~, 50/60Hz.
- The product engine/electronics, cord or plug cannot be submerged in water, and no water may get in contact with the engine/electronics.
- Never touch the product, cord or plug with wet or damp hands.
- Do not expose the product to direct sunlight, high temperatures, humidity, dust or corrosive substances.
- Never leave the product when it is turned on.
- When the product is in use, it should be kept under constant supervision. Children should always be supervised when using the product to ensure that they do not play with the product. The product is not a toy.
- The product may have sharp parts and must, therefore, be kept

out of reach of children.

- Only use the accessories that come with the product or that are recommended by the manufacturer.
- The product must not be used by people with reduced sensitivity, physical or mental disability, or people who are not able to operate the product unless they are supervised or instructed by a person responsible for their safety.

CORD AND PLUG

- Do not let the cord hang over the edge.
- Keep the cord and the product away from heat sources, hot objects and open flames.
- Unplug the power cord before cleaning and if the product is not in use. Do not pull the cord when removing the plug from the socket, rather grasp the plug itself.
- Make sure that the cord is fully extended.
- Check regularly that the cord and the plug are not damaged and do not use the product if this is the case, or if it has been dropped on the floor, dropped in water or damaged in another way.
- If the product or plug is damaged, the product must be inspected and, if necessary, repaired by an authorised repairer. Never try to repair the product yourself. Please, contact the store to see if there is a repair that falls under warranty. Tampering of the product will void the warranty.

RULES OF COMPLAINTS THE WARRANTY DOES NOT APPLY:

- If the above is not observed.
- If there has been unauthorised intervention of the product.
- If the product has been mishandled, subjected to rough treatment or some other form of damage.

PRODUCT DISPOSAL

Used product should not be disposed as household waste. According to legislation, the product should be disposed of


properly so that the materials can be recycled in an environmentally friendly manner. Further information is available from the responsible local authority or local disposal company. The product is equipped with the following logo:



IMPORTANT SAFETY GUIDE

- This appliance is designed for home use only and must not be used for commercial or industrial purposes.
- The blades are sharp; handle with care.
- Do not operate the appliance for more than 30 seconds at a time.
- Short pulses of a few seconds each deliver the best results.
- Never place hot liquids or fruit with stones or shells in the container, as they may damage the blade.

GENERAL DESCRIPTION

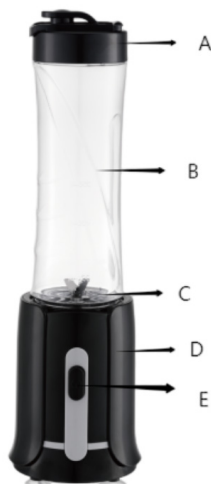

- A. Spill-proof drinking lid
- B. Sport bottle
- C. Blade assembly
- D. Blender base
- E. Power button

HOW TO USE

1. Place the sport bottle on a flat surface with the open end facing upward. Fill the bottle with your desired ingredients up to the 600 ml marking. Attach the blade assembly securely to the open end of the bottle.
2. Turn the bottle upside down, align the arrows on the base, and place the bottle onto the blender base.
3. Press the bottle down into the base while pressing the power button at the same time. The blender will start operating and will continue as long as the button is pressed.
Note: To operate the blender without continuous pressing, lock the bottle into the base by turning it clockwise. Then press the power button and the appliance will run automatically.
4. After blending, turn the bottle upright and place it on a flat surface. Remove the blade assembly and replace it with the spill-proof drinking lid.
5. Do not operate the appliance for longer than 30 seconds at a time. If blending is not complete after 30 seconds, switch off the appliance and allow it to rest for a few minutes before resuming.



HELPFUL HINTS

- Always add liquids to the container first, unless the recipe specifies otherwise.
- Cut hard fruits and vegetables into pieces 1.8–2.5 cm in size.
- Do not overfill the container (B). If the power base stops working, switch off the blender immediately, unplug it, and allow it to cool for at least 15 minutes. Remove any excess ingredients before continuing to blend.
- This appliance cannot be used to mash potatoes, whisk egg whites or dairy products, mix firm dough, or mince raw meat.
- For best results, add ingredients in the following order: liquids, fresh ingredients, frozen fruit, yogurt, and ice cream.

PRODUCT CLEANING:

Cleaning the appliance and its parts is easiest immediately after use. Do not use abrasives, scourers, alcohol, or similar substances to clean the appliance. Never immerse the body unit in water, rinse it under the tap, or place it in the dishwasher.

1. Unplug the appliance and remove all detachable parts.
2. Clean these parts in lukewarm water with a small amount of dishwashing liquid, then rinse under the tap, or clean them in the dishwasher if suitable.
3. If necessary, remove the rubber sealing ring from the blade unit and rinse it thoroughly with water.
4. Wipe the body unit clean using only a damp cloth.

TECHNICAL DATA

Article No. 11152458
220-240V~, 50/60Hz
300 Watt
KB Time: 30 seconds

PRODUCER

Epiq ApS
Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Denmark
www.epiq.dk

We cannot be held responsible for any printing errors.