

salling



INSTRUCTION MANUAL KETTLE

10482539

INTRODUKTION

Mange tak fordi du har valgt et produkt fra Salling. Dermed har du erhvervet et kvalitetsprodukt som opfylder alle gældende krav til præstation og sikkerhedsstandarder i EU. For at sikre en korrekt behandling og en lang levetid anbefaler vi, at du overholder nedenstående anvisninger.

Du bedes læse vejledningen og især sikkerheds anvisningerne omhyggeligt igennem, inden du tager produktet i brug. Opbevar denne betjeningsvejledning, og overlad altid kun produktet til andre sammen med betjeningsvejledningen.

GENERELLE SIKKERHEDSFORANSTALTNINGER

- Forkert brug af produktet kan medføre personskade og beskadige produktet.
- Anvend kun produktet til det, det er beregnet til. Producenten er ikke ansvarlig for skader, der opstår som følge af forkert brug eller håndtering.
- Anbring altid produktet på et tørt, plant og stabilt underlag på god afstand af bordkant eller lignende.
- Produktet er udelukkende beregnet til husholdningsbrug. Produktet må ikke anvendes til erhvervsbrug.
- Produktet må kun sluttes til 220-240V~, 50/60Hz.
- Produktets motordel/elektronik, ledning og stikket må ikke nedsænkes i vand, og der må ikke trænge vand i motordel/elektronik.
- Rør aldrig ved produktet, ledningen eller stikkontakten med våde eller fugtige hænder.
- Udsæt ikke produktet for direkte sollys, høje temperaturer, fugt, støv eller ætsende stoffer.
- Forlad aldrig produktet, når det er tændt.
- Når produktet er i brug, bør det holdes under konstant opsyn.
- Når produktet bruges skal børn der opholder sig i nærheden af

den altid holdes under opsyn.

- Børn må ikke lege med produktet.
- Produktet kan indeholde skarpe dele og bør derfor opbevares utilgængeligt for børn.
- Brug kun tilbehør, der følger med produktet eller er anbefalet af producenten.
- Produktet må kun anvendes sammen med medfølgende base.
- Undgå at spilde vand på basen.
- Overstigning af max vandstand kan forårsage udskydning af kogende vand.
- Fjern ikke låget mens vandet koger.
- På modeller med aftageligt låg, skal man sørge for at låget sidder korrekt så evt. damp ledes væk fra håndtaget.
- Varmelegemet kan være meget varmt efter brug grundet restvarme.
- Produktet må bruges af børn på 8 år eller derover og personer med reducerede fysiske, sensoriske eller mentale evner, eller som mangler erfaring og viden, hvis de er under opsyn eller har modtaget instruktion i sikker brug af produktet og forstår de involverede farer.
- Hold produktet og ledningen uden for rækkevidden af børn under 8 år.
- Rengøring og vedligeholdelse må ikke udføres af børn med mindre de er ældre end 8 år og under opsyn.

LEDNING OG STIK

- Lad ikke ledningen hænge ud over bordkanten.
- Hold ledningen og produktet væk fra varmekilder, varme genstande og åben ild.
- Tag stikket ud af stikkontakten før rengøring, og hvis produktet ikke er i brug. Undlad at trække i ledningen, når du tager stikket ud af stikkontakten, men tag fat om selve stikket.
- Sørg for, at ledningen er rullet helt ud.
- Kontrollér jævnligt, om ledningen eller stikket er beskadiget, og brug ikke produktet, hvis dette er tilfældet, eller hvis det har været

tabt på gulvet, tabt i vand eller er blevet beskadiget på en anden måde.

- Hvis produktet, ledningen eller stikket er beskadiget, skal produktet efterses og om nødvendigt repareres af en autoriseret reparatør. Forsøg aldrig at reparere produktet selv. Kontakt købsstedet, hvis der er tale om en reparation, der falder ind under reklamationsretten. Hvis der foretages uautoriserede indgreb i produktet, bortfalder reklamationsretten.

REKLAMATIONSRETEN GÆLDER IKKE:

- Hvis ovennævnte ikke iagttages.
- Hvis der har været foretaget uautoriserede indgreb i produktet.
- Hvis produktet har været misligholdt, udsat for en voldsom behandling eller lidt anden form for overlast.

BORTSKAFFELSE AF PRODUKTET

Brugte produkter må ikke smides i husholdningsaffaldet. Iht. lovforskrifterne skal det udtjente produkt bortskaffes på ordentlig vis. Derved genanvendes de brugbare materialer, og miljøet skånes. Nærmere informationer fås hos den ansvarlige kommunale myndighed eller det lokale bortskaffelsesfirma. Produktet er forsynet med følgende logo:



INSTRUKTIONSMANUAL

1. Basal anvendelse:

- [1]. Sæt basen på et tørt, glat og vandret plan, og sæt stikket i stikkontakten. Når kedlen sættes på basen, føres strømmen automatisk videre til den.
- [2]. Tryk kort på "  "-knappen, og kedlen tænder.
- [3]. Når vandet koger, slukker indikatoren, og der udsendes en række lyde.

2. Avanceret anvendelse

- [1]. Tryk på "  " i 3 sekunder. Kedlen siger en lyd, og den begynder at holde vandet varmt. LED-lyset lyser rødt, mens vandet koger. Når vandet koger, holder vandtemperaturen sig i 2 timer med indikatorlampen tændt. I løbet af de 2 timer er hold-varm funktionen aktiv, og den vil fortsætte med at varme, indtil temperaturen når op på 85°C.
- [2]. Tryk en gang på "  ". 60°C-indikatorlampen lyser med det grønne LED-lys. Det betyder, at opvarmningen stopper, når vandtemperaturen når 60°C.
Tryk to gange på "  ". 70°C-indikatorlampen tændes med det blå LED-lys. Det betyder, at opvarmningen stopper, når vandtemperaturen når 70°C.
Tryk 3 gange på "  ". 80°C-indikatorlampen tændes med gule LED-lys. Det betyder, at opvarmningen stopper, når vandtemperaturen når 80°C.
Tryk 4 gange på "  ". 90°C-indikatorlampen tændes med det lilla LED-lys. Det betyder, at opvarmningen stopper, når vandtemperaturen når 90°C.

3. Efter brug skal du tage stikket ud af stikkontakten.

SÅDAN PLEJER DU DIN KEDEL

Tør ydersiden af kedlen med en blød, fugtig klud eller svamp. Fjern stædige pletter med en klud, der er let fugtet med mildt flydende rengøringsmiddel. Brug ikke slibende skuresvampe eller lignende.

Nedsenk aldrig kedlen i vand eller andre væsker.

Fra tid til anden, og afhængigt af din vandforsyning, dannes naturligt en kalkaflejring, for det meste i forbindelse med varmeelementet, hvilket reducerer varmeeffektiviteten. Kalk er ikke skadeligt for dit helbred, men hvis det hældes med over i din drik, så kan det give en pulveragtig smag. Derfor bør kedlen afkalkes jævnligt, som vist nedenfor.

AFKALKNING

Afkalk kedelen regelmæssigt. Ved normal brug: mindst to gange om året

1. Fyld kedlen op til "max" med en blanding bestående af en del almindelig eddike og to dele vand. Tænd for kedlen og vent på, at apparatet slukker automatisk.
2. Lad blandingen blive i kedlen natten over.
3. Kassér blandingen næste morgen.
4. Fyld kedlen med rent vand op til "max"-mærket og kog igen.

5. Kassér det kogte vand for at fjerne resterende kalk og eddike.

6. Skyl indersiden af kedlen med rent vand.



figure 1

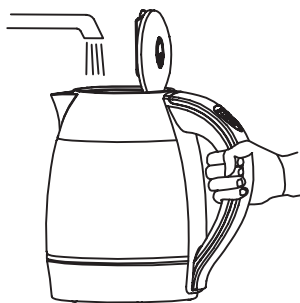


figure 2

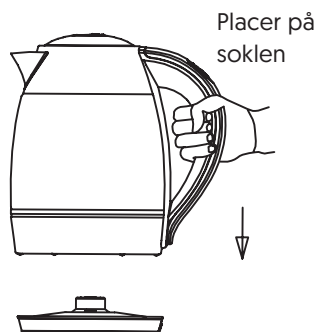


figure 3

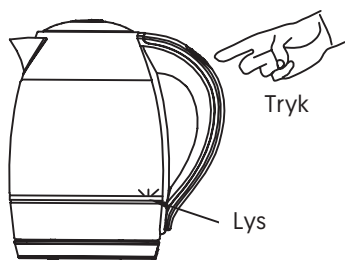


figure 4



figure 5

TEKNISKE DATA

Artikelnr. 10482539

Kapacitet: 1,7 liter

Spænding: 220-240V~, 50/60Hz

Strøm: 1850-2200 Watt

PRODUCENT

Epiq ApS

Krøyer Kielbergs Vej 3, 3. th

8660 Skanderborg, Danmark

www.epiq.dk

Vi tager forbehold for trykfejl.

INTRODUCTION

Thank you for choosing a product from Salling. You have acquired a quality product which meets all applicable performance and safety standards in the EU. In order to ensure proper treatment and a long product life, we recommend that you comply with the instructions below.

Please read the manual and especially the safety instructions carefully before using the product. Keep this manual and provide it for referral along with the product when others are using it.

GENERAL SAFETY INSTRUCTIONS

- Improper use of the product can cause personal injury and damage.
- Only use the product for what it is intended. The manufacturer is not liable for damages arising from improper use or handling.
- Always place the product on a dry, flat and stable surface well away from table edge or similar.
- The product is intended for household use only. The product is not for professional use.
- The product may only be connected to 220-240V~, 50-60Hz.
- The product engine/electronics, cord or plug cannot be submerged in water, and no water may get in contact with the engine/electronics.
- Never touch the product, cord or plug with wet or damp hands.
- Do not expose the product to direct sunlight, high temperatures, humidity, dust or corrosive substances.
- Never leave the product when it is turned on.
- When the product is in use, it should be kept under constant supervision. Children should always be supervised when using the product to ensure that they do not play with the product. The product is not a toy.
- The product may have sharp parts and must, therefore, be kept

out of reach of children.

- Only use the accessories that come with the product or that are recommended by the manufacturer.
- The product may only be used with the supplied base.
- Avoid spilling water on the base.
- Exceeding the maximum water level may cause boiling water to be ejected.
- Do not remove the lid while the water is boiling.
- On models with a removable lid, make sure that the lid fits correctly so that any steam is directed away from the handle.
- The heating element can be very hot after use due to residual heat.
- This product can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.
- Keep the product and its cord out of reach of children less than 8 years of age.
- Cleaning and user maintenance shall not be made by children without supervision.

CORD AND PLUG

- Do not let the cord hang over the edge.
- Keep the cord and the product away from heat sources, hot objects and open flames.
- Unplug the power cord before cleaning and if the product is not in use. Do not pull the cord when removing the plug from the socket, rather grasp the plug itself.
- Make sure that the cord is fully extended.
- Check regularly that the cord and the plug are not damaged and do not use the product if this is the case, or if it has been dropped on the floor, dropped in water or damaged in another way.
- If the product or plug is damaged, the product must be

inspected and, if necessary, repaired by an authorised repairer. Never try to repair the product yourself. Please, contact the store to see if there is a repair that falls under warranty. Tampering of the product will void the warranty.

RULES OF COMPLAINTS THE WARRANTY DOES NOT APPLY:

- If the above is not observed.
- If there has been unauthorised intervention of the product.
- If the product has been mishandled, subjected to rough treatment or some other form of damage.

PRODUCT DISPOSAL

Used product should not be disposed as household waste. According to legislation, the product should be disposed of properly so that the materials can be recycled in an environmentally friendly manner. Further information is available from the responsible local authority or local disposal company. The product is equipped with the following logo:



INSTRUCTION MANUAL

1. Basal operation.

- [1]. Put the base on the dry, smooth and horizontal plane, insert the plug to the socket.
When the kettle is inserted into the base, the power puts through automatically.
- [2]. Press the “” key shortly and the kettle will start.
- [3]. After the water boils, the indicator turns off and the buzzer sends out a group of sounds.

2. Advanced operation.

- [1]. Press “” for 3 seconds. The kettle will make a sound and it starts running the function of keeping warm. The LED light will be shining with red light, while after the water boils, the kettle will keep the water temperature for 2 hours with the indicator light on. During the 2 hours keeping warm function running, it will go on heating until the temperature reaches 85°C.
- [2]. Press “” one time, The indicator light of 60°C will be on with the green LED light. It means that it will stop heating when the water temperature is 60°C.
Press “” twice. The indicator light of 70°C will be on with the blue LED light. It means that it will stop heating when the water temperature is 70°C.
Press “” 3 times. The indicator light of 80°C will be on with the yellow LED light. It means that it will stop heating when the water temperature is 80°C
Press “” 4 times. The indicator light of 90°C will be on with the purple LED light. It means that it will stop heating when the water temperature is 90°C

3. After the use, please unplug the power from the socket.

HOW TO CARE FOR YOUR KETTLE

Wipe the exterior of the kettle with a soft damp cloth or sponge. Remove stubborn spots with a cloth moistened with mild liquid detergent. Do not use abrasive scouring pads or powers.

Never immerse the kettle in water or other liquids.

From time to time depended on the nature of your water supply a boiled scale deposit is naturally formed and can be found mostly adhered to the heating element thus reducing the heating efficiency.

Boiled scale is not harmful to your health. But if poured into your beverage it can give a powdery taste to your drink. Therefore the kettle should be descaled periodically as indicated below.

DESCALING

Descale kettle regularly. With normal use at least twice a year

1. Fill the kettle up to “max” with a mixture of one part ordinary vinegar and two parts water. Switch on and wait for the appliance to switch off automatically.

2. Let the mixture remain inside the kettle overnight.
3. Discard the mixture the next morning.
4. Fill the kettle with clean water up to "max" mark and boil again.
5. Discard the boiled water to remove any remaining scale and vinegar.
6. Rinse the inside of the kettle with clean water.



figure 1

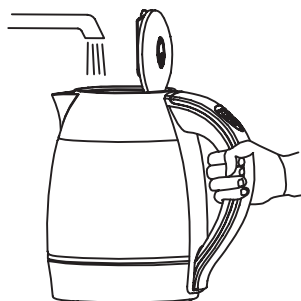


figure 2

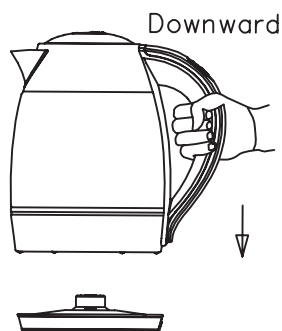


figure 3

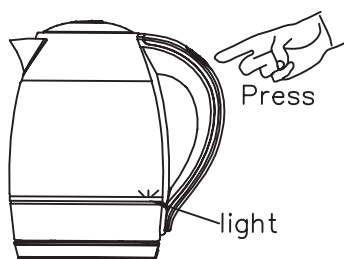


figure 4



figure 5

TECHNICAL DATA

Article No. 10482539

Capacity: 1.7 litres

Voltage: 220-240V~, 50/60Hz

Power: 1850-2200 Watt

PRODUCER

Epiq ApS

Krøyer Kielbergs Vej 3, 3. th

8660 Skanderborg, Denmark

www.epiq.dk

We cannot be held responsible for any printing errors.