

&me.



INSTRUCTION MANUAL HAIR DRYER

10958530

INTRODUKTION

Mange tak fordi du har valgt et produkt fra &me. Dermed har du erhvervet et kvalitetsprodukt som opfylder alle gældende krav til præstation og sikkerhedsstandarder i EU. For at sikre en korrekt behandling og en lang levetid anbefaler vi, at du overholder nedenstående anvisninger.

Du bedes læse vejledningen og især sikkerheds anvisningerne omhyggeligt igennem, inden du tager produktet i brug. Opbevar denne betjeningsvejledning, og overlad altid kun produktet til andre sammen med betjeningsvejledningen.

GENERELLE SIKKERHEDSFORANSTALTNINGER

- Forkert brug af produktet kan medføre personskade og beskadige produktet.
- Anvend kun produktet til det, det er beregnet til. Producenten er ikke ansvarlig for skader, der opstår som følge af forkert brug eller håndtering.
- Anbring altid produktet på et tørt, plant og stabilt underlag på god afstand af bordkant eller lignende.
- Produktet er udelukkende beregnet til husholdningsbrug. Produktet må ikke anvendes til erhvervsbrug.
- Produktet må kun sluttes til 220-240V~, 50/60Hz.
- Produktets motordel/elektronik, ledning og stikket må ikke nedsænkes i vand, og der må ikke trænge vand i motordel/elektronik.
- Rør aldrig ved produktet, ledningen eller stikkontakten med våde eller fugtige hænder.
- Udsæt ikke produktet for direkte sollys, høje temperaturer, fugt, støv eller ætsende stoffer.
- Forlad aldrig produktet, når det er tændt.
- Når produktet er i brug, bør det holdes under konstant opsyn.
- Når produktet bruges skal børn der opholder sig i nærheden af

den altid holdes under opsyn.

- Børn må ikke lege med produktet.
- Produktet kan indeholde skarpe dele og bør derfor opbevares utilgængeligt for børn.
- Brug kun tilbehør, der følger med produktet eller er anbefalet af producenten.
- Produktet må bruges af børn på 8 år eller derover og personer med reducerede fysiske, sensoriske eller mentale evner, eller som mangler erfaring og viden, hvis de er under opsyn eller har modtaget instruktion i sikker brug af produktet og forstår de involverede farer.
- Hold produktet og ledningen uden for rækkevidden af børn under 8 år.
- Rengøring og vedligeholdelse må ikke udføres af børn med mindre de er ældre end 8 år og under opsyn.

LEDNING OG STIK

- Lad ikke ledningen hænge ud over bordkanten.
- Hold ledningen og produktet væk fra varmekilder, varme genstande og åben ild.
- Tag stikket ud af stikkontakten før rengøring, og hvis produktet ikke er i brug. Undlad at trække i ledningen, når du tager stikket ud af stikkontakten, men tag fat om selve stikket.
- Sørg for, at ledningen er rullet helt ud.
- Kontrollér jævnligt, om ledningen eller stikket er beskadiget, og brug ikke produktet, hvis dette er tilfældet, eller hvis det har været tabt på gulvet, tabt i vand eller er blevet beskadiget på en anden måde.
- Hvis produktet, ledningen eller stikket er beskadiget, skal produktet efterses og om nødvendigt repareres af en autoriseret reparatør. Forsøg aldrig at reparere produktet selv. Kontakt købsstedet, hvis der er tale om en reparation, der falder ind under reklamationsretten. Hvis der foretages uautoriserede indgreb i produktet, bortfalder reklamationsretten.

REKLAMATIONSRETEN GÆLDER IKKE:

- Hvis ovennævnte ikke iagttages.
- Hvis der har været foretaget uautoriserede indgreb i produktet.
- Hvis produktet har været misligholdt, udsat for en voldsom behandling eller lidt anden form for overlast.

BORTSKAFFELSE AF PRODUKTET


Brugte produkter må ikke smides i husholdningsaffaldet. Iht. lovforskrifterne skal det udtjente produkt bortskaffes på ordentlig vis. Derved genanvendes de brugbare materialer, og miljøet skånes. Nærmere informationer fås hos den ansvarlige kommunale myndighed eller det lokale bortskaffelsesfirma. Produktet er forsynet med følgende logo:



VIGTIGE SIKKERHEDSANVISNINGER

- Læs brugervejledningen omhyggeligt, før du bruger hårtørderen.
- Kontrollér, at spændingen på typepladen svarer til spændingen i elnettet i din bolig, før du tilslutter hårtørderen.
- Afbryd altid hårtørderen fra strømforsyningen før rengøring, og når den ikke er i brug.
- Sænk ikke hårtørderen ned i vand eller andre væsker for at undgå elektriske stød.
- Brug ikke hårtørderen i umiddelbar nærhed af et badekar, en bruser eller et svømme-bassin.
- Brug ikke sprayprodukter, når du bruger hårtørderen.
- Børn skal være under opsyn for at sikre, at de ikke leger med apparatet.
- Brug kun det medfølgende tilbehør.
- Bær aldrig hårtørderen i ledningen, og hæng aldrig hårtørderen op i ledningen.
- Brug ikke hårtørderen, hvis der opstår en fejl, eller ledningen er beskadiget.
- Forsøg ikke at reparere, justere eller udskifte dele på hårtørderen.
- Hold dit hår på afstand af åbningen til luftindtaget. Sørg for, at luftindtaget er fri for støv og fnug.
- Undlad at tildække luftindtag og -udtag, da dette kan medføre, at hårtørderen overopheder.

BESKRIVELSE

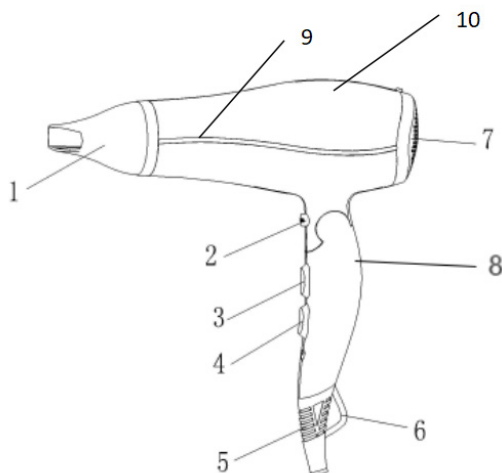

1. Stylingmundstykke
2. Koldluftsknap
3. Varmluftsknap (3 niveauer)
4. TÆND/SLUK-knap og hastigheds vælger (2 niveauer)
5. Ledningsbeskytter
6. Ophængningsstrop
7. Bagdæksel
8. Sammenklappeligt håndtag
9. Pynteliste
10. Hus

BRUG AF HÅRTØRREREN

1. Sæt ledningen i en stikkontakt.
2. Tænd hårtørderen ved at vælge det ønskede niveau for luftstrøm og temperatur.
3. Hold hårtørderen tæt på dit hår, og start tørringen.
4. Sæt koncentratoren eller diffuseren på efter behov.

BESKRIVELSE AF FUNKTIONSKNAPPEN

- 0: Hårtørreren er slukket
-  Lav hastighed / Høj hastighed
-  Varmluft [niveau I-II-III]
- COOL Tryk på denne knap for kold luft

RENGØRINGSANVISNINGER

1. Sluk altid hårtørreren, og træk ledningen ud af stikkontakten før rengøringen.
2. Rengør overfladen på hårtørreren med en tør klud.
3. Skyl ikke hårtørreren med vand, og læg den ikke ned i vand.

OPBEVARINGSANVISNINGER

1. Træk altid ledningen til hårtørreren ud af stikkontakten, når den ikke bruges.
2. Rengør overfladen på hårtørreren med en tør klud.
3. Fjern støv og snavs fra luftindtaget, filteret og tilbehøret med en blød børste.
4. Udsæt ikke hårtørreren for vand eller andre væsker.
5. Brug ikke skrappe eller slibende rensemidler på hårtørreren.

TEKNISKE DATA

Artikelnr. 10958530
220-240V~, 50/60Hz
1800-2200 Watt

PRODUCENT

Epiq ApS
Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Danmark
www.epiq.dk

Vi tager forbehold for trykfejl.

INTRODUCTION

Thank you for choosing a product from &me. You have acquired a quality product which meets all applicable performance and safety standards in the EU. In order to ensure proper treatment and a long product life, we recommend that you comply with the instructions below.

Please read the manual and especially the safety instructions carefully before using the product. Keep this manual and provide it for referral along with the product when others are using it.

GENERAL SAFETY INSTRUCTIONS

- Improper use of the product can cause personal injury and damage.
- Only use the product for what it is intended. The manufacturer is not liable for damages arising from improper use or handling.
- Always place the product on a dry, flat and stable surface well away from table edge or similar.
- The product is intended for household use only. The product is not for professional use.
- The product may only be connected to 220-240V~, 50/60Hz.
- The product engine/electronics, cord or plug cannot be submerged in water, and no water may get in contact with the engine/electronics.
- Never touch the product, cord or plug with wet or damp hands.
- Do not expose the product to direct sunlight, high temperatures, humidity, dust or corrosive substances.
- Never leave the product when it is turned on.
- When the product is in use, it should be kept under constant supervision. Children should always be supervised when using the product to ensure that they do not play with the product. The product is not a toy.
- The product may have sharp parts and must, therefore, be kept

out of reach of children.

- Only use the accessories that come with the product or that are recommended by the manufacturer.
- This product can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.
- Keep the product and its cord out of reach of children less than 8 years of age.
- Cleaning and user maintenance shall not be made by children without supervision.

CORD AND PLUG

- Do not let the cord hang over the edge.
- Keep the cord and the product away from heat sources, hot objects and open flames.
- Unplug the power cord before cleaning and if the product is not in use. Do not pull the cord when removing the plug from the socket, rather grasp the plug itself.
- Make sure that the cord is fully extended.
- Check regularly that the cord and the plug are not damaged and do not use the product if this is the case, or if it has been dropped on the floor, dropped in water or damaged in another way.
- If the product or plug is damaged, the product must be inspected and, if necessary, repaired by an authorised repairer. Never try to repair the product yourself. Please, contact the store to see if there is a repair that falls under warranty. Tampering of the product will void the warranty.

RULES OF COMPLAINTS THE WARRANTY DOES NOT APPLY:

- If the above is not observed.
- If there has been unauthorised intervention of the product.
- If the product has been mishandled, subjected to rough

treatment or some other form of damage.

PRODUCT DISPOSAL


Used product should not be disposed as household waste. According to legislation, the product should be disposed of properly so that the materials can be recycled in an environmentally friendly manner. Further information is available from the responsible local authority or local disposal company. The product is equipped with the following logo:



IMPORTANT SAFEGUARDS

- Please read this instruction manual carefully before use.
- Before connecting the appliance for the first time, ensure that the voltage indicated on the rating label corresponds to the mains voltage in your home.
- Always unplug the appliance from the power supply before cleaning or when not in use.
- To prevent the risk of electric shock, do not immerse the appliance in water or any other liquids.
- Do not use the appliance in close proximity to a bath, shower, or swimming pool.
- Do not spray aerosol products while the hair dryer is in use.
- Children should be supervised to ensure they do not play with the appliance.
- Do not use any attachments other than those supplied.
- Never carry or suspend the appliance by the cord.
- Do not use the appliance if it malfunctions or if the cord is damaged.
- Do not attempt to repair, adjust, or replace parts of the appliance yourself.
- Keep your hair away from the immediate vicinity of the air inlet. Ensure the air inlet filter is free of dust and fluff.
- Do not cover the air inlet or air outlet, as this may cause the hair dryer to overheat.

DISCRIPTION

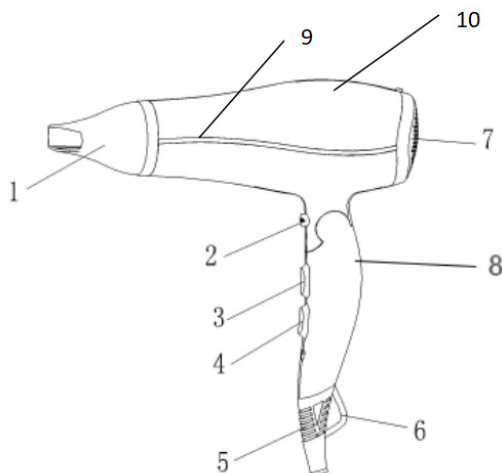

1. Concentrator
2. Cold air button
3. Hot air button (3 levels)
4. ON/OFF button and speed button (2 levels)
5. Cord guard
6. Hanging loop
7. Back cover
8. Foldable handle
9. Trim strip
10. Housing

USING THE HAIR DRYER

1. Plug the power cord into an electrical outlet.
2. Turn on the hair dryer by selecting your preferred settings for airflow and temperature.
3. Hold the hair dryer at a short distance from your hair and begin drying.
4. Attach the concentrator or diffuser according to your preference.

DESCRIPTION OF THE FUNCTION BUTTON

- 0: Hair dryer is off
-  Low speed / High speed
-  Hot air [I-II-III levels]
- COOL Press this button for cold air output

CLEANING INSTRUCTIONS

1. Always turn off the hair dryer and unplug it from the power outlet before cleaning.
2. Use a dry cloth to clean the surface of the hair dryer.
3. Do not rinse or submerge the hair dryer in water.

STORAGE INSTRUCTIONS

1. Always unplug the hair dryer when not in use.
2. Clean the surface of the hair dryer with a dry cloth.
3. Use a soft brush to remove dust and debris from the air inlet, filter, and attachments.
4. Avoid exposing the hair dryer to water or any other liquids.
5. Do not use harsh or abrasive cleaning agents on the hair dryer.

TECHNICAL DATA

Article No. 10958530
220-240V~, 50/60Hz
1800-2200 Watt

PRODUCER

Epiq ApS
Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Denmark
www.epiq.dk

We cannot be held responsible for any printing errors.