

&me.



INSTRUCTION MANUAL SHOULDER AND NECK MASSAGER

11020146

INTRODUKTION

Mange tak fordi du har valgt et produkt fra &me. Dermed har du erhvervet et kvalitetsprodukt som opfylder alle gældende krav til præstation og sikkerhedsstandarder i EU. For at sikre en korrekt behandling og en lang levetid anbefaler vi, at du overholder nedenstående anvisninger.

Du bedes læse vejledningen og især sikkerheds anvisningerne omhyggeligt igennem, inden du tager produktet i brug. Opbevar denne betjeningsvejledning, og overlad altid kun produktet til andre sammen med betjeningsvejledningen.

GENERELLE SIKKERHEDSFORANSTALTNINGER

- Forkert brug af produktet kan medføre personskade og beskadige produktet.
- Anvend kun produktet til det, det er beregnet til. Producenten er ikke ansvarlig for skader, der opstår som følge af forkert brug eller håndtering.
- Anbring altid produktet på et tørt, plant og stabilt underlag på god afstand af bordkant eller lignende.
- Produktet er udelukkende beregnet til husholdningsbrug. Produktet må ikke anvendes til erhvervsbrug.
- Produktet må kun sluttes til 220-240V~, 50/60Hz.
- Produktets motordel/elektronik, ledning og stikket må ikke nedsænkes i vand, og der må ikke trænge vand i motordel/elektronik.
- Rør aldrig ved produktet, ledningen eller stikkontakten med våde eller fugtige hænder.
- Udsæt ikke produktet for direkte sollys, høje temperaturer, fugt, støv eller ætsende stoffer.
- Forlad aldrig produktet, når det er tændt.
- Når produktet er i brug, bør det holdes under konstant opsyn.
- Når produktet bruges skal børn der opholder sig i nærheden af

den altid holdes under opsyn.

- Børn må ikke lege med produktet.
- Produktet kan indeholde skarpe dele og bør derfor opbevares utilgængeligt for børn.
- Brug kun tilbehør, der følger med produktet eller er anbefalet af producenten.
- Produktet må ikke bruges af personer med nedsat følsomhed, fysiske eller mentale handicap, eller personer, som ikke er i stand til at betjene produktet, medmindre de overvåges eller instrueres i brugen af en person, som er ansvarlig for deres sikkerhed.

LEDNING OG STIK

- Lad ikke ledningen hænge ud over bordkanten.
- Hold ledningen og produktet væk fra varmekilder, varme genstande og åben ild.
- Tag stikket ud af stikkontakten før rengøring, og hvis produktet ikke er i brug. Undlad at trække i ledningen, når du tager stikket ud af stikkontakten, men tag fat om selve stikket.
- Sørg for, at ledningen er rullet helt ud.
- Kontrollér jævnligt, om ledningen eller stikket er beskadiget, og brug ikke produktet, hvis dette er tilfældet, eller hvis det har været tabt på gulvet, tabt i vand eller er blevet beskadiget på en anden måde.
- Hvis produktet, ledningen eller stikket er beskadiget, skal produktet efterses og om nødvendigt repareres af en autoriseret reparatør. Forsøg aldrig at reparere produktet selv. Kontakt købsstedet, hvis der er tale om en reparation, der falder ind under reklamationsretten. Hvis der foretages uautoriserede indgreb i produktet, bortfalder reklamationsretten.

REKLAMATIONSRETEN GÆLDER IKKE:

- Hvis ovennævnte ikke iagttages.
- Hvis der har været foretaget uautoriserede indgreb i produktet.
- Hvis produktet har været misligholdt, udsat for en voldsom behandling eller lidt anden form for overlast.

BORTSKAFFELSE AF PRODUKTET

Brugte produkter må ikke smides i husholdningsaffaldet. Iht. lovforskrifterne skal det udtjente produkt bortskaffes på ordentlig vis. Derved genanvendes de brugbare materialer, og miljøet skånes. Nærmere informationer fås hos den ansvarlige kommunale myndighed eller det lokale bortskaffelsesfirma. Produktet er forsynet med følgende logo:



VIGTIGE SIKKERHEDSFORANSTALTNINGER

Når du bruger elektriske apparater specielt i nærheden af børn, skal grundlæggende sikkerhedsregler altid følges, herunder følgende:

FARE


For at undgå risiko for elektrisk stød

1. Træk altid stikket ud af stikkontakten lige efter brug og før rengøring.
2. BRUG IKKE apparatet i badekar eller bruser.
3. PLACER ELLER OPBEVAR IKKE apparatet på steder, hvor det kan falde eller trækkes ned i etbadekar eller håndvask.
4. PLACER ELLER DROP IKKE apparatet i vand eller andre væsker.
5. BRUG ALDRIG nåle eller andet metal til at fastgøre apparatet
6. Hold apparatet tørt - BRUG IKKE apparatet i fugtige eller våde omgivelser

ADVARSEL

- Apparatet må aldrig efterlades uden opsyn, når det er tilsluttet strømforsyningen. Træk strømkablet ud af stikkontakten, når apparatet ikke bruges, og før du sætter tilbehør på eller fjerner tilbehør. Der kræves nøje opsyn, når apparatet bruges af, på eller i nærheden af børn, personer med handicap samt ældre mennesker.
- Brug kun apparatet som beskrevet i vejledningen. Brug IKKE tilbehør, der ikke anbefales af producenten eller distributøren, specielt tilbehør, der ikke fulgte med apparatet.
- Brug aldrig apparatet, hvis strømkablet eller stikket er beskadiget, hvis apparatet ikke fungerer korrekt, eller det er blevet tabt eller har været lagt ned i vand.
- Hold ledning væk fra varme overflader.
- Brug IKKE apparatet under et tæppe eller en pude, da der kan opstå for høj varme, der kan medføre brand, elektrisk stød eller personskaade.
- Bær IKKE apparatet ved at holde i strømkablet, og brug ikke strømkablet som et håndtag.
- Sluk massageapparatet og varmefunktionen for at afbryde apparatet, og træk derefter adapteren ud af stikkontakten.
- BRUG IKKE apparatet udendørs,
- Må IKKE bruges på småbørn, personer med handicap eller sovende eller bevidstløse personer.
- Brug IKKE på ufølsom hud eller på personer med dårligt blodomløb.

APPARATETS DELE OG FUNKTIONER SAMT UDSEENDE

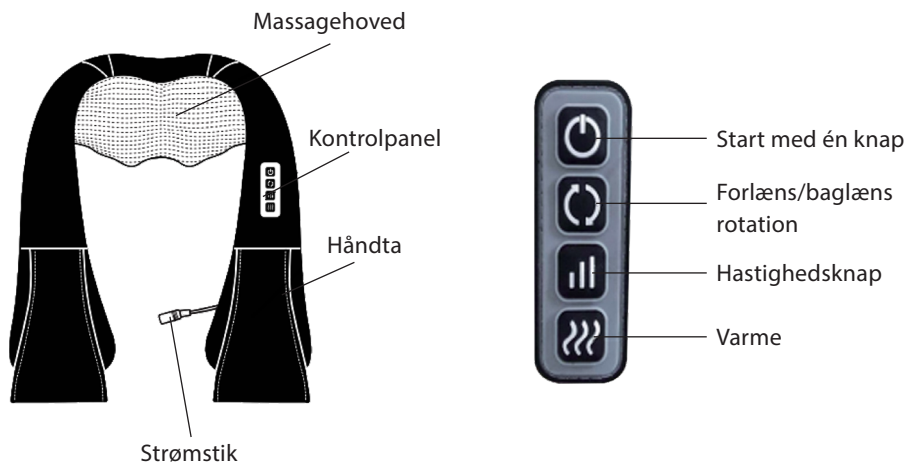


BRUG AF APPARAT

1. Tilslut apparatet til en stikkontakt, hvorefter apparatet er i standby-tilstand og klar til brug.
2. Tryk på  for at tænde massageapparatet. Den røde kontrollampe lyser. Tryk igen på knappen for at slukke massageapparatet.
3. Tryk på  for at skifte rotationsretning på massagehovederne.
4. Tryk på  for at justere massagehastigheden.
5. Tryk på  for at aktivere varmfunktionen. Den røde kontrollampe lyser. Tryk igen på knappen for at slukke varmfunktionen. Den røde kontrollampe slukker.

BEMÆRK:

- Apparatet lukker automatisk ned efter 15 minutters brug.
- En rød kontrollampe på massagehovederne lyser, når varmfunktionen er aktiveret.
- Massageapparatet er designet til brug i både hjemmet og bilen. Det leveres med en ekstern adapter og kan strømforsynes via en bilstrømforsyning på 12 V, så du kan nyde massage overalt.

ANBRING MASSAGEAPPARATET PÅ KROPSDELENE, DER SKAL MASSERES:

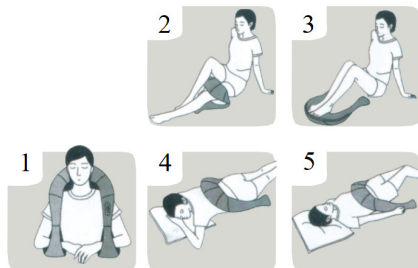

1. Nakkemassage
2. Benmassage
3. Fodmassage
4. Hoftemassage
5. Mavemassage

VEDLIGEHODELSE OG OPBEVARING

Opbevar massageapparatet i æsken eller et sikkert, tørt og køligt sted. Undgå kontakt med skarpe kanter eller spidse genstande. Sno IKKE strømkablet stramt for at undgå skade.

RENGØRING:

1. Sluk massageapparatet og varmfunktionen. Træk adapteren ud af stikkontakten, og lad apparatet køle af før rengøring.
2. Rengør overfladen med en blød, let fugtig svamp. Lad IKKE vand eller anden væske komme i kontakt med apparatet.
3. Læg IKKE massageapparatet ned i væske.
4. Brug ALDRIG slibende rensedmidler, børster, benzin, petroleum, poleringsmiddel til glas eller møbler eller fortynder til maling til rengøring af apparatet.

TEKNISKE DATA

Artikelnr. 11020146
Indgang: DC12V, 2A
Effekt: 24 Watt

PRODUCENT

Epiq ApS
Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Danmark
www.epiq.dk

Vi tager forbehold for trykfejl.

INTRODUCTION

Thank you for choosing a product from &me. You have acquired a quality product which meets all applicable performance and safety standards in the EU. In order to ensure proper treatment and a long product life, we recommend that you comply with the instructions below.

Please read the manual and especially the safety instructions carefully before using the product. Keep this manual and provide it for referral along with the product when others are using it.

GENERAL SAFETY INSTRUCTIONS

- Improper use of the product can cause personal injury and damage.
- Only use the product for what it is intended. The manufacturer is not liable for damages arising from improper use or handling.
- Always place the product on a dry, flat and stable surface well away from table edge or similar.
- The product is intended for household use only. The product is not for professional use.
- The product may only be connected to 220-240V~, 50/60Hz.
- The product engine/electronics, cord or plug cannot be submerged in water, and no water may get in contact with the engine/electronics.
- Never touch the product, cord or plug with wet or damp hands.
- Do not expose the product to direct sunlight, high temperatures, humidity, dust or corrosive substances.
- Never leave the product when it is turned on.
- When the product is in use, it should be kept under constant supervision. Children should always be supervised when using the product to ensure that they do not play with the product. The product is not a toy.
- The product may have sharp parts and must, therefore, be kept

out of reach of children.

- Only use the accessories that come with the product or that are recommended by the manufacturer.
- The product must not be used by people with reduced sensitivity, physical or mental disability, or people who are not able to operate the product unless they are supervised or instructed by a person responsible for their safety.

CORD AND PLUG

- Do not let the cord hang over the edge.
- Keep the cord and the product away from heat sources, hot objects and open flames.
- Unplug the power cord before cleaning and if the product is not in use. Do not pull the cord when removing the plug from the socket, rather grasp the plug itself.
- Make sure that the cord is fully extended.
- Check regularly that the cord and the plug are not damaged and do not use the product if this is the case, or if it has been dropped on the floor, dropped in water or damaged in another way.
- If the product or plug is damaged, the product must be inspected and, if necessary, repaired by an authorised repairer. Never try to repair the product yourself. Please, contact the store to see if there is a repair that falls under warranty. Tampering of the product will void the warranty.

RULES OF COMPLAINTS THE WARRANTY DOES NOT APPLY:

- If the above is not observed.
- If there has been unauthorised intervention of the product.
- If the product has been mishandled, subjected to rough treatment or some other form of damage.

PRODUCT DISPOSAL

Used product should not be disposed as household waste. According to legislation, the product should be disposed of

properly so that the materials can be recycled in an environmentally friendly manner. Further information is available from the responsible local authority or local disposal company. The product is equipped with the following logo:



IMPORTANT SAFE GUARDS

When using electrical products, especially around children, basic safety precautions should always be followed, including the following:

DANGER


To reduce the risk of electric shock:

1. Always unplug the appliance from the electrical outlet immediately after use and before cleaning.
2. DO NOT use while bathing or in the shower.
3. DO NOT place or store the appliance where it can fall or be pulled into a tub or sink.
4. DO NOT place in or drop into water or other liquids.
5. NEVER use pins or other metallic fasteners with this appliance.
6. Keep dry – DO NOT operate in wet or moist conditions.

WARNING

- This appliance should never be left unattended while plugged in. Unplug from the outlet when not in use and before attaching or removing parts. Close supervision is necessary when used by, on, or near children, individuals with disabilities, or the elderly.
- Use this appliance only as described in this manual. DO NOT use attachments not recommended by the manufacturer or distributor, especially those not included with the unit.
- NEVER operate this appliance if it has a damaged cord or plug, is not functioning properly, or has been dropped or immersed in water.
- Keep the cord away from heated surfaces.
- DO NOT operate under a blanket or pillow, as excessive heating may occur, causing fire, electrocution, or injury.
- DO NOT carry the appliance by the power cord or use the cord as a handle.
- To disconnect, turn off the massager and heating function, then remove the adapter from the outlet.
- DO NOT use outdoors.
- DO NOT use on infants, individuals with disabilities, or anyone who is sleeping or unconscious.
- DO NOT use on insensitive skin or on individuals with poor blood circulation.

INNER PART NAME & FUNCTIONS APPEARANCE CONSTRUCTION

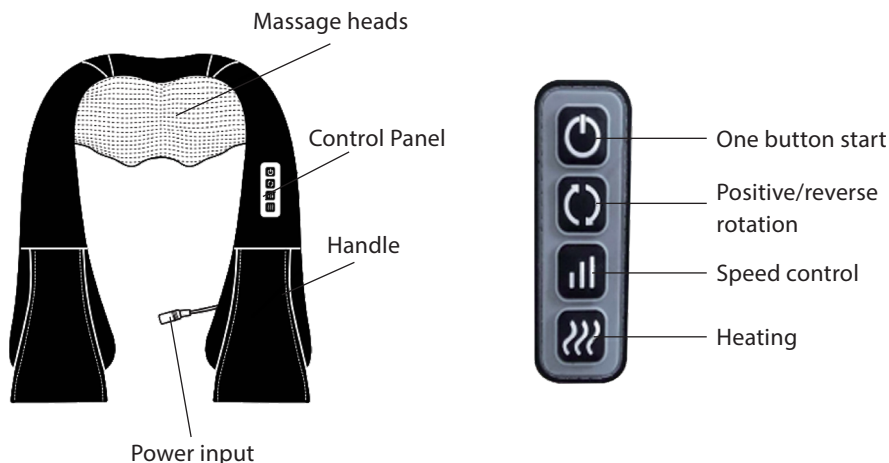


USE METHOD

1. Connect the adaptor, the products is stand by for using.
2. Press  to activate the massager. The red indicator light will turn on. Press the button again to power off the massager.
3. Press  to change the rotation direction of the massage heads.
4. Press  to adjust the massage speed.
5. Press  to activate the heating function. The red indicator light will turn on. Press the button again to turn off the heating function, and the red light will turn off.

NOTE:

- The product will automatically shut down after 15 minutes of use.
- The massage heads will have red indicator lights when the heating function is activated.
- This massager is designed for both home and car use. It comes with an external adaptor and can be powered by a 12V vehicle power supply, allowing you to enjoy a massage anywhere.

PLACE THE MASSAGER ON DESIRED BODY PARTS:

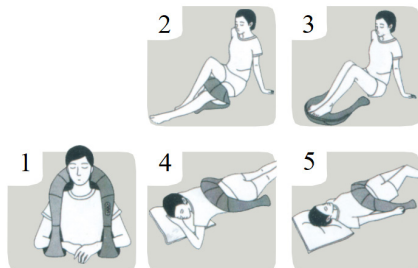

1. Neck Massage
2. Leg Massage
3. Foot Massage
4. Waist Massage
5. Abdominal Massage

MAINTENANCE & STORAGE

Store the massager in its box or a safe, dry, and cool place. Avoid contact with sharp edges or pointed objects. To prevent damage, DO NOT wrap the power cord tightly.

TO CLEAN:

1. Turn off the massager and heating function, unplug the adapter, and allow the unit to cool before cleaning.
2. Use a soft, slightly damp sponge to clean the surface. DO NOT allow water or other liquids to come into contact with the unit.
3. DO NOT immerse the massager in any liquid.
4. NEVER use abrasive cleaners, brushes, gasoline, kerosene, glass/furniture polish, or paint thinner to clean the unit.

TECHNICAL DATA

Article No. 11020146

Input: DC12V, 2A

Power: 24 Watt

PRODUCER

Epiq ApS

Krøyer Kielbergs Vej 3, 3. th

8660 Skanderborg, Denmark

www.epiq.dk

We cannot be held responsible for any printing errors.