

salling



INSTRUCTION MANUAL PIZZA OVEN

10515860

INTRODUKTION

Mange tak fordi du har valgt et produkt fra Salling. Dermed har du erhvervet et kvalitetsprodukt som opfylder alle gældende krav til præstation og sikkerhedsstandarder i EU. For at sikre en korrekt behandling og en lang levetid anbefaler vi, at du overholder nedenstående anvisninger.

Du bedes læse vejledningen og især sikkerheds anvisningerne omhyggeligt igennem, inden du tager produktet i brug. Opbevar denne betjeningsvejledning, og overlad altid kun produktet til andre sammen med betjeningsvejledningen.

GENERELLE SIKKERHEDSFORANSTALTNINGER

- Forkert brug af produktet kan medføre personskade og beskadige produktet.
- Anvend kun produktet til det, det er beregnet til. Producenten er ikke ansvarlig for skader, der opstår som følge af forkert brug eller håndtering.
- Anbring altid produktet på et tørt, plant og stabilt underlag på god afstand af bordkant eller lignende.
- Produktet er udelukkende beregnet til husholdningsbrug. Produktet må ikke anvendes til erhvervsbrug.
- Produktet må kun sluttes til 220-240V~, 50/60Hz.
- Produktets motordel/elektronik, ledning og stikket må ikke nedsænkes i vand, og der må ikke trænge vand i motordel/elektronik.
- Rør aldrig ved produktet, ledningen eller stikkontakten med våde eller fugtige hænder.
- Udsæt ikke produktet for direkte sollys, høje temperaturer, fugt, støv eller ætsende stoffer.
- Forlad aldrig produktet, når det er tændt.
- Når produktet er i brug, bør det holdes under konstant opsyn.
- Når produktet bruges skal børn der opholder sig i nærheden af

den altid holdes under opsyn.

- Børn må ikke lege med produktet.
- Produktet kan indeholde skarpe dele og bør derfor opbevares utilgængeligt for børn.
- Brug kun tilbehør, der følger med produktet eller er anbefalet af producenten.
- Produktet må bruges af børn på 8 år eller derover og personer med reducerede fysiske, sensoriske eller mentale evner, eller som mangler erfaring og viden, hvis de er under opsyn eller har modtaget instruktion i sikker brug af produktet og forstår de involverede farer.
- Hold produktet og ledningen uden for rækkevidden af børn under 8 år.
- Rengøring og vedligeholdelse må ikke udføres af børn med mindre de er ældre end 8 år og under opsyn.

LEDNING OG STIK

- Lad ikke ledningen hænge ud over bordkanten.
- Hold ledningen og produktet væk fra varmekilder, varme genstande og åben ild.
- Tag stikket ud af stikkontakten før rengøring, og hvis produktet ikke er i brug. Undlad at trække i ledningen, når du tager stikket ud af stikkontakten, men tag fat om selve stikket.
- Sørg for, at ledningen er rullet helt ud.
- Kontrollér jævnligt, om ledningen eller stikket er beskadiget, og brug ikke produktet, hvis dette er tilfældet, eller hvis det har været tabt på gulvet, tabt i vand eller er blevet beskadiget på en anden måde.
- Hvis produktet, ledningen eller stikket er beskadiget, skal produktet efterses og om nødvendigt repareres af en autoriseret reparatør. Forsøg aldrig at reparere produktet selv. Kontakt købsstedet, hvis der er tale om en reparation, der falder ind under reklamerationsretten. Hvis der foretages uautoriserede indgreb i produktet, bortfalder reklamerationsretten.

REKLAMATIONSRETEN GÆLDER IKKE:

- Hvis ovennævnte ikke iagttages.
- Hvis der har været foretaget uautoriserede indgreb i produktet.
- Hvis produktet har været misligholdt, udsat for en voldsom behandling eller lidt anden form for overlast.

BORTSKAFFELSE AF PRODUKTET

Brugte produkter må ikke smides i husholdningsaffaldet. Iht. lovforskrifterne skal det udtjente produkt bortskaffes på ordentlig vis. Derved genanvendes de brugbare materialer, og miljøet skånes. Nærmere informationer fås hos den ansvarlige kommunale myndighed eller det lokale bortskaffelsesfirma. Produktet er forsynet med følgende logo:




FARE

- Lad ikke vand eller anden væske løbe ind i ovnen. Der er risiko for elektrisk stød.
- Dæk ikke luftudtaget til, når ovnen er i brug.
- Rør aldrig overfladen og de indvendige sider af ovnen under brug.
- Overfladetemperaturen kan blive høj under brugen.
- Under bagningen afgives der varm damp gennem åbningerne til luftudtaget. Hold hænder og ansigt i sikker afstand fra dampen og åbningerne til luftudtaget. Pas også på varm damp og luft, når du tager pizzaen ud af ovnen.
- Blæseren kører videre, når pizzaovnen slukkes, for at køle ovnen hurtigt ned. Rør ikke pizzaovnen, før den er kølet ned til en acceptabel temperatur. Længden af nedkølingsprocessen afhænger af bagetemperaturen. Nedkølingen kan tage længere tid, hvis pizzaovnen var indstillet til en meget høj temperatur. Det anbefales at lade pizzaovnen køle ned automatisk, da blæseren automatisk stopper, når temperaturen er reduceret tilstrækkeligt.

FORSIGTIG

- Sæt pizzaovnen på en vandret, plan og stabil overflade.
- Pizzaovnen er kun beregnet til husholdningsbrug.
- Træk altid stikket ud af stikkontakten, når pizzaovnen ikke bruges.

KEND DIN PIZZAOVN

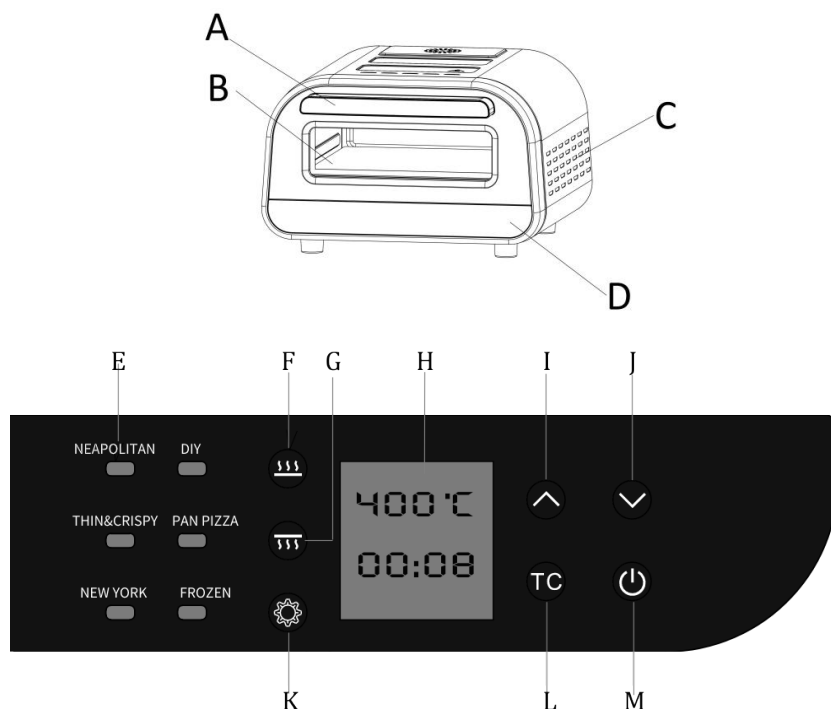

- | | |
|--|---|
| A. Dørgreb | H. Display |
| B. Pizzasten | I. Knap til forøgelse af tid/temperatur |
| C. Luftudtagsåbninger | J. Knap til reduktion af tid/temperatur |
| D. Kontrolpanel | K. Programvælger |
| E. Menu | L. Timer |
| F. Kontrolknap til nederste varmeelement | M. Tænd/sluk-knap |
| G. Kontrolknap til øverste varmeelement | |

1. **Tænd/sluk-knap:**

- Sæt ledningen i en stikkontakt med jordforbindelse, når du skal bruge pizzaovnen. Oven bipper en gang, og kontrolpanelet lyser op og viser alle tilgængelige programmer.
- Tryk på tænd/sluk-knappen  for at tænde ovnen. Ovnlyset tændes, og ovnen er klar til brug. Kontrollampen NEAPOLITAN blinker på kontrolpanelet, og displayet viser den indstillede temperatur på 400°C og den indstillede tid på 2 minutter.
- Tryk igen på tænd/sluk-knappen  for at forvarme ovnen. Under forvarmningen blinker temperaturen og knappen TC på displayet. Forvarmningen tager normalt ca. 20 minutter.
- Når ovnen er forvarmet, holder temperaturen og knappen TC på displayet op med at blinke, og ovnen udsender tre advarselsbip.
- Tryk igen på tænd/sluk-knappen  for at bruge ovnen. Tryk på tænd/sluk-knappen  for at slukke ovnen under brugen.

2. **Startknap/Timerfunktion:**

Læg pizzaen på stenen i ovnen, når forvarmningen er afsluttet, og tryk på startknappen . Timeren begynder straks at tælle ned.

3. **Programvælger:**

Når ovnen er klar til brug efter et tryk på tænd/sluk-knappen, skal du vælge det ønskede program med programvælgeren . Kontrollampen for det valgte program blinker for at bekræfte dit valg.

4. **Kontrolknap til nederste varmeelement:**

Når ovnen er klar til brug efter et tryk på tænd/sluk-knappen, skal du trykke på kontrolknappen  til det nederste varmeelement. Temperaturangivelsen på displayet blinker, og du kan bruge knappen  eller knappen  til at justere temperaturen for det nederste varmeelement.

Tryk igen på kontrolknappen  til det nederste varmeelement. Tidsangivelsen på displayet blinker. Justér tiden med knappen  eller knappen . Bemærk, at tiden for både det øverste og det nederste varmeelement er identisk. Begge justeres, når du justerer én af dem.

5. Kontrolknap til øverste varmeelement:

Når ovnen er klar til brug efter et tryk på tænd/sluk-knappen, skal du trykke på kontrolknappen  til det nederste varmeelement. Temperaturangivelsen på displayet blinker, og du kan bruge knappen  eller knappen  til at justere temperaturen for det øverste varmeelement.

Tryk igen på kontrolknappen  til det nederste varmeelement. Tidsangivelsen på displayet blinker. Justér tiden med knappen  eller knappen . Bemærk, at tiden for både det øverste og det nederste varmeelement er identisk. Begge justeres, når du justerer én af dem.

6. Knappen og knappen – Knap til forøgelse/reduktion af tid eller temperatur:

- Brug knappen  eller knappen  til at forøge eller reducere temperaturen og tiden efter behov, når du har trykket på kontrolknappen til det nederste eller øverste varmeelement. Et tryk på knappen justerer temperaturen med 5°C og tiden med 10 sekunder. Hold knappen nede for hurtigt at ændre temperaturen og tiden.

BEMÆRK:

Du får det bedste resultat, hvis du først lægger pizzaen i oven, når ovnen er forvarmet. Bagetiden og temperaturen kan justeres i henhold til pizzaens tykkelse og størrelse. Bemærk, at den indstillede tid kun viser bagetiden og medtager ikke tiden til forvarmning.

FØR FØRSTE BRUG

Du skal lade ovnen være tændt i 20 minutter for at fjerne eventuelle beskyttelsesmaterialer fra varmeelementerne. Sørg for, at området er godt udluftet, da pizzaovnen kan udsende dampe. Dampene er ufarlige og påvirker ikke pizzaovnens ydelse.

1. Fjern og bortskaft på sikker vis eventuel emballage fra pizzaovnen.
2. Tag pizzastenen ud af emballagen. Tør overfladen af med en fugtig klud. Tør pizzastenen grundigt, og anbring den i ovnrummet.
3. Tør ovnen af indvendigt med en blød, fugtig svamp.
4. Anbring pizzaovnen på en flad, tør overflade, og sørg for, at der er mindst 10 cm frirum på begge sider af pizzaovnen og 15 cm over ovnen.
5. Rul ledningen helt ud, og sæt stikket i en stikkontakt med jordforbindelse.
6. Pizzaovnen bipper, og kontrolpanelet lyser og viser alle programmenerne.
7. Vælg det ønskede program med den relevante knap.
8. Lad pizzaovnen køre i 20 minutter.
9. Pizzaovnen er nu klar til brug.

BETJENING AF DIN PIZZAOVN

Da der genereres meget høje temperaturer, skal du sørge for, at ovnen er anbragt i et område med god udluftning, da der udvikles røg under brugen.

1. Læg pizzastenen i ovnrummet.
2. Tryk på knappen  for at tænde ovnen, vælg den ønskede indstilling ved at trykke på knappen , og justér den øverste og nederste   temperatur eller tid ved at

trykke på knappen  .

3. Tryk igen på knappen . Temperaturen vises på displayet, og pizzaovnen forvarmes.
4. Når temperaturen er forvarmet til den indstillede temperatur, holder kontrollampen for temperatur op med at blinke, og der lyder tre bip.
5. Brug en pizzaplate (medfølger ikke) til at lægge pizzaen direkte på pizzastenen.
6. Luk ovnlågen.
7. Tryk på knappen **TC** for at starte timeren. Kontrollampen lyser, og ovnen starter.
8. Når bageprogrammet er færdig, bipper ovnen 5 gange som en påmindelse, og tiden vender tilbage til sin oprindelige visning, hvilket angiver, at bagningen er færdig. [Apparatet slukker ikke automatisk efter nedtællingsafslutning, det vil stå ved forvarmningsstatus for hurtigt at bage den næste PIZZA.]
9. Åbn ovnlågen, og tag pizzaen ud. Nyd den.

TIP:

Den perfekte bagetid for en pizza afhænger af type, tykkelse, ingredienser og personlig smag og skal muligvis justeres baseret på forudindstillingerne.



Bemærk.

Når du skal transportere ovnen, anbefales det at tage pizzastenen ud af ovnen og indpakke den særskilt for at forhindre eventuel skade under transporten.

Bemærk.

Sørg for, at ovnen er forvarmet, før du lægger pizzaen ind i ovnen. Hvis du bager flere pizzaer, skal du vente med at lægge den næste pizza i ovnen, indtil kontrollampen for temperatur holder op med at blinke.

Kontrollampen for TC blinker, indtil temperaturen når den indstillede temperatur. Det tager normalt flere minutter, før du kan starte bagningen af din pizza. Hvis du bager forskellige pizzatyper, anbefales det, at du starter med typen, der kræver den laveste temperaturindstilling.

Bemærk.

Din sikkerhed er vores topprioritet. Derfor anbefaler vi kraftigt, at du overvåger og bliver i nærheden af pizzaovnen, når du bruger bageprogrammer med høj temperatur, da pizzaen hurtigt kan blive bagt for hårdt og muligvis kan bryde i brand.

Advarsel

Det er vigtigt efter bagningen at lade ovnen køle helt ned, før du trækker stikket ud af stikkontakten. Det hjælper med til at beskytte de indvendige elektriske komponenter.

PROGRAMMER

Hjemmelavet pizza (400°C)
[Anbefalet tid: 2 min.]

Meget stærk varme. Ideel til tilberedning af grillede grøntsager.

Bemærk, at bagetiden kan variere afhængigt af typen af grøntsager, der tilberedes.

Neapolitansk pizza

[Anbefalet: 2 min.]

Opnå autentiske resultater med Neapolitan pizza derhjemme!

Meget høj varme.

Forvent en blød og elastisk skorpe med tydelige bobler og grillmærker (leopardpletter).



Tynd og sprød pizza

[Anbefalet tid: 4 - 6 min.]


Dejen rulles tyndt, hvilket giver en sprød pizza. Der skal være fyld helt ud til kanten, og saucen kan spredes helt ud til kanten af pizzaen.



Pizza i New York-stil

[Anbefalet tid: 7 - 8 min.]

Varmeprofilen er designet til at opnå den ikoniske stil af en New York-pizza. Fyldet og skorpen skal være brunet ensartet, og pizzaen giver en let gummiagtig fornemmelse i munden.

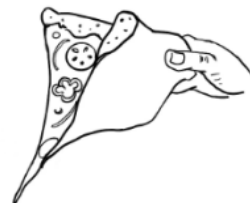

Pandepizza

[Anbefalet tid: 12 - 18 min.]

Utrolig knasende bund. Luftig dej og masser af fyld og sauce næsten helt ud til kanten. Den ultimative pizzaoplevelse. Du skal bruge en pizzapande til programmet (medfølger ikke).



Frossen

[Anbefalet: 12 - 20 min.]

Fantastiske resultater med frosne pizzaer.

170°C

[Anbefalet tid: 10 min.]

Perfekt til opvarmning af din pizza.



SE TABELLEN NEDENFOR MED OPLYSNINGER OM BAGEPROGRAMMERNE.

Program	Øverste varmeele ment	Nederste varmeele ment	Justerbar temperatur.	Standardtid	Justerbar tid
DIY	400°C	400°C	80 - 400°C	2 min	1 - 60 min
NEAPOLITAN	400°C	400°C	200 - 400°C	2 min	1 - 10 min
THIN&CRISPY	270°C	330°C	80 - 400°C	6 min	1 - 10 min
PAN PIZZA	220°C	340°C	80 - 400°C	12 min	1 - 30 min
NEW YORK	245°C	270°C	80 - 400°C	8 min	1 - 20 min
FROZEN	245°C	205°C	80 - 400°C	16 min	1 - 20 min

VEDLIGEHOLDELSE OG RENGØRING

Advarsel: Sørg for at trække ledningen til ovnen ud af stikkontakten, og lad ovnen køle ned før rengøring.

Tør eventuelt væggene af med en fugtig svamp, klud eller nylonskuresvamp og et mildt rengøringsmiddel.

BRUG IKKE SKURESVAMPE AF STÅLULD ELLER SLIBENDE RENGØRINGSMIDLER, OG SKRAB IKKE VÆGGENE MED KØKKENGREJ AF METAL, DA DETTE KAN BESKADIGE RENGØRINGSBELÆGNINGEN.

Alt tilbehør skal rengøres med varmt sæbevand. Ovnlågen kan tørres med en fugtig svamp og tørres efter med et stykke køkkenrulle eller viskestykke. Rengør de udvendige overflader med en fugtig svamp.

BRUG IKKE ET SLIBENDE RENGØRINGSMIDDEL, DA DET KAN BESKADIGE DEN UDVENDIGE FINISH.

Pizzaovnen bliver meget varm under brugen. Det er vigtigt, at du venter, indtil den er kølet helt ned, før du rengør den indvendigt eller pizzastenen eller trækker stikket ud af stikkontakten.

Det anbefales at lade lågen til ovnen stå åben med henblik på nedkøling, når du har bagt en pizza.

TEKNISKE DATA

Artikelnr. 10515860
220-240V~, 50/60Hz
1700 Watt

PRODUCENT

Epiq ApS
Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Danmark
www.epiq.dk

Vi tager forbehold for trykfejl.

INTRODUCTION

Thank you for choosing a product from Salling. You have acquired a quality product which meets all applicable performance and safety standards in the EU. In order to ensure proper treatment and a long product life, we recommend that you comply with the instructions below.

Please read the manual and especially the safety instructions carefully before using the product. Keep this manual and provide it for referral along with the product when others are using it.

GENERAL SAFETY INSTRUCTIONS

- Improper use of the product can cause personal injury and damage.
- Only use the product for what it is intended. The manufacturer is not liable for damages arising from improper use or handling.
- Always place the product on a dry, flat and stable surface well away from table edge or similar.
- The product is intended for household use only. The product is not for professional use.
- The product may only be connected to 220-240V~, 50/60Hz.
- The product engine/electronics, cord or plug cannot be submerged in water, and no water may get in contact with the engine/electronics.
- Never touch the product, cord or plug with wet or damp hands.
- Do not expose the product to direct sunlight, high temperatures, humidity, dust or corrosive substances.
- Never leave the product when it is turned on.
- When the product is in use, it should be kept under constant supervision. Children should always be supervised when using the product to ensure that they do not play with the product. The product is not a toy.
- The product may have sharp parts and must, therefore, be kept

out of reach of children.

- Only use the accessories that come with the product or that are recommended by the manufacturer.
- This product can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.
- Keep the product and its cord out of reach of children less than 8 years of age.
- Cleaning and user maintenance shall not be made by children without supervision.

CORD AND PLUG

- Do not let the cord hang over the edge.
- Keep the cord and the product away from heat sources, hot objects and open flames.
- Unplug the power cord before cleaning and if the product is not in use. Do not pull the cord when removing the plug from the socket, rather grasp the plug itself.
- Make sure that the cord is fully extended.
- Check regularly that the cord and the plug are not damaged and do not use the product if this is the case, or if it has been dropped on the floor, dropped in water or damaged in another way.
- If the product or plug is damaged, the product must be inspected and, if necessary, repaired by an authorised repairer. Never try to repair the product yourself. Please, contact the store to see if there is a repair that falls under warranty. Tampering of the product will void the warranty.

RULES OF COMPLAINTS THE WARRANTY DOES NOT APPLY:

- If the above is not observed.
- If there has been unauthorised intervention of the product.
- If the product has been mishandled, subjected to rough

treatment or some other form of damage.

PRODUCT DISPOSAL

Used product should not be disposed as household waste. According to legislation, the product should be disposed of properly so that the materials can be recycled in an environmentally friendly manner. Further information is available from the responsible local authority or local disposal company. The product is equipped with the following logo:




DANGER

- Do not let any water or other liquid enter the appliance to prevent electric shock.
- Do not cover the air outlet while the appliance is in use.
- Never touch the surface and inside of the appliance while it is in use.
- The surface temperature may be high when the appliance is in use.
- During baking, hot steam is released through the air outlet openings. Keep your hands and face at a safe distance from the steam and from the air outlet openings. Also, be careful of hot steam and air when you remove the pizza from the appliance.
- After turning off the pizza oven, the fan will continue to run in order to cool down the appliance quickly. Please do not touch the pizza oven until it has cooled down to an acceptable temperature. The duration of the cooling process depends on the baking temperature. If the pizza oven was set to a very high temperature, it may take longer to cool down. It is recommended to allow the pizza oven to cool down automatically, as the fan will stop running on its own once the temperature has sufficiently decreased.

CAUTION

- Ensure the appliance is placed on a horizontal, even, and stable surface.
- This appliance is designed for household use only.
- Always unplug the appliance while not in use.

KNOW YOUR PIZZA OVEN

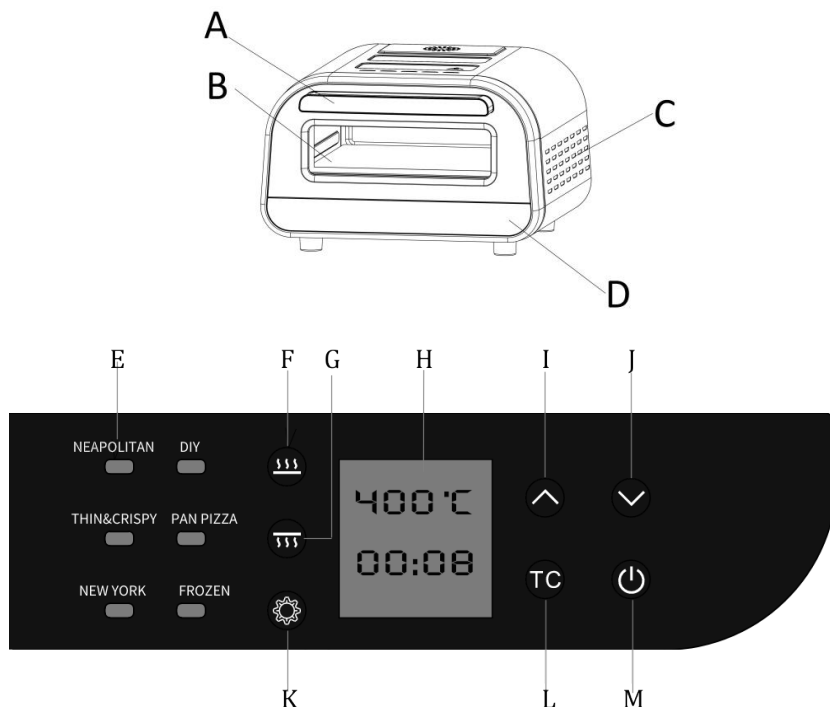

- | | |
|--|---------------------------------------|
| A. Door handle | H. Display |
| B. Pizza stone | I. Time/Temperature increasing button |
| C. Ventilation Slots | J. Time/Temperature decreasing button |
| D. Control panel | K. Function selection button |
| E. Menu | L. Timing function |
| F. Bottom heating element control button | M. Power button On/Off |
| G. Upper heating element control button | |

1. **On/Off Power button:**

- To use the pizza oven, plug it into a grounded power outlet. The oven will emit a single alert and the control panel lights will light up, showing all available functions.
- Press the Power button  once to turn on the oven. The interior light will turn on and the oven will enter the operational state, with the NEAPOLITAN indicator light flashing on the control panel and the display showing the set temperature of 400°C and the set time of 2 minutes.
- Press the Power button  a second time to begin preheating the oven. During preheating, the display temperature and the TC button will flash. Preheating typically takes around 20 minutes.
- Once preheating is complete, the display temperature and the TC button will stop flashing and the oven will emit three alert sounds.
- Press the Power button  again to start using the oven. To turn off the oven during operation, simply press the Power button .

2. **Start button/Timing function:**

Once the preheating is complete, place the pizza on the stone inside the oven and press the  start button. The timer will begin counting down immediately.

3. **Function button:**

Once the appliance is in the operational state after pressing the Power button once, use the function button  to select the desired function. The relevant function indicator light will flash to confirm your selection.

4. **Bottom heating element control button:**

Once the appliance is in the operational state after pressing the Power button once, press the bottom heating element control button . The temperature area on the display will start flashing, and you can then use the  or  button to adjust the temperature of the bottom heating element.

Press the bottom heating element control button again , and the time area on the display will start flashing. Use the  or  button to adjust the time. Note that the time for both the upper and bottom heating elements is the same, so adjusting one of them will adjust the time for both.

5. Upper heating element control button:

Once the appliance is in the operational state after pressing the Power button once, press the bottom heating element control button . The temperature area on the display will start flashing, and you can then use the  or  button to adjust the temperature of the upper heating element.

Press the bottom heating element control button again , and the time area on the display will start flashing. Use the  or  button to adjust the time. Note that the time for both the upper and bottom heating elements is the same, so adjusting one of them will adjust the time for both.

6. and button - Time/Temperature increasing/decreasing button:

- Once you've pressed the bottom or upper heating element control button, use the   or  button to increase or decrease the temperature and time as needed. Each press of the button will adjust the temperature by 5°C and the time by 10 seconds. To rapidly change the temperature and time, hold the button down.

NOTE:

For best results, only put the pizza in the oven after preheating is complete. The baking time and temperature can be adjusted based on the thickness and size of the pizza. Note that the set time refers only to the baking time and does not include the preheating time.

BEFORE FIRST USE

Running the oven empty for 20 minutes is necessary to remove any protective substances on the heating elements. Ensure that the area is well-ventilated as the pizza oven may emit vapors. These vapors are safe and will not affect the performance of the pizza oven.

1. Remove and safely discard any packing material from the pizza oven.
2. Remove the pizza stone from its packaging. Gently wipe the top surface with a damp cloth. Dry thoroughly and place the pizza stone in the oven cavity.
3. Wipe the inside of the oven with a soft, damp sponge.
4. Place the pizza oven on a flat, dry surface and ensure there is a minimum distance of 4" [10cm] of space on both sides of the pizza oven and 6" [15cm] above.
5. Unwind the power cord completely and insert the power plug into a grounded power outlet.
6. The pizza oven alert will sound, and the control panel lights will illuminate and show all the function menus.
7. Select the desired function using the appropriate button.
8. Let the pizza oven run for 20 minutes.
9. The pizza oven is now ready to use.

OPERATING YOUR PIZZA OVEN

Due to the extremely high temperatures being achieved, please ensure that the oven is placed in a well-ventilated area, as it will emit smoke when cooking.

1. Insert the pizza stone into the pizza oven cavity.

2. Turn on the oven by pressing the  button, choose the desired setting by pressing the  button, and adjust the bottom/upper   temperature or time by pressing the button  .
3. Press the  button for the second time and the temperature will appear on the display, indicating that the pizza oven is preheating.
4. After the oven is preheated to the set temperature, the temperature indicator light stops flashing, and the buzzer sounds three times.
5. Use a pizza peel (not included) to place the pizza directly on the pizza stone.
6. Close the oven door.
7. Press the  button to start the countdown timer. The indicator light will illuminate, and the oven will start working.
8. After the cooking cycle is complete, the oven alert will sound 5 times to remind you, and the time will return to its original setting, indicating that the baking is finished. [The appliance will not turn off automatically after countdown finish, it will stand by preheat status, in order to bake the next PIZZA quickly.]
9. Open the oven door, remove your pizza, and enjoy it.

TIP:

The perfect time for PIZZA depends on the type, thickness, ingredients, and personal taste, and may need to be adjusted based on the presets.



Attention.

To transport the product, it is recommended to remove the pizza stone from the oven and pack it separately to prevent any damage during transportation.



Attention.

Ensure that the pizza oven is preheated before placing the pizza in the cavity. If cooking multiple pizzas, wait until the temperature control indicator light stops flashing before loading the next pizza.

The TC indicator light will keep flashing until the temperature reaches the set temperature, which usually takes several minutes before you can begin baking your pizza. If you are cooking different types of pizza, it is recommended to start with the type that requires the lowest temperature setting.



Attention.

Your safety is our top priority. Therefore, we strongly recommend that you monitor and stay close to the pizza oven when using high-temperature cooking functions, as your food can quickly become overdone and potentially ignite.



Advarsel

After cooking, it is important to allow the oven to cool completely before unplugging the plug from the wall. This will help to protect the internal electrical components.

FUNCTIONS

DIY Pizza style (400°C)

[Recommended time: 2 mins.]

Extremely intense heat. Ideal for cooking charred vegetables.

Note that the cooking time can vary depending on the type of vegetable being cooked.

Neapolitan Style pizza

[Recommended: 2 mins.]

Achieve authentic Neapolitan pizza results at home!

Extremely high heat.

Expect a cooked but malleable crust with distinct blisters and charring [leopard spotting].



Thin&Crispy Pizza

[Recommended time: 4-6mins.]

This dough is rolled out thinly which gives the pizza a crisp result. The topping should be right to the edge and the sauce can be spread to the very outside of the pizza.



New York Pizza

[Recommended time: 7-8mins.]

The heat profile has been designed to achieve the iconic New York style pizza. Toppings and crust should be evenly browned and the pizza should have a chewy mouthfeel.



Pan Pizza

[Recommended time: 12-18mins.]

Amazing crunchy base, fluffy dough and plenty of toppings with sauce almost to the edge. The ultimate pizza indulgence. This setting requires to use the pizza pan [not included].



Frozen

[Recommended: 12-20mins.]

Great frozen pizza results.

170°C

[Recommended time: 10mins.]

Perfect to reheat your pizza.



PLEASE REFER TO THE TABLE BELOW FOR INFORMATION ON EACH COOKING FUNCTION.

Function	Upper heater	Lower heater	Adjustable Temp.	Default time	Adjustable time
DIY	400°C	400°C	80 - 400°C	2 mins	1 - 60 mins
NEAPOLITAN	400°C	400°C	200 - 400°C	2 mins	1 - 10 mins
THIN&CRISPY	270°C	330°C	80 - 400°C	6 mins	1 - 10 mins
PAN PIZZA	220°C	340°C	80 - 400°C	12 mins	1 - 30 mins
NEW YORK	245°C	270°C	80 - 400°C	8 mins	1 - 20 mins
FROZEN	245°C	205°C	80 - 400°C	16 mins	1 - 20 mins

CARE AND CLEANING

Warning: Make sure to disconnect the oven from the power source and let it cool down before cleaning.

If desired, wipe the walls with a damp sponge, cloth or nylon scouring pad and mild detergent.

DO NOT USE STEEL WOOL SCOURING PADS, OR ABRASIVE CLEANERS OR SCRAPE THE WALLS WITH A METAL UTENSIL, AS ALL OF THESE METHODS MAY DAMAGE THE CONTINUOUS CLEAN COATING.

All accessories should be washed in hot soapy water. The door can be wiped with a damp sponge and wiped dry with a paper or cloth towel.
Clean the outside with a damp sponge.

DO NOT USE AN ABRASIVE CLEANER AS IT MAY DAMAGE THE EXTERIOR FINISH.

The pizza oven reaches high temperatures during operation. It is important to wait for it to cool completely before cleaning the inside or pizza stone or unplugging the power cord. After baking pizza, it is recommended to open the door to allow the oven to cool down.

TECHNICAL DATA

Article No. 10515860
220-240V~, 50/60Hz
1700 Watt

PRODUCER

Epiq ApS
Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Denmark
www.epiq.dk

We cannot be held responsible for any printing errors.