

KØKKENCHEF



INSTRUCTION MANUAL BLENDER

10432028

INTRODUKTION

Mange tak fordi du har valgt et produkt fra Køkkenchef. Dermed har du erhvervet et kvalitetsprodukt som opfylder alle gældende krav til præstation og sikkerhedsstandarder i EU. For at sikre en korrekt behandling og en lang levetid anbefaler vi, at du overholder nedenstående anvisninger.

Du bedes læse vejledningen og især sikkerheds anvisningerne omhyggeligt igennem, inden du tager produktet i brug. Opbevar denne betjeningsvejledning, og overlad altid kun produktet til andre sammen med betjeningsvejledningen.

GENERELLE SIKKERHEDSFORANSTALTNINGER

- Forkert brug af produktet kan medføre personskade og beskadige produktet.
- Anvend kun produktet til det, det er beregnet til. Producenten er ikke ansvarlig for skader, der opstår som følge af forkert brug eller håndtering.
- Anbring altid produktet på et tørt, plant og stabilt underlag på god afstand af bordkant eller lignende.
- Produktet er udelukkende beregnet til husholdningsbrug. Produktet må ikke anvendes til erhvervsbrug.
- Produktet må kun sluttes til 220-240V~, 50/60Hz.
- Produktets motordel/elektronik, ledning og stikket må ikke nedsænkes i vand, og der må ikke trænge vand i motordel/elektronik.
- Rør aldrig ved produktet, ledningen eller stikkontakten med våde eller fugtige hænder.
- Udsæt ikke produktet for direkte sollys, høje temperaturer, fugt, støv eller ætsende stoffer.
- Forlad aldrig produktet, når det er tændt.
- Når produktet er i brug, bør det holdes under konstant opsyn.
- Når produktet bruges skal børn der opholder sig i nærheden af

den altid holdes under opsyn.

- Børn må ikke lege med produktet.
- Produktet kan indeholde skarpe dele og bør derfor opbevares utilgængeligt for børn.
- Brug kun tilbehør, der følger med produktet eller er anbefalet af producenten.
- Produktet må ikke bruges af personer med nedsat følsomhed, fysiske eller mentale handicap, eller personer, som ikke er i stand til at betjene produktet, medmindre de overvåges eller instrueres i brugen af en person, som er ansvarlig for deres sikkerhed.

LEDNING OG STIK

- Lad ikke ledningen hænge ud over bordkanten.
- Hold ledningen og produktet væk fra varmekilder, varme genstande og åben ild.
- Tag stikket ud af stikkontakten før rengøring, og hvis produktet ikke er i brug. Undlad at trække i ledningen, når du tager stikket ud af stikkontakten, men tag fat om selve stikket.
- Sørg for, at ledningen er rullet helt ud.
- Kontrollér jævnligt, om ledningen eller stikket er beskadiget, og brug ikke produktet, hvis dette er tilfældet, eller hvis det har været tabt på gulvet, tabt i vand eller er blevet beskadiget på en anden måde.
- Hvis produktet, ledningen eller stikket er beskadiget, skal produktet efterses og om nødvendigt repareres af en autoriseret reparatør. Forsøg aldrig at reparere produktet selv. Kontakt købsstedet, hvis der er tale om en reparation, der falder ind under reklamationsretten. Hvis der foretages uautoriserede indgreb i produktet, bortfalder reklamationsretten.

REKLAMATIONSRETEN GÆLDER IKKE:

- Hvis ovennævnte ikke iagttages.
- Hvis der har været foretaget uautoriserede indgreb i produktet.
- Hvis produktet har været misligholdt, udsat for en voldsom behandling eller lidt anden form for overlast.


BORTSKAFFELSE AF PRODUKTET

Brugte produkter må ikke smides i husholdningsaffaldet. Iht. lovforskrifterne skal det udtjente produkt bortskaffes på ordentlig vis. Derved genanvendes de brugbare materialer, og miljøet skånes. Nærmere informationer fås hos den ansvarlige kommunale myndighed eller det lokale bortskaffelsesfirma. Produktet er forsynet med følgende logo:



BESKRIVELSE AF DELE

- A. Låg
- B. Blenderkande(glaskande)
- C. Motorhus
- D. Hastighedsvælger

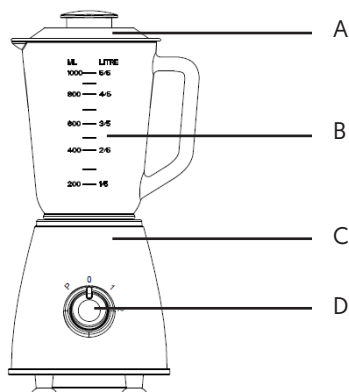

SÅDAN BRUGES BLENDEREN

- Sæt blenderkanden på motorhuset , og lås den på plads ved at dreje den med uret, indtil låsesymbolet og pilemærket flugter med hinanden.
- Læg ingredienserne i blenderkanden . Kanden rummer maksimalt 1200 ml. Fyld ikke kanden over mærket 1000 ml.
- Sæt låget på. Du kan påfylde ingredienser, mens blenderen kører, ved at fjerne målebægeret i midten af låget . Drej målebægeret mod uret, og løft det derefter op. Læg ikke genstande i blenderkanden , mens blenderen kører.
- Sæt ledningen i stikkontakten, og vælg den ønskede hastighed med hastighedsvælgeren .
- Forsigtig: Start ikke blenderen, når blenderkanden er tom. Hæld ikke kun tørre ingredienser, såsom nødder, mandler osv., i kanden.
- Sluk blenderen, og træk stikket ud af stikkontakten, når du er færdig med at bruge blenderen. Vent, indtil motoren er helt stoppet, før du fjerner blenderkanden . Drej blenderkanden mod uret for at fjerne kanden fra motorhuset .
- Fjern låget fra blenderkanden. Vent altid, indtil motoren og blenderkniven er stoppet helt, før du tager låget af.

VALG AF HASTIGHED

P [pulsfunktion] - svarer til høj hastighed. Hold hastighedsvælgeren i positionen P for at bruge funktionen.

0 - Sluk blenderen

1 - Lav hastighed

2 - Høj hastighed

KORTVARIG DRIFT

Blenderen er beregnet til blanding af gennemsnitlige mængder af ingredienser. Den kan bruges konstant i højst 1 minut, hvorefter blenderen skal afkøle i to minutter.

SIKKERHEDSKONTAKT

En sikkerhedskontakt i motorfoden sikrer, at blenderen kun kan bruges, når blenderkanden er forsvarligt låst på plads.

Kontrollér, før du fjerner blenderkanden, at hastighedsvælgeren står i position {0}. Det samme gælder, når du sætter blenderkanden på motorhuset. Motoren starter øjeblikkeligt, hvis hastighedsvælgeren ikke står i positionen slukket {0}.

GENEREL PLEJE OG RENGØRING

- Træk altid stikket ud af stikkontakten før rengøring af blenderen.
- Rengør ikke motorhuset eller ledningen med vand, og sænk dem ikke ned i vand. Der er risiko for elektrisk stød. Tør motorhuset af med en let fugtet, frugfri klud.
- Brug ikke skuremidler, skrappe rengøringsmidler eller hårde børster til rengøringen.
- Rengør blenderkanden efter brug ved at hælde ca. 1.000 ml rent vand med et mildt rengøringsmiddel i kanden. Lad blenderen køre et kort stykke tid. Skyl derefter blenderkanden, låget og målebægeret med rent vand. Alle dele skal derefter tørres grundigt.

TEKNISKE DATA

Artikelnr. 10432028
220-240V~, 50/60Hz
500 Watt

PRODUCENT

Epiq ApS
Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Danmark
www.epiq.dk

Vi tager forbehold for trykfejl.

INTRODUCTION

Thank you for choosing a product from Køkkenchef. You have acquired a quality product which meets all applicable performance and safety standards in the EU. In order to ensure proper treatment and a long product life, we recommend that you comply with the instructions below.

Please read the manual and especially the safety instructions carefully before using the product. Keep this manual and provide it for referral along with the product when others are using it.

GENERAL SAFETY INSTRUCTIONS

- Improper use of the product can cause personal injury and damage.
- Only use the product for what it is intended. The manufacturer is not liable for damages arising from improper use or handling.
- Always place the product on a dry, flat and stable surface well away from table edge or similar.
- The product is intended for household use only. The product is not for professional use.
- The product may only be connected to 220-240V~, 50/60Hz.
- The product engine/electronics, cord or plug cannot be submerged in water, and no water may get in contact with the engine/electronics.
- Never touch the product, cord or plug with wet or damp hands.
- Do not expose the product to direct sunlight, high temperatures, humidity, dust or corrosive substances.
- Never leave the product when it is turned on.
- When the product is in use, it should be kept under constant supervision. Children should always be supervised when using the product to ensure that they do not play with the product. The product is not a toy.
- The product may have sharp parts and must, therefore, be kept

out of reach of children.

- Only use the accessories that come with the product or that are recommended by the manufacturer.
- The product must not be used by people with reduced sensitivity, physical or mental disability, or people who are not able to operate the product unless they are supervised or instructed by a person responsible for their safety.

CORD AND PLUG

- Do not let the cord hang over the edge.
- Keep the cord and the product away from heat sources, hot objects and open flames.
- Unplug the power cord before cleaning and if the product is not in use. Do not pull the cord when removing the plug from the socket, rather grasp the plug itself.
- Make sure that the cord is fully extended.
- Check regularly that the cord and the plug are not damaged and do not use the product if this is the case, or if it has been dropped on the floor, dropped in water or damaged in another way.
- If the product or plug is damaged, the product must be inspected and, if necessary, repaired by an authorised repairer. Never try to repair the product yourself. Please, contact the store to see if there is a repair that falls under warranty. Tampering of the product will void the warranty.

RULES OF COMPLAINTS THE WARRANTY DOES NOT APPLY:

- If the above is not observed.
- If there has been unauthorised intervention of the product.
- If the product has been mishandled, subjected to rough treatment or some other form of damage.

PRODUCT DISPOSAL


Used product should not be disposed as household waste. According to legislation, the product should be disposed of

properly so that the materials can be recycled in an environmentally friendly manner. Further information is available from the responsible local authority or local disposal company. The product is equipped with the following logo:



PARTS IDENTIFICATION

- A. Lid
- B. Blender Jug (Glass Jug)
- C. Blender Base
- D. Speed Control

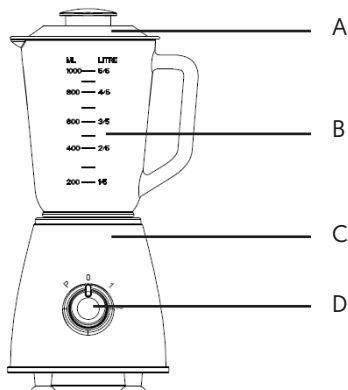

HOW TO USE THE BLENDER

- Fit the blender jug to the blender base and lock it by turning clockwise until the lock symbol and arrow mark are properly aligned.
- Put the liquid ingredients into the blender jug. The jug has a maximum capacity of 1200ml. but do not fill the jug above the 1000ml mark.
- Put the lid on. To add ingredients during operation, the measuring cup in the center of the lid can be removed by turning it anticlockwise and then lifting it off. Do not put any objects into the blender jug while the appliance is in use.
- Insert the plug into the power supply and use the speed control to select the desired speed.
- Caution: do not operate the blender when the blender jug is empty. Do not fill it with dry ingredients only, such as nuts, almonds, etc.
- After using the blender, switch it off and remove the plug from the power supply. Wait until the motor has come to a complete stop before removing the blender jug. To remove the blender jug, turn it counterclockwise from the blender base.
- Grab the lid and lift it off from the blender jug. Always wait until the motor and the blender blade have completely stopped before taking the lid off.

SPEED SETTING

P (pulse function) - Same as "High speed". To use this setting hold the speed control in the P position.

0 - Switch OFF the appliance

1- Low speed

2- High speed

SHORT-TERM OPERATION

The appliance is designed to process average domestic quantities of ingredients. It can be operated without interruption for a maximum of 1 minute, after which the blender

needs to cool down for 2 minutes.

SAFETY SWITCH

A safety switch in the blender base is there to ensure that the appliance can only be used once the blender jug is properly locked in position.

Before removing the blender jug, make sure that the speed control is in position [0].

This also applies when fitting the blender jug to the blender base. The motor will start immediately if the speed control is not in its off-position [0].

GENERAL CARE AND CLEANING

- Always remove the plug from the power supply before cleaning the appliance.
- To avoid the risk of electric shock, do not clean the blender base or power cord with water and do not immerse them in water. Wipe the blender base with a slightly damp, lint-free cloth.
- Do not use abrasives, harsh cleaning solutions, or hard brushes for cleaning.
- For cleaning after use, fill the blender jug with approximately 1000ml clean water and a mild cleaning detergent. Let the appliance run for a short period of time. Then rinse the blender jug, lid, and measuring cup with fresh water. All parts must be thoroughly dried afterward.

TECHNICAL DATA

Article No. 10432028
220-240V~, 50/60Hz
500 Watt

PRODUCER

Epiq ApS
Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Denmark
www.epiq.dk

We cannot be held responsible for any printing errors.