

KØKKENCHEF



INSTRUCTION MANUAL 3 IN 1 SANDWICH MAKER

10663553

INTRODUKTION

Mange tak fordi du har valgt et produkt fra Køkkenchef. Dermed har du erhvervet et kvalitetsprodukt som opfylder alle gældende krav til præstation og sikkerhedsstandarder i EU. For at sikre en korrekt behandling og en lang levetid anbefaler vi, at du overholder nedenstående anvisninger.

Du bedes læse vejledningen og især sikkerheds anvisningerne omhyggeligt igennem, inden du tager produktet i brug. Opbevar denne betjeningsvejledning, og overlad altid kun produktet til andre sammen med betjeningsvejledningen.

GENERELLE SIKKERHEDSFORANSTALTNINGER

- Forkert brug af produktet kan medføre personskade og beskadige produktet.
- Anvend kun produktet til det, det er beregnet til. Producenten er ikke ansvarlig for skader, der opstår som følge af forkert brug eller håndtering.
- Anbring altid produktet på et tørt, plant og stabilt underlag på god afstand af bordkant eller lignende.
- Produktet er udelukkende beregnet til husholdningsbrug. Produktet må ikke anvendes til erhvervsbrug.
- Produktet må kun sluttes til 220-240V~, 50/60Hz.
- Produktets motordel/elektronik, ledning og stikket må ikke nedsænkes i vand, og der må ikke trænge vand i motordel/elektronik.
- Rør aldrig ved produktet, ledningen eller stikkontakten med våde eller fugtige hænder.
- Udsæt ikke produktet for direkte sollys, høje temperaturer, fugt, støv eller ætsende stoffer.
- Forlad aldrig produktet, når det er tændt.
- Når produktet er i brug, bør det holdes under konstant opsyn.
- Når produktet bruges skal børn der opholder sig i nærheden af

den altid holdes under opsyn.

- Børn må ikke lege med produktet.
- Produktet kan indeholde skarpe dele og bør derfor opbevares utilgængeligt for børn.
- Brug kun tilbehør, der følger med produktet eller er anbefalet af producenten.
- Produktet må bruges af børn på 8 år eller derover og personer med reducerede fysiske, sensoriske eller mentale evner, eller som mangler erfaring og viden, hvis de er under opsyn eller har modtaget instruktion i sikker brug af produktet og forstår de involverede farer.
- Hold produktet og ledningen uden for rækkevidden af børn under 8 år.
- Rengøring og vedligeholdelse må ikke udføres af børn med mindre de er ældre end 8 år og under opsyn.

LEDNING OG STIK

- Lad ikke ledningen hænge ud over bordkanten.
- Hold ledningen og produktet væk fra varmekilder, varme genstande og åben ild.
- Tag stikket ud af stikkontakten før rengøring, og hvis produktet ikke er i brug. Undlad at trække i ledningen, når du tager stikket ud af stikkontakten, men tag fat om selve stikket.
- Sørg for, at ledningen er rullet helt ud.
- Kontrollér jævnligt, om ledningen eller stikket er beskadiget, og brug ikke produktet, hvis dette er tilfældet, eller hvis det har været tabt på gulvet, tabt i vand eller er blevet beskadiget på en anden måde.
- Hvis produktet, ledningen eller stikket er beskadiget, skal produktet efterses og om nødvendigt repareres af en autoriseret reparatør. Forsøg aldrig at reparere produktet selv. Kontakt købsstedet, hvis der er tale om en reparation, der falder ind under reklamationsretten. Hvis der foretages uautoriserede indgreb i produktet, bortfalder reklamationsretten.

REKLAMATIONSRETEN GÆLDER IKKE:


- Hvis ovennævnte ikke iagttages.
- Hvis der har været foretaget uautoriserede indgreb i produktet.
- Hvis produktet har været misligholdt, udsat for en voldsom behandling eller lidt anden form for overlast.

BORTSKAFFELSE AF PRODUKTET

Brugte produkter må ikke smides i husholdningsaffaldet. Iht. lovforskrifterne skal det udtjente produkt bortskaffes på ordentlig vis. Derved genanvendes de brugbare materialer, og miljøet skånes. Nærmere informationer fås hos den ansvarlige kommunale myndighed eller det lokale bortskaffelsesfirma. Produktet er forsynet med følgende logo:



KEND DIN SANDWICH MAKER

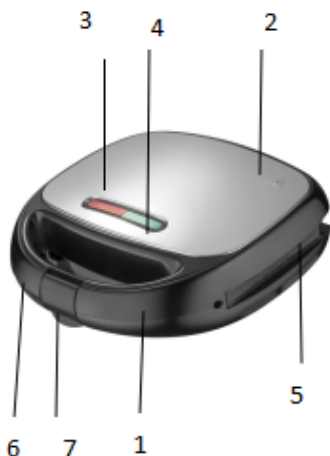

1. Håndtag
2. Overdel
3. Strømlampe
4. Klar-lampe
5. Non-stick varmeplader
6. Underdel
7. Låseknop



Toastplader



Vaffelplader



Grillplader

SÆRLIGE SIKKERHEDSANVISNINGER

- Varmepladerne bliver meget varme. Rør kun ved håndtaget.
- Placer enheden på en varmebestandig overflade.
- For at forhindre opbygning af varme, placer ikke apparatet direkte under et skab. Sørg for, at der er nok plads omkring maskinen.
- Pas på varm damp, når du åbner maskinen.
- Der kan gå ild i brødet, så anvend aldrig sandwichtoasteren nær eller under gardiner eller andet brændbart materiale!

FØR DU ANVENDER MASKINEN FØRSTE GANG

Rengør pladerne med en fugtig svamp, skyl og tør forsigtigt.

Smør pladerne let med madlavningsolie, luk pladerne sammen og sæt maskinen til strøm. Indikatorlampen tændes.

Lad den varme op i flere minutter, indtil lugten af nyt produkt forsvinder.

SÅDAN BRUGES DEN

- Luk sandwichtoasteren og sæt den til en stikkontakt. Strømlampen tændes, hvilket indikerer, at sandwichtoasteren er begyndt at opvarme.
- Det tager ca. 5 minutter at nå den korrekte temperatur. Forvarmningen er færdig, når klar-lampen tændes.
- Åbn låget og placer brød eller andre fødevarer på den nederste varmeplade.
- Luk låget, hvorefter klar-lampen slukker, hvilket betyder at opvarmningen begynder.
- Tilbered i ca. 3 til 6 minutter, hvor klar-lampen tændes igen, eller indtil maden er gyldenbrun, i hvilket tilfælde du selv kan justere tiden så det passer til din smag.
- Når maden er klar, brug håndtaget til at åbne låget. Tag maden af pladen ved hjælp af en plastikspatel. Brug aldrig en tang eller kniv af metal, da det kan beskadige nonstick belægningen på varmepladerne.
- Når du er færdig med at tilberede maden, så fjern strømkablet fra stikket og lad apparatet stå for at køle ned.

FOR AT FJERNE PLADERNE

- Træk strømkablet ud af stikkontakten og lad apparatet afkøle, før du fjerner pladerne.
- Åbn sandwichtoasteren. Knappen til at løsne pladerne findes på forsiden af apparatet, tryk let på knappen for at løsne pladen, pladen springer lidt op fra bunden. Tag fat i pladen med begge hænder, træk den ud under metalbeslagene og løft den ud af bunden. Tryk på den anden knap for at løsne den anden plade og som så kan fjernes på samme måde.

RENGØRING

Før du gør apparatet rent, skal du tage stikket ud og lade apparatet køle af.

- Apparatet må aldrig sænkes ned i vand eller holdes under rindende vand.
- Tør pladerne af med en blød klud for at fjerne madrester. Ved forbrænding af madrester presses noget varmt vand blandet med vaskemiddel over madresterne og rengøres med en ikke-slibende plastskurepude eller læg vådt køkkenpapir over kogepladerne for at fugte madresterne. Undgå brug af skuresvampe eller skrappe rengøringsmidler, da de kan beskadige overfladen. Skyl og tør grundigt med en ren, blød klud.
- Benyt ikke skuremidler, der kan ridse eller beskadige slip-let-belægningen.
- Brug ikke køkkenredskaber af metal til at fjerne maden. De kan beskadige slip-let-belægningen.
- Tør kun sandwichtoasteren udvendigt med en fugtig klud. Brug ikke en skuresvamp eller ståluld til at rengøre sandwichtoasteren udvendigt. Det beskadiger

overfladebehandlingen. Apparatet må ikke nedsænkes i vand eller andre væsker.

- Sandwichtoasteren må ikke sættes i opvaskemaskinen.

OPBEVARING

- Træk altid ledningen på sandwichtoasteren ud af stikkontakten før opbevaring.
- Kontrollér altid, at sandwichtoasteren er kold og tør før opbevaring.
- Sandwichtoasteren kan opbevares lodret og derved spare opbevaringsplads i køkkenet.

TEKNISKE DATA

Artikelnr. 10663553
220-240V~, 50/60Hz
850 Watt

PRODUCENT

Epiq ApS
Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Danmark
www.epiq.dk

Vi tager forbehold for trykfejl.

INTRODUCTION

Thank you for choosing a product from Køkkenchef. You have acquired a quality product which meets all applicable performance and safety standards in the EU. In order to ensure proper treatment and a long product life, we recommend that you comply with the instructions below.

Please read the manual and especially the safety instructions carefully before using the product. Keep this manual and provide it for referral along with the product when others are using it.

GENERAL SAFETY INSTRUCTIONS

- Improper use of the product can cause personal injury and damage.
- Only use the product for what it is intended. The manufacturer is not liable for damages arising from improper use or handling.
- Always place the product on a dry, flat and stable surface well away from table edge or similar.
- The product is intended for household use only. The product is not for professional use.
- The product may only be connected to 220-240V~, 50/60Hz.
- The product engine/electronics, cord or plug cannot be submerged in water, and no water may get in contact with the engine/electronics.
- Never touch the product, cord or plug with wet or damp hands.
- Do not expose the product to direct sunlight, high temperatures, humidity, dust or corrosive substances.
- Never leave the product when it is turned on.
- When the product is in use, it should be kept under constant supervision. Children should always be supervised when using the product to ensure that they do not play with the product. The product is not a toy.
- The product may have sharp parts and must, therefore, be kept

out of reach of children.

- Only use the accessories that come with the product or that are recommended by the manufacturer.
- This product can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.
- Keep the product and its cord out of reach of children less than 8 years of age.
- Cleaning and user maintenance shall not be made by children without supervision.

CORD AND PLUG

- Do not let the cord hang over the edge.
- Keep the cord and the product away from heat sources, hot objects and open flames.
- Unplug the power cord before cleaning and if the product is not in use. Do not pull the cord when removing the plug from the socket, rather grasp the plug itself.
- Make sure that the cord is fully extended.
- Check regularly that the cord and the plug are not damaged and do not use the product if this is the case, or if it has been dropped on the floor, dropped in water or damaged in another way.
- If the product or plug is damaged, the product must be inspected and, if necessary, repaired by an authorised repairer. Never try to repair the product yourself. Please, contact the store to see if there is a repair that falls under warranty. Tampering of the product will void the warranty.

RULES OF COMPLAINTS THE WARRANTY DOES NOT APPLY:

- If the above is not observed.
- If there has been unauthorised intervention of the product.
- If the product has been mishandled, subjected to rough


treatment or some other form of damage.

PRODUCT DISPOSAL

Used product should not be disposed as household waste. According to legislation, the product should be disposed of properly so that the materials can be recycled in an environmentally friendly manner. Further information is available from the responsible local authority or local disposal company. The product is equipped with the following logo:



KNOW YOUR SANDWICH MAKER

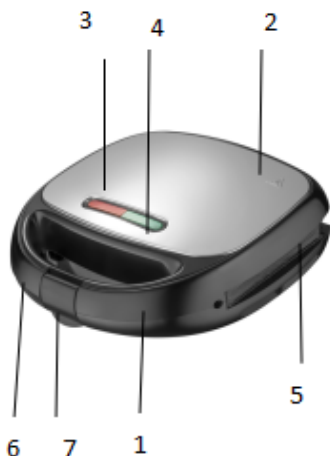

1. Handle
2. Upper Housing
3. Power Light
4. Ready Light
5. Non-stick Cooking Plates
6. Bottom Housing
7. Handle Lock



Sandwich plates



Waffle plates



Grill plates

SPECIAL SAFETY NOTES

- The baking surfaces get very hot. Touch the handles only.
- Put the unit down onto a heat-resistant surface.
- In order to prevent heat from building up, do not put the unit directly underneath a cupboard. Ensure that there is enough space all around.
- Beware of steam coming out when you open the baking section.
- The bread can burn, so never use the sandwich toaster near or below curtains and other inflammable materials!

BEFORE USING YOUR APPLIANCE FOR THE FIRST TIME

Clean the plates using a damp sponge rinse and dry carefully.

After applying a fine coating oil to the plates, close the appliance and plug it in. The indicator light will come on.

Allow it to heat up for several minutes to get rid of the smell of new product.

HOW TO USE

- Close the Sandwich Maker and plug it into the wall outlet, you will notice that the power light will turn on, indicating that the Sandwich Maker has begun preheating.
- It will take approximately 5 minutes to reach baking temperature, the preheating is completed when the ready light will turn on.
- Open the lid, put the bread or other foods on the bottom cooking plate.
- Close the lid, the ready light will turn off, which means it will start heating.
- Cook for about 3 to 6 minutes, the ready light turn on again, or until golden brown, adjusting the time to suit your own individual taste.
- When the foods is cooked use the handle to open the lid. Remove the foods with the help of a plastic spatula. Never use metal tongs or a knife as these can cause damage to the non-stick coating of the cook plates.
- Once you are finished cooking, disconnect the plug from the wall outlet and leave unit open to cool.

TO REMOVE COOKING PLATES

- Always unplug the Sandwich Maker and allow it to cool before removing cooking plates.
- Open the Sandwich Maker, locate the plate release buttons on front of the unit. Press firmly on button and the plate will pop up slightly from the base. Grasp the plate with two hands, slide it out from under the metal brackets, and lift it out of the base. Press on the other plate release button to remove the other cooking plate in the same manner.

CLEANING

Before cleaning the appliance, unplug it and allow it to cool down.

- Never place the appliance in water or under running water.
- Wipe the cooking plates with a soft cloth to remove food residue. For burned in food residue squeeze some warm water mixed with detergent over the food residue and clean with a nonabrasive plastic scouring pad or place wet kitchen paper over the cooking plates to moisten the food residue. Avoid the use of scouring pads or harsh detergents as they may damage the surface. Rinse and dry thoroughly with a clean, soft cloth.
- Do not use anything abrasive that can scratch or damage the non-stick coating.
- Do not use metal utensils to remove your foods, they can damage the non-stick coating.
- Wipe the outside of the Sandwich Maker with a damp cloth only. Do not clean the

outside with any abrasive scouring pad or steel wool, as this will damage the finish. Do not immerse in water or any other liquid.

- Do not place in the dishwasher.

STORAGE

- Always unplug the Sandwich Maker before storage.
- Always be sure the Sandwich Maker is cold and dry before storage.
- To minimize storage space in your kitchen, the sandwich maker can be stored vertically.

TECHNICAL DATA

Article No. 10663553
220-240V~, 50/60Hz
850 Watt

PRODUCER

Epiq ApS
Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Denmark
www.epiq.dk

We cannot be held responsible for any printing errors.