

KØKKENCHEF



INSTRUCTION MANUAL

KNIFE SHARPENER

10876108

INTRODUKTION

Mange tak fordi du har valgt et produkt fra Køkkenchef. Dermed har du erhvervet et kvalitetsprodukt som opfylder alle gældende krav til præstation og sikkerhedsstandarder i EU. For at sikre en korrekt behandling og en lang levetid anbefaler vi, at du overholder nedenstående anvisninger.

Du bedes læse vejledningen og især sikkerheds anvisningerne omhyggeligt igennem, inden du tager produktet i brug. Opbevar denne betjeningsvejledning, og overlad altid kun produktet til andre sammen med betjeningsvejledningen.

GENERELLE SIKKERHEDSFORANSTALTNINGER

- Forkert brug af produktet kan medføre personskade og beskadige produktet.
- Anvend kun produktet til det, det er beregnet til. Producenten er ikke ansvarlig for skader, der opstår som følge af forkert brug eller håndtering.
- Anbring altid produktet på et tørt, plant og stabilt underlag på god afstand af bordkant eller lignende.
- Produktet er udelukkende beregnet til husholdningsbrug. Produktet må ikke anvendes til erhvervsbrug.
- Produktets motordel/elektronik, ledning og stikket må ikke nedsænkes i vand, og der må ikke trænge vand i motordel/elektronik.
- Rør aldrig ved produktet, ledningen eller stikkontakten med våde eller fugtige hænder.
- Udsæt ikke produktet for direkte sollys, høje temperaturer, fugt, støv eller ætsende stoffer.
- Forlad aldrig produktet, når det er tændt.
- Når produktet er i brug, bør det holdes under konstant opsyn.
- Når produktet bruges skal børn der opholder sig i nærheden af den altid holdes under opsyn.

- Børn må ikke lege med produktet.
- Produktet kan indeholde skarpe dele og bør derfor opbevares utilgængeligt for børn.
- Brug kun tilbehør, der følger med produktet eller er anbefalet af producenten.
- Produktet må ikke bruges af personer med nedsat følsomhed, fysiske eller mentale handicap, eller personer, som ikke er i stand til at betjene produktet, medmindre de overvåges eller instrueres i brugen af en person, som er ansvarlig for deres sikkerhed.

LEDNING OG STIK

- Lad ikke ledningen hænge ud over bordkanten.
- Hold ledningen og produktet væk fra varmekilder, varme genstande og åben ild.
- Tag stikket ud af stikkontakten før rengøring, og hvis produktet ikke er i brug. Undlad at trække i ledningen, når du tager stikket ud af stikkontakten, men tag fat om selve stikket.
- Sørg for, at ledningen er rullet helt ud.
- Kontrollér jævnligt, om ledningen eller stikket er beskadiget, og brug ikke produktet, hvis dette er tilfældet, eller hvis det har været tabt på gulvet, tabt i vand eller er blevet beskadiget på en anden måde.
- Hvis produktet, ledningen eller stikket er beskadiget, skal produktet efterses og om nødvendigt repareres af en autoriseret reparatør. Forsøg aldrig at reparere produktet selv. Kontakt købsstedet, hvis der er tale om en reparation, der falder ind under reklamationsretten. Hvis der foretages uautoriserede indgreb i produktet, bortfalder reklamationsretten.

REKLAMATIONSRETEN GÆLDER IKKE:


- Hvis ovennævnte ikke iagttages.
- Hvis der har været foretaget uautoriserede indgreb i produktet.
- Hvis produktet har været misligholdt, udsat for en voldsom behandling eller lidt anden form for overlast.

BORTSKAFFELSE AF PRODUKTET

Brugte produkter må ikke smides i husholdningsaffaldet. Iht. lovforskrifterne skal det udtjente produkt bortskaffes på ordentlig vis. Derved genanvendes de brugbare materialer, og miljøet skånes. Nærmere informationer fås hos den ansvarlige kommunale myndighed eller det lokale bortskaffelsesfirma. Produktet er forsynet med følgende logo:



- 1 Hus
- 2 Rille til kniv
- 3 Rille til saks
- 4 Rille til kniv (anden side)
- 5 Slibehjul
- 6 Håndtag til sugekop
- 7 Tænd/sluk-knap
- 8 Kontrollampe for opladning
- 9 Type-C-opladningsport med 30 cm Type-C-kabel

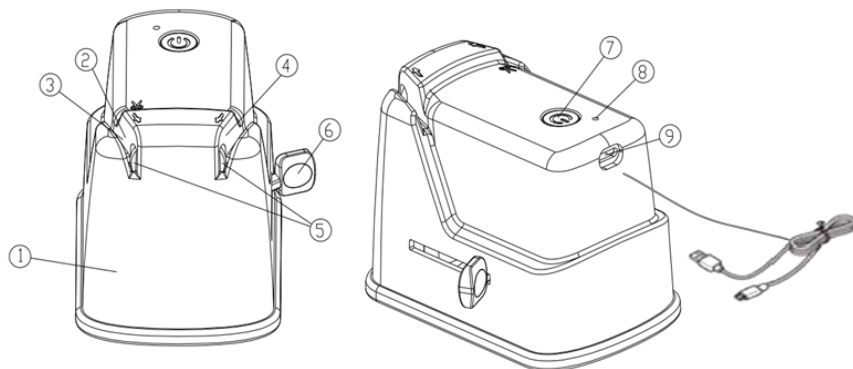


Billede 1

FUNKTIONER:


- Spænding: 3,7 V
- Type-C-opladningsport
- Motor: 3,7V / 50 Hz
- Driftstid ved konstant brug: 30 minutter
- Diamantbelagt hjul: Diamanttæthed 300

BETJENING:

1. Stil knivsliberen på en jævn overflade, og aktivér håndtaget med sugekoppen (6) for at fastgøre knivsliberen til bordet.

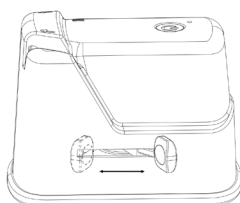

2. Tænd knivsliberen, tag kniven, og sæt den i rillen, så klingen rører ved slibehjulet. Bevæg kniven baglæns 8-10 gange (bevæg den ikke fremad). Det buede design sikrer, at knivsæggen slibes korrekt.
3. Gentag processen for den anden side af klingen, og bevæg kniven baglæns 7-8 gange.

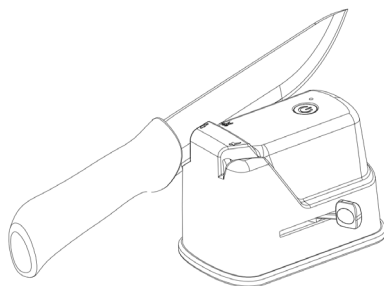

4. Sluk knivsliberen, og test knivens skarphed. Gentag processen, hvis kniven ikke er skarp nok.

RENGØRING:

Rengør knivsliberen med et tørt viskestykke eller et stykke køkkenrulle. Hold knivsliberen væk fra fugtige områder for at beskytte den og forlænge dens levetid.

OPLADNING:

Sæt USB Type-C-stikket i porten (9) på knivsliberen. Den røde lysdiode LED (9) lyser under opladningen og skifter til grønt, når batteriet er fuldt opladet. Opladningen varer typisk under 2,5 timer. Træk USB-stikket ud, når opladningen er udført. Den røde lysdiode blinker ved lavt batteriniveau. Oplad batteriet, før du bruger knivsliberen.

ADVARSEL


1. Opbevar knivsliberen et tørt sted.
2. Rengør ikke med et vådt viskestykke eller køkkenrulle.
3. Lad ikke knivsliberen oplade i mere end 2 timer for at undgå skader på batteriet.
4. 1 års garanti.
5. Må kun bruges af voksne. Mindreåriges brug er forbudt.
6. Batteriet skal bortskaffes i henhold til lokal lovgivning.

KOMPATIBLE KNIVE:



VIGTIG BEMÆRKNING:

Når du sliber sakse, skal du tage størrelsen i betragtning. Store eller meget tykke sakse slibes muligvis ikke korrekt.

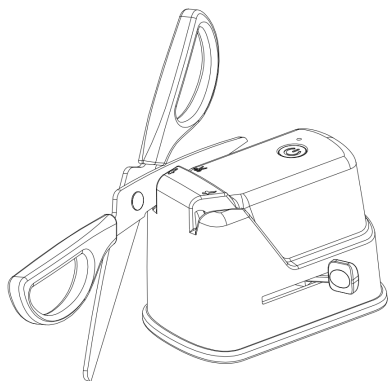

Den optimale klinge vinkel for vores knivsliber er 12-15 grader.

Diamanthjulet har et hårdhedsniveau på op til 9,8, mens niveauet for knives hårdhed er ca. 5-7. Du behøver derfor ikke at være bekymret for skader på hjulet.

Knivsliberen kan ikke bruges under opladning. Afbryd opladningen, hvis du skal bruge knivsliberen.

Batteriet er beskyttet, når motoren er under hård belastning. Den holder op med at fungere, og den røde lysdiode blinker. Tænd i dette tilfælde knivsliberen igen, og den virker igen normalt.

TEKNISKE DATA

Artikelnr. 10876108

DC 3.7V, 5 W

Batteri: 1 x 14500 / 500mAh

PRODUCENT

Epiq ApS

Krøyer Kielbergs Vej 3, 3. th

8660 Skanderborg, Danmark

www.epiq.dk

Vi tager forbehold for trykfejl.

INTRODUCTION

Thank you for choosing a product from Køkkenchef. You have acquired a quality product which meets all applicable performance and safety standards in the EU. In order to ensure proper treatment and a long product life, we recommend that you comply with the instructions below.

Please read the manual and especially the safety instructions carefully before using the product. Keep this manual and provide it for referral along with the product when others are using it.

GENERAL SAFETY INSTRUCTIONS

- Improper use of the product can cause personal injury and damage.
- Only use the product for what it is intended. The manufacturer is not liable for damages arising from improper use or handling.
- Always place the product on a dry, flat and stable surface well away from table edge or similar.
- The product is intended for household use only. The product is not for professional use.
- The product engine/electronics, cord or plug cannot be submerged in water, and no water may get in contact with the engine/electronics.
- Never touch the product, cord or plug with wet or damp hands.
- Do not expose the product to direct sunlight, high temperatures, humidity, dust or corrosive substances.
- Never leave the product when it is turned on.
- When the product is in use, it should be kept under constant supervision. Children should always be supervised when using the product to ensure that they do not play with the product. The product is not a toy.
- The product may have sharp parts and must, therefore, be kept out of reach of children.

- Only use the accessories that come with the product or that are recommended by the manufacturer.
- The product must not be used by people with reduced sensitivity, physical or mental disability, or people who are not able to operate the product unless they are supervised or instructed by a person responsible for their safety.

CORD AND PLUG

- Do not let the cord hang over the edge.
- Keep the cord and the product away from heat sources, hot objects and open flames.
- Unplug the power cord before cleaning and if the product is not in use. Do not pull the cord when removing the plug from the socket, rather grasp the plug itself.
- Make sure that the cord is fully extended.
- Check regularly that the cord and the plug are not damaged and do not use the product if this is the case, or if it has been dropped on the floor, dropped in water or damaged in another way.
- If the product or plug is damaged, the product must be inspected and, if necessary, repaired by an authorised repairer. Never try to repair the product yourself. Please, contact the store to see if there is a repair that falls under warranty. Tampering of the product will void the warranty.

RULES OF COMPLAINTS THE WARRANTY DOES NOT APPLY:

- If the above is not observed.
- If there has been unauthorised intervention of the product.
- If the product has been mishandled, subjected to rough treatment or some other form of damage.


PRODUCT DISPOSAL

Used product should not be disposed as household waste. According to legislation, the product should be disposed of properly so that the materials can be recycled in an environmentally

friendly manner. Further information is available from the responsible local authority or local disposal company. The product is equipped with the following logo:



- 1 Housing
- 2 Slot for knife
- 3 Slot for scissors
- 4 Slots for knife (other side)
- 5 Grinding wheel
- 6 Suction handle
- 7 On/Off button
- 8 Charging indicator light
- 9 Type-C charging port with 30cm Type-C cable

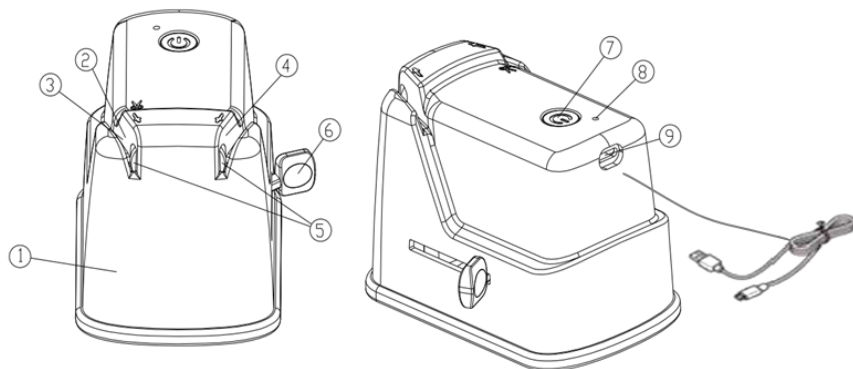


Picture1

FEATURES:


- Voltage: 3.7V
- Type-C charging port
- Motor: 3.7V / 50Hz
- Continuous use time: 30 minutes
- Diamond wheel: 300 mesh

OPERATION:

1. Place the knife sharpener on a smooth surface and activate the suction cup handle (6) to secure the base to the table.

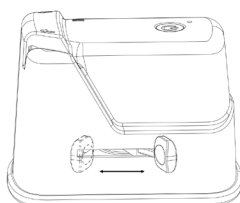

2. Turn on the sharpener, hold the knife, and place it in the slot so that the blade touches the grinding wheel. Move the knife backward 8-10 times (do not move it forward). The curved design ensures the knife edge is sharpened properly.
3. Repeat the process on the other side of the blade, moving the knife backward 7-8 times.

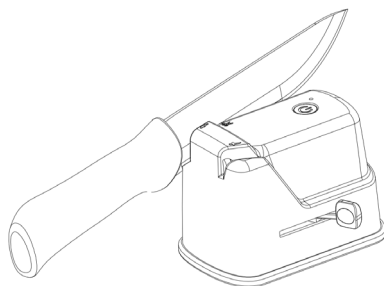

4. Turn off the sharpener and test the sharpness of the knife. If it's not sharp enough, repeat the process.

CLEANING:

Use a dry towel or paper to clean the sharpener. Keep it away from humid areas to protect it and extend its lifespan.

CHARGING:

Plug the USB Type-C connector into the port (9) on the sharpener. The red LED (9) will turn on while charging and will switch to green when the battery is fully charged. Charging typically takes less than 2.5 hours. Unplug the USB connector once charging is complete. The red LED will flash when the battery is low; please charge the product before use.

WARNING


1. Keep the knife sharpener in a dry place.
2. Do not use a wet towel or paper for cleaning.
3. Do not exceed 2 hours of charging time to avoid damaging the battery.
4. One-year warranty.
5. For adult use only; prohibited for minors.
6. Battery recycling must comply with local laws.

COMPATIBLE KNIVES:



IMPORTANT NOTES:

When using scissors, consider the size; large or excessively thick scissors may not sharpen properly.

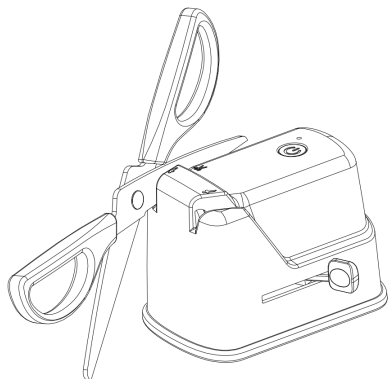

The optimal blade angle for our machine is 12-15 degrees.

The diamond wheel has a hardness level of up to 9.8, while the knife hardness level is about 5-7, so there's no need to worry about wheel damage.

The sharpener cannot be used while charging; please unplug it if you want to use it.

The battery is protected when the motor is under high pressure; it will stop working, and the red indicator light will flash. In this case, turn the sharpener back on, and it will be operational again.

TECHNICAL DATA

Article No. 10876108

DC 3.7V, 5W

Battery: 1 x 14500 / 500mAh

PRODUCER

Epiq ApS

Krøyer Kielbergs Vej 3, 3. th

8660 Skanderborg, Denmark

www.epiq.dk

We cannot be held responsible for any printing errors.