

# &me.



## INSTRUCTION MANUAL NAIL DRILL

11303380

## INTRODUKTION

Mange tak fordi du har valgt et produkt fra &me. Dermed har du erhvervet et kvalitetsprodukt som opfylder alle gældende krav til præstation og sikkerhedsstandarder i EU. For at sikre en korrekt behandling og en lang levetid anbefaler vi, at du overholder nedenstående anvisninger.

Du bedes læse vejledningen og især sikkerheds anvisningerne omhyggeligt igennem, inden du tager produktet i brug. Opbevar denne betjeningsvejledning, og overlad altid kun produktet til andre sammen med betjeningsvejledningen.

## GENERELLE SIKKERHEDSFORANSTALTNINGER

- Forkert brug af produktet kan medføre personskade og beskadige produktet.
- Anvend kun produktet til det, det er beregnet til. Producenten er ikke ansvarlig for skader, der opstår som følge af forkert brug eller håndtering.
- Anbring altid produktet på et tørt, plant og stabilt underlag på god afstand af bordkant eller lignende.
- Produktet er udelukkende beregnet til husholdningsbrug. Produktet må ikke anvendes til erhvervsbrug.
- Produktets motordel/elektronik, ledning og stikket må ikke nedsænkes i vand, og der må ikke trænge vand i motordel/elektronik.
- Rør aldrig ved produktet, ledningen eller stikkontakten med våde eller fugtige hænder.
- Udsæt ikke produktet for direkte sollys, høje temperaturer, fugt, støv eller ætsende stoffer.
- Forlad aldrig produktet, når det er tændt.
- Når produktet er i brug, bør det holdes under konstant opsyn.
- Når produktet bruges skal børn der opholder sig i nærheden af den altid holdes under opsyn.

- Børn må ikke lege med produktet.
- Produktet kan indeholde skarpe dele og bør derfor opbevares utilgængeligt for børn.
- Brug kun tilbehør, der følger med produktet eller er anbefalet af producenten.
- Produktet må ikke bruges af personer med nedsat følsomhed, fysiske eller mentale handicap, eller personer, som ikke er i stand til at betjene produktet, medmindre de overvåges eller instrueres i brugen af en person, som er ansvarlig for deres sikkerhed.

## **LEDNING OG STIK**

- Lad ikke ledningen hænge ud over bordkanten.
- Hold ledningen og produktet væk fra varmekilder, varme genstande og åben ild.
- Tag stikket ud af stikkontakten før rengøring, og hvis produktet ikke er i brug. Undlad at trække i ledningen, når du tager stikket ud af stikkontakten, men tag fat om selve stikket.
- Sørg for, at ledningen er rullet helt ud.
- Kontrollér jævnligt, om ledningen eller stikket er beskadiget, og brug ikke produktet, hvis dette er tilfældet, eller hvis det har været tabt på gulvet, tabt i vand eller er blevet beskadiget på en anden måde.
- Hvis produktet, ledningen eller stikket er beskadiget, skal produktet efterses og om nødvendigt repareres af en autoriseret reparatør. Forsøg aldrig at reparere produktet selv. Kontakt købsstedet, hvis der er tale om en reparation, der falder ind under reklamationsretten. Hvis der foretages uautoriserede indgreb i produktet, bortfalder reklamationsretten.

## **REKLAMATIONSRETEN GÆLDER IKKE:**


- Hvis ovennævnte ikke iagttages.
- Hvis der har været foretaget uautoriserede indgreb i produktet.
- Hvis produktet har været misligholdt, udsat for en voldsom behandling eller lidt anden form for overlast.

## **BORTSKAFFELSE AF PRODUKTET**


Brugte produkter må ikke smides i husholdningsaffaldet. Iht. lovforskrifterne skal det udtjente produkt bortskaffes på ordentlig vis. Derved genanvendes de brugbare materialer, og miljøet skånes. Nærmere informationer fås hos den ansvarlige kommunale myndighed eller det lokale bortskaffelsesfirma. Produktet er forsynet med følgende logo:



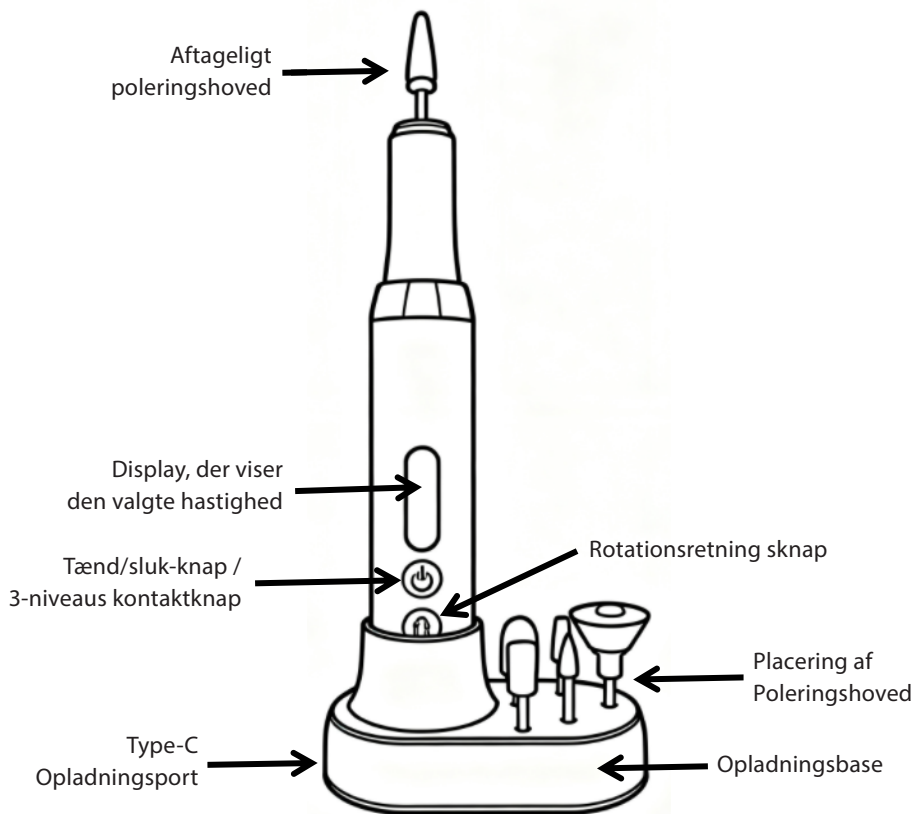

## KEND DIT NEGLEFILSSÆT



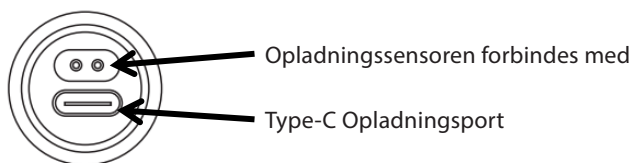










## APPARATETS BUND:



## POLISHING HEAD DESCRIPTION

	1 x Til formning af negle
	1 x Til polering af negleoverfladen

	1 x Til polering af buede eller ujævne negleoverflader
	1 x Til polering af neglekanter
	1 x Til eksfoliering af tør hud på hænderne
	1 x Mandrel-bit (bruges sammen med sliberuller)
	6 x Udskiftelige sliberuller
	1 x Til polering af små negle eller fjernelse af hård hud
	1 x Til polering af store negle eller fjernelse af hård hud
	1 x Til mattering af negleoverfladen eller polering af hjørner
	1 x Til polering af neglekanter
	1 x Til polering af neglens buer eller kanter
	1 x Til fjernelse af gel-neglelak

## SÅDAN OPLADES PRODUKTET

- Første brug: Hvis du bruger produktet for første gang, eller hvis det ikke har været brugt i lang tid, anbefales det at oplade det uafbrudt i mindst 4 timer. Du kan oplade den direkte på bore-bunden eller lade den via opladningsbasen.
- Sluk før opladning: Før du starter opladningen, skal du slukke for neglefilen ved at holde tænd/sluk-knappen inde (long press).
- Temperatur: Sørg for at oplade, bruge og opbevare produktet inden for et temperaturinterval på 5°C til 35°C.
- Opladningstid: Oplad produktet i 3 timer hver gang, men aldrig længere end 12 timer ad gangen.
- Under opladning blinker batteriikonet, og det stopper med at blinke, når opladningen er færdig.
- Brugstid: Den faktiske brugstid kan variere afhængigt af dine brugsvaner og rengøringsmetoder.



## SÅDAN BRUGER DU NEGLEFILEN

Denne neglefil er specifikt designet til polering af negle og fjernelse af hård hud på hænder og fødder. Brug ikke apparatet på andre dele af kroppen.

1. Forberedelse: Vælg det ønskede polerhoved og sæt det ca. 10 mm ind i toppen af maskinen.
2. Tænd: Hold tænd/sluk-knappen inde (long press) for at tænde apparatet. Du kan nu begynde at polere negle eller fjerne hård hud. (Advarsel: Må ikke bruges på skadet eller irriteret hud.)
3. Hastighed: Tryk kort på tænd/sluk-knappen for at skifte mellem de L/M/H hastighedsniveauer.
4. Rotationsretning: Tryk kort på knappen for omvendt rotation for at ændre retningen.
5. Sluk: Hold tænd/sluk-knappen inde for at slukke apparatet helt.

## RENGØRING OG OPBEVARING

Efter hver brug: For at opretholde optimal ydeevne anbefales det at rengøre polerhovederne efter hver brug.

### OPBEVARING:

- Placering: Apparatet skal opbevares på et køligt og tørt sted uden for børns rækkevidde.
- Vedligeholdelse af kabel: Placer ladekablet pænt ved siden af apparatet. Undgå at vikle ledningen stramt omkring selve maskinen, da det kan skade kablet.
- Organisering: Dine mest anvendte polerhoveder kan placeres i de dertilhørende huller i basen.

### TEKNISKE DATA

Artikelnr. 11303380

DC5V, 1A

5 Watt

Batteri: 500mAh Li Batteri

Opladningstid: 3 timer

Brugstid: 4-5 timer

### PRODUCENT

Epiq ApS

Krøyer Kielbergs Vej 3, 3. th

8660 Skanderborg, Danmark

[www.epiq.dk](http://www.epiq.dk)

Vi tager forbehold for trykfejl.

## INTRODUCTION

Thank you for choosing a product from &me. You have acquired a quality product which meets all applicable performance and safety standards in the EU. In order to ensure proper treatment and a long product life, we recommend that you comply with the instructions below.

Please read the manual and especially the safety instructions carefully before using the product. Keep this manual and provide it for referral along with the product when others are using it.

## GENERAL SAFETY INSTRUCTIONS

- Improper use of the product can cause personal injury and damage.
- Only use the product for what it is intended. The manufacturer is not liable for damages arising from improper use or handling.
- Always place the product on a dry, flat and stable surface well away from table edge or similar.
- The product is intended for household use only. The product is not for professional use.
- The product engine/electronics, cord or plug cannot be submerged in water, and no water may get in contact with the engine/electronics.
- Never touch the product, cord or plug with wet or damp hands.
- Do not expose the product to direct sunlight, high temperatures, humidity, dust or corrosive substances.
- Never leave the product when it is turned on.
- When the product is in use, it should be kept under constant supervision. Children should always be supervised when using the product to ensure that they do not play with the product. The product is not a toy.
- The product may have sharp parts and must, therefore, be kept out of reach of children.

- Only use the accessories that come with the product or that are recommended by the manufacturer.
- The product must not be used by people with reduced sensitivity, physical or mental disability, or people who are not able to operate the product unless they are supervised or instructed by a person responsible for their safety.

## **CORD AND PLUG**

- Do not let the cord hang over the edge.
- Keep the cord and the product away from heat sources, hot objects and open flames.
- Unplug the power cord before cleaning and if the product is not in use. Do not pull the cord when removing the plug from the socket, rather grasp the plug itself.
- Make sure that the cord is fully extended.
- Check regularly that the cord and the plug are not damaged and do not use the product if this is the case, or if it has been dropped on the floor, dropped in water or damaged in another way.
- If the product or plug is damaged, the product must be inspected and, if necessary, repaired by an authorised repairer. Never try to repair the product yourself. Please, contact the store to see if there is a repair that falls under warranty. Tampering of the product will void the warranty.

## **RULES OF COMPLAINTS THE WARRANTY DOES NOT APPLY:**

- If the above is not observed.
- If there has been unauthorised intervention of the product.
- If the product has been mishandled, subjected to rough treatment or some other form of damage.


## **PRODUCT DISPOSAL**

Used product should not be disposed as household waste. According to legislation, the product should be disposed of properly so that the materials can be recycled in an environmentally


friendly manner. Further information is available from the responsible local authority or local disposal company. The product is equipped with the following logo:



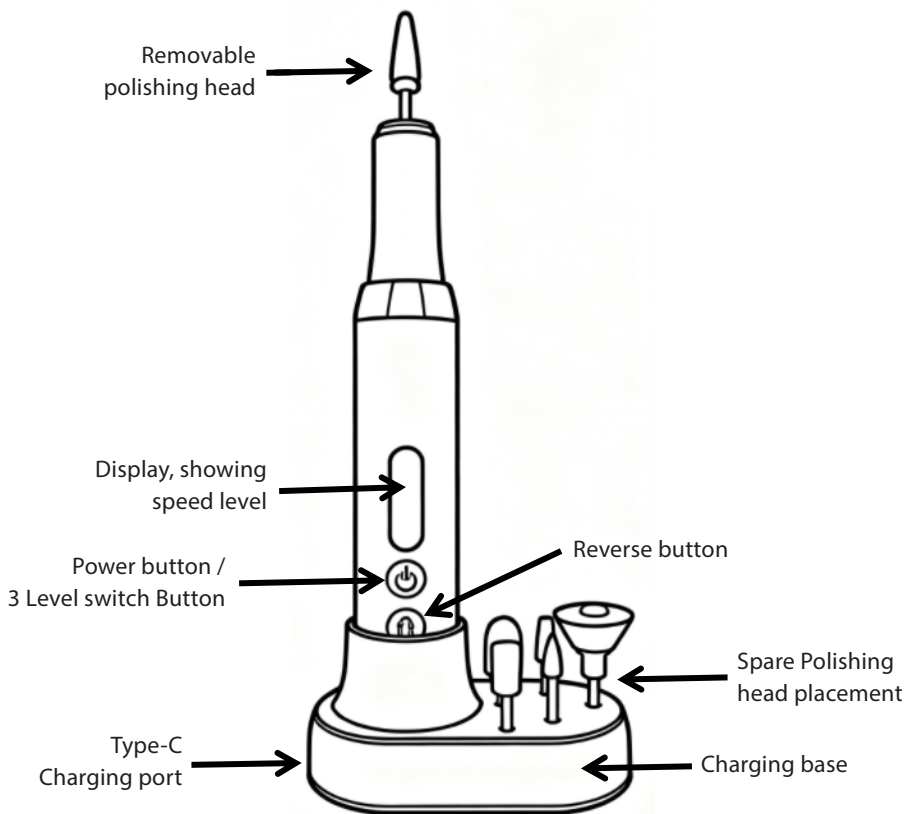

## KNOW YOUR NAIL DRILL SET



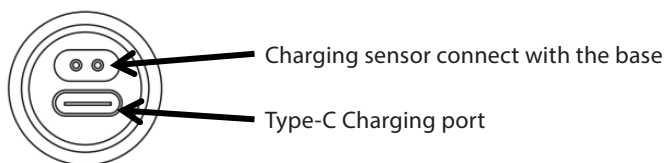










### DRILL BOTTOM:



### POLISHING HEAD DESCRIPTION

	1 x Ideal for shaping nails
	1 x For polishing the nail surface

	1 x For polishing curved or uneven nail surfaces
	1 x For polishing nail edges
	1 x For exfoliating dry skin on hands
	1 x Mandrel bit (to be used with sanding bands)
	6 x Replaceable sanding bands
	1 x For polishing small nails or removing calluses
	1 x For polishing large nails or removing calluses
	1 x For etching the nail surface or polishing corners
	1 x For polishing nail edges
	1 x For polishing the curves or edges of nails
	1 x For removing gel nail polish

## HOW TO CHARGE

- **Initial Use:** If using the device for the first time or after a long period of inactivity, it is recommended to charge it continuously for at least 4 hours. You can charge it directly on drill bottom, or charge it through charging base.
- **Power Off:** Before charging, ensure the nail drill is turned off by long-pressing the power button.
- **Temperature Range:** Always charge, use, and store the product within a temperature range of 5°C to 35°C.
- **Charging Duration:** Standard charging takes approximately 3 hours. Do not charge the device for more than 12 hours at a time.
- **When charging, the battery icon will flash; it will stop flashing once charging is finished**
- **Battery Life:** Please note that actual usage time may vary depending on your usage habits and cleaning methods.



## USING THE NAIL DRILL

This nail drill is specifically designed for polishing nails and removing calluses on the hands and feet. Do not use this device on any other parts of the body.

1. Preparation: Select your desired polishing head and insert it approximately 10 mm into the top of the drill.
2. Power On: Long-press the power button to turn on the device. You can now begin polishing your nails or treating the skin on your hands or feet. (Caution: Do not use on injured or irritated skin.)
3. Speed Adjustment: Short-press the power button to toggle between the L/M/H speed levels.
4. Rotation Direction: Short-press the reverse button (inversion) to change the rotation direction.
5. Power Off: Long-press the power button to turn off the device manually.

## CLEANING AND STORAGE

After Each Use: To maintain optimal performance, we recommend cleaning the polishing heads after every use.

### STORAGE:

- Location: Store the appliance in a cool, dry place, well out of reach of children.
- Cord Care: Neatly place the charging cable beside the device. Do not wrap the power cord around the appliance, as this can damage the internal wiring.
- Organization: Frequently used polishing heads can be stored in the designated placement holes on the base.

### TECHNICAL DATA

Article No. 11303380

DC5V, 1A

5 Watt

Battery: 500mAh Li Battery

Charging time: 3 hours

Use time: 4-5 hours

### PRODUCER

Epiq ApS

Krøyer Kielbergs Vej 3, 3. th

8660 Skanderborg, Denmark

[www.epiq.dk](http://www.epiq.dk)

We cannot be held responsible for any printing errors.