



Voice Disguiser™

Record and Disguise your voice!

Ages 6 and Up
20191

Important: Please save this instruction sheet. It contains valuable product information.

How to Play

The SpyX Voice Disguiser records up to 6 seconds of any sound including your voice. You can then play back that sound or voice so that it sounds completely different! That way you can disguise your voice when leaving messages.

- 1) **To record your voice**, press and hold the record button, you will hear 1 beep. This is when you start talking into the microphone. When you hear 2 beeps let go of the record button. Fig 1
- 2) For the best voice disguising, put the disguise slide in the middle position.
- 3) Press play once to **play back** the message that you recorded.
- 4) While it is playing, move the disguise slide back and forth to hear how you can make your message sound freaky! You can speed it up or slow it down!
- 5) The message will repeat over and over if you hold the play button.


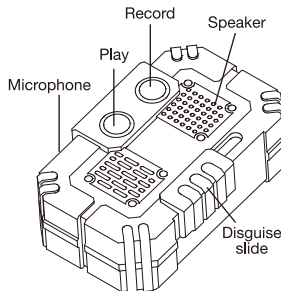


Fig. 1

ATTENTION ADULTS—TO REPLACE BATTERIES Fig 2.

SpyX Voice Disguiser requires 3 – 386 (LR43) batteries, included.

1. Locate the battery compartment on the base of the toy. Use a small Phillips head screwdriver to loosen the screw, and remove the **BATTERY COVER**.
2. Remove all old batteries.
3. Place new batteries in compartment as shown
4. Replace the battery cover and tighten screw.

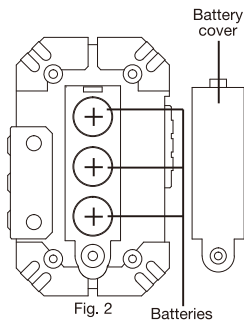

- DK** Kræver 3 x LR43-batterier, som medfølger.
NO Kræver 3 x LR43-batterier, som medfølger.
SE Kræver 3 x LR43-batterier medfølger.
FI Vaatii 3 x LR43-parista, paristot ovat mukana.
GB Required 3 x LR43-batteries, included.

Fig. 2

Batteries

DK ADVARSEL.

Isætning af batterier bør foretages af en voksen. Husk at vende + og – korrekt. Bland aldrig gamle og nye batterier eller forskellige batterityper. Forsøg aldrig at genoplade ikke-genopladelige batterier. Tag batterierne ud hvis varen ikke anvendes i en længere periode. Opbrugte batterier skal fjernes fra apparatet. Kortslut ikke batterikontakterne. Indeholder knapcellebatteri. Farligt hvis indtaget – se instrukser.

Indeholder knapcellebatteri. Et knapcellebatteri kan forårsage alvorlige indvendige kemiske forbrændinger, hvis indtaget.

Bortskaf omgående brugte batterier. Opbevar nye og brugte batterier utilgængeligt for børn. Hvis mistanke om indtagelse af batterier, kontakt omgående læge.

NO ADVARSEL.

Batterier bør monteres av en voksen. Husk å plassere + og – korrekt. Bland aldri gamle og nye batterier eller forskjellige batterityper. Forsøk aldri å lade ikke-oppladbare batterier. Ta batterierne ut hvis produktet ikke brukes i en lengere periode. Tomme batterier må fjernes fra leketøyet. Kortslut ikke batterikontaktene.

Inneholder knapcellebatteri. Farlig hvis det inntas – se instruksjoner.

Inneholder knapcellebatteri. Et knapcellebatteri kan forårsake alvorlige innvendige kjemiske forbrenninger ved inntak.

Kast straks brukte batterier. Oppbevar nye og brukte batterier utilgjengelig for barn. Kontakt lege umiddelbart hvis du mistenker inntak av batterier.

SE BATTERIVARNING.

Infoga batterierna, bör göras av vuxen. Kom ihåg att aktivera + och – på rätt sätt. Blanda aldrig gamla och nya batterier eller olika batterityper. Försök aldrig att ladda icke-uppladdningsbara batterier. Ta ur batterierna om produkten inte används en längre period. Avlägsna urladdade batterier från lekseten. Kortslut inte batterikontakterna.

Innehåller knapcellsbatteiri. Farligt vid förtäring - se instruktionerna

Denna produkt innehåller ett knapcellsbatteiri. Ett knapcellsbatteiri kan orsaka allvarliga inre kemiska brännskador om det sväljs.

Kasta omedelbart använda batterier. Förvara nya och använda batterier utom räckhåll för barn. Om du tror att batterier kan ha svälts, kontakta omedelbart läkare.

FI VAROITUS.

Vain aikuisen tulee asettaa paristot paikalleen. Muista asettaa + ja – oikein päin. Älä koskaan sekoita vanhoja ja uusia tai eri tyyppisiä paristoja keskenään. Älä koskaan yritä ladata latauskelvottomia akkuja. Poista paristot, jos tuotetta ei käytetä pitkään aikaan. Tyhjtät paristot tulee irrottaa leluista. Älä päästä pariston napoja oikoskuun.

Sisältää nappipariston. Haitallista nieltynä – katso ohjeet

Tämä tuote sisältää nappipariston. Nappiparisto voi aiheuttaa vakavia sisäisiä kemiallisia palovammoja nieltynä.

Hävität käytetyt paristot välittömästi. Pidä uudet ja käytetyt paristot pois lasten ulottuvilta. Jos epäilet, että lapsi on niellyt paristot, ota heti yhteys lääkäriin.

GB WARNING.

Inserting the batteries should be carried out by an adult. Remember to position + and – correctly. Never mix old and new batteries or different types of batteries. Never attempt to recharge non-rechargeable batteries. Remove batteries if product is not used for an extended period. Exhausted batteries are to be removed from the toy. Do not short circuit the battery contacts.

Contains coin battery. Hazardous if swallowed – see instructions.

This product contains a coin battery. A coin battery can cause serious internal chemical burns if swallowed

Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.



LINEX

Imported by LINEX ApS,
Englandsvej 8, 5700 Svendborg,
Denmark

Product specifications subject to change.
VOICE DISGISER SET 20191-IS-US



©2021 Atomic Monkey Products, Ltd.
Hong Kong, China
All rights reserved. PRINTED IN CHINA