

sall_{ing}



INSTRUCTION MANUAL SMOOTHIE TO GO BLENDER

10481969

INTRODUKTION

Mange tak fordi du har valgt et produkt fra Salling. Dermed har du erhvervet et kvalitetsprodukt som opfylder alle gældende krav til præstation og sikkerhedsstandarder i EU. For at sikre en korrekt behandling og en lang levetid anbefaler vi, at du overholder nedenstående anvisninger.

Du bedes læse vejledningen og især sikkerheds anvisningerne omhyggeligt igennem, inden du tager produktet i brug. Opbevar denne betjeningsvejledning, og overlad altid kun produktet til andre sammen med betjeningsvejledningen.

GENERELLE SIKKERHEDSFORANSTALTNINGER

- Forkert brug af produktet kan medføre personskade og beskadige produktet.
- Anvend kun produktet til det, det er beregnet til. Producenten er ikke ansvarlig for skader, der opstår som følge af forkert brug eller håndtering.
- Anbring altid produktet på et tørt, plant og stabilt underlag på god afstand af bordkant eller lignende.
- Produktet er udelukkende beregnet til husholdningsbrug. Produktet må ikke anvendes til erhvervsbrug.
- Produktet må kun sluttes til 220-240V~, 50/60Hz.
- Produktets motordel/elektronik, ledning og stikket må ikke nedsænkes i vand, og der må ikke trænge vand i motordel/elektronik.
- Rør aldrig ved produktet, ledningen eller stikkontakten med våde eller fugtige hænder.
- Udsæt ikke produktet for direkte sollys, høje temperaturer, fugt, støv eller ætsende stoffer.
- Forlad aldrig produktet, når det er tændt.
- Når produktet er i brug, bør det holdes under konstant opsyn.
- Når produktet bruges skal børn der opholder sig i nærheden af

den altid holdes under opsyn.

- Børn må ikke lege med produktet.
- Produktet kan indeholde skarpe dele og bør derfor opbevares utilgængeligt for børn.
- Brug kun tilbehør, der følger med produktet eller er anbefalet af producenten.
- Produktet må ikke bruges af personer med nedsat følsomhed, fysiske eller mentale handicap, eller personer, som ikke er i stand til at betjene produktet, medmindre de overvåges eller instrueres i brugen af en person, som er ansvarlig for deres sikkerhed.

LEDNING OG STIK

- Lad ikke ledningen hænge ud over bordkanten.
- Hold ledningen og produktet væk fra varmekilder, varme genstande og åben ild.
- Tag stikket ud af stikkontakten før rengøring, og hvis produktet ikke er i brug. Undlad at trække i ledningen, når du tager stikket ud af stikkontakten, men tag fat om selve stikket.
- Sørg for, at ledningen er rullet helt ud.
- Kontrollér jævnligt, om ledningen eller stikket er beskadiget, og brug ikke produktet, hvis dette er tilfældet, eller hvis det har været tabt på gulvet, tabt i vand eller er blevet beskadiget på en anden måde.
- Hvis produktet, ledningen eller stikket er beskadiget, skal produktet efterses og om nødvendigt repareres af en autoriseret reparatør. Forsøg aldrig at reparere produktet selv. Kontakt købsstedet, hvis der er tale om en reparation, der falder ind under reklamationsretten. Hvis der foretages uautoriserede indgreb i produktet, bortfalder reklamationsretten.

REKLAMATIONSRETEN GÆLDER IKKE:

- Hvis ovennævnte ikke iagttages.
- Hvis der har været foretaget uautoriserede indgreb i produktet.
- Hvis produktet har været misligholdt, udsat for en voldsom behandling eller lidt anden form for overlast.

BORTSKAFFELSE AF PRODUKTET


Brugte produkter må ikke smides i husholdningsaffaldet. Iht. lovforskrifterne skal det udtjente produkt bortskaffes på ordentlig vis. Derved genanvendes de brugbare materialer, og miljøet skånes. Nærmere informationer fås hos den ansvarlige kommunale myndighed eller det lokale bortskaffelsesfirma. Produktet er forsynet med følgende logo:



FØR BRUG:

1. Betjen ikke blenderen, når blenderflasken er tom, og vent, indtil knivene er standset helt, før du tager låget af flasken.
2. Træk altid ledningen ud af stikkontakten, før du sætter dele på eller fjerner dele fra blenderen, når den ikke bruges og før rengøring.
3. Rør ikke ved dele i bevægelse for at undgå personskaade.
4. Advarsel: Forkert brug kan medføre alvorlig personskaade. Vær forsigtig, når du håndterer knivene, især når du fjerner knivene fra flasken, tømmer flasken og under rengøring.
5. Stik ikke hænderne eller køkkengrej ned i flasken under blanding for at undgå risikoen for personskaade eller skade på blenderen.
6. Knivene er skarpe og skal håndteres med forsigtighed.
7. Placer aldrig knivenheden på motorhuset uden at sætte flasken korrekt på for at undgå personskaader.
8. Brug kun blenderen med låget sat på.
9. Brug kun tilbehør, der er angivet i brugervejledningen.
10. Blend ikke varme væsker.

BESKRIVELSE AF DELE:

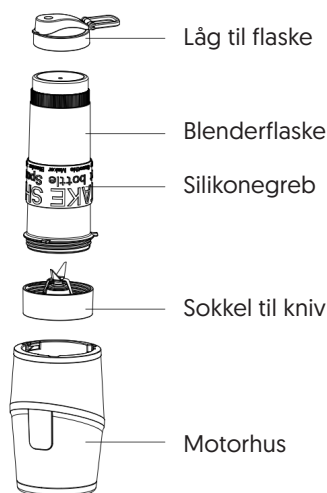

BEMÆRK:

For at få den bedste ydelse anbefales det at rengøre alle tilbehør (med undtagelse af motorhuset) med varmt sæbevand før første brug. Skyl, og tør alle tilbehør grundigt.

SÅDAN BRUGER DU APPARATET:

Forsigtig: Kontrollér, at motorhuset er afbrudt fra strømkilden før brugen.

1. Sæt piskerisene i hullerne, og drej dem lidt, indtil de låses fast i den rigtige stilling.
2. Sænk piskerisene ned i ingredienserne.
3. Sæt ledningen til mixeren i en stikkontakt.
4. Vælg den ønskede hastighed med hastighedsvælgeren.
5. Flyt hastighedsvælgeren til stillingen "0", når den ønskede konsistens er opnået. Vent, indtil piskerisene stopper, og træk derefter ledningen ud af stikkontakten.
6. Tryk på udløserknappen til piskerisene, og fjern dem derefter.
7. Sæt piskerisene eller dejkroge ned i dejen for at undgå sprøjt, før du starter mixeren.

VIGTIGT!

1. Blenderen kan køre uafbrudt i maksimalt 1 minut ad gangen. Lad blenderen køle tilstrækkeligt ned, før du bruger den igen.
2. Ingen af delene eller blenderen kan kommes i opvaskemaskinen.
3. Må ikke bruges til knusning af isterninger. Hvis du blander med is, skal du sørge for, at der blendes med væske.
4. Blenderen er kun til væsker og bløde frugter. Skær frugterne i små stykker før blending. Må ikke bruges til tørmaling.
5. Motoren stopper automatisk, hvis den overbelastes. Træk ledningen ud af stikkontakten, tøm blenderflasken, og vent i 45 minutter, indtil blenderen er kølet ned.

RENGØRING OG PLEJE:

1. Træk ledningen ud af stikkontakten før rengøring.
2. Rengør motorhuset med en fugtig klud efter brugen, og tør det af med en tør klud. Undgå vand og høj fugtighed.
3. Rengør blenderflasken og knivene under rindende vand. Hold den samlede kande og knivene væk fra børn.
4. Rengør ikke blenderen med stoffer som f.eks. fortynder og benzen.
5. Opbevar blenderen et tørt sted uden direkte sollys.
6. Læg aldrig foden (motorhuset) eller ledningen ned i vand med henblik på rengøring.

TEKNISKE DATA

Artikelnr. 10481969
220-240V~, 50/60Hz
500 Watt
Kørselstid: 1 Minut

PRODUCENT

Epiq ApS
Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Danmark
www.epiq.dk

Vi tager forbehold for trykfejl.

INTRODUCTION

Thank you for choosing a product from Salling. You have acquired a quality product which meets all applicable performance and safety standards in the EU. In order to ensure proper treatment and a long product life, we recommend that you comply with the instructions below.

Please read the manual and especially the safety instructions carefully before using the product. Keep this manual and provide it for referral along with the product when others are using it.

GENERAL SAFETY INSTRUCTIONS

- Improper use of the product can cause personal injury and damage.
- Only use the product for what it is intended. The manufacturer is not liable for damages arising from improper use or handling.
- Always place the product on a dry, flat and stable surface well away from table edge or similar.
- The product is intended for household use only. The product is not for professional use.
- The product may only be connected to 220-240V~, 50/60Hz.
- The product engine/electronics, cord or plug cannot be submerged in water, and no water may get in contact with the engine/electronics.
- Never touch the product, cord or plug with wet or damp hands.
- Do not expose the product to direct sunlight, high temperatures, humidity, dust or corrosive substances.
- Never leave the product when it is turned on.
- When the product is in use, it should be kept under constant supervision. Children should always be supervised when using the product to ensure that they do not play with the product. The product is not a toy.
- The product may have sharp parts and must, therefore, be kept

out of reach of children.

- Only use the accessories that come with the product or that are recommended by the manufacturer.
- The product must not be used by people with reduced sensitivity, physical or mental disability, or people who are not able to operate the product unless they are supervised or instructed by a person responsible for their safety.

CORD AND PLUG

- Do not let the cord hang over the edge.
- Keep the cord and the product away from heat sources, hot objects and open flames.
- Unplug the power cord before cleaning and if the product is not in use. Do not pull the cord when removing the plug from the socket, rather grasp the plug itself.
- Make sure that the cord is fully extended.
- Check regularly that the cord and the plug are not damaged and do not use the product if this is the case, or if it has been dropped on the floor, dropped in water or damaged in another way.
- If the product or plug is damaged, the product must be inspected and, if necessary, repaired by an authorised repairer. Never try to repair the product yourself. Please, contact the store to see if there is a repair that falls under warranty. Tampering of the product will void the warranty.

RULES OF COMPLAINTS THE WARRANTY DOES NOT APPLY:

- If the above is not observed.
- If there has been unauthorised intervention of the product.
- If the product has been mishandled, subjected to rough treatment or some other form of damage.

PRODUCT DISPOSAL

Used product should not be disposed as household waste. According to legislation, the product should be disposed of


properly so that the materials can be recycled in an environmentally friendly manner. Further information is available from the responsible local authority or local disposal company. The product is equipped with the following logo:



IMPORTANT SAFEGUARD:

1. Do not operate the product when the cup is empty and wait for the blades to come to a complete stop before removing the cup lid.
2. Always unplug from the outlet before putting on or taking off parts, when not in use, and before cleaning.
3. Avoid contact with any moving parts to prevent injury.
4. Warning: Misuse may result in serious injury. Exercise caution when handling cutting blades, particularly when removing the blade from the bottle, emptying the bottle, or cleaning.
5. Keep hands and utensils out of the container while blending to reduce the risk of injury to persons or damage to the blender.
6. The blades are sharp and must be handled with care.
7. To prevent injury, never place cutter-assembly blades on the base without attaching the jar properly.
8. Always operate the blender with the cover in place.
9. Only use attachments that are listed in the instruction book.
10. Do not blend hot liquids.

PARTS DESCRIPTION:

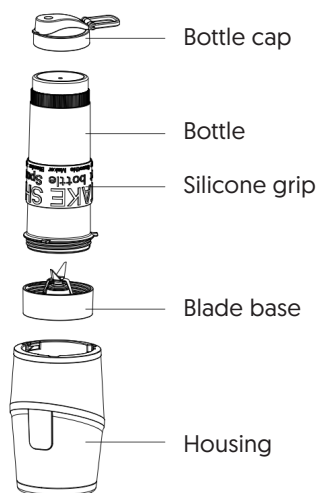

NOTE:

For optimal performance, it is recommended to clean all accessories (excluding the motor base) with warm soapy water prior to first use. Make sure to rinse and dry the accessories thoroughly.

HOW TO USE:

Caution: Prior to use, ensure that the motor base is unplugged from the power source.

1. Place the bottle on a flat surface and open it.
2. Fill the bottle with your desired ingredients, ensuring that the amount does not exceed the maximum mark on the bottle.
3. Attach the blades to the open end of the bottle.
4. Turn the bottle upside down and place it and the blades into the motor base. Make certain that the three microswitches are locked in the correct position.
5. To start blending, turn the bottle clockwise and lock it into the base. To stop mixing, turn the bottle counterclockwise from the base.
6. Unlock the bottle from the base.
7. Turn the bottle right side up and place it on a flat surface. Remove the blade base and replace it with the drinking lid.

IMPORTANT!

1. The appliance can be used for a maximum of 1 minute continuously. Allow the appliance to cool down sufficiently before using it again.
2. None of the parts or appliances is dishwasher safe.
3. Do not use it for ice-crushing. If blending with ice, ensure that it is mixed with liquid.
4. This appliance is only for liquids and soft fruits. Cut the fruit into small pieces before blending. Do not use it for dry grinding.
5. When overloaded, the motor will stop automatically. Unplug the appliance, empty the cup, and wait for 45 minutes to allow it to cool down.

CLEANING AND CARE:

1. Before cleaning, unplug the appliance from the wall outlet.
2. After use, clean the motor base with a damp towel and dry it with a dry towel. Avoid water and high humidity.
3. Wash the bottle and blade under running water. Keep the combined bottle and blade away from children.
4. Do not clean the appliance with substances such as "thinner" or "benzene".
5. Store the appliance in a dry place and away from direct sunlight.
6. Never immerse the Base [Motor unit] or power cord in water for cleaning.

TECHNICAL DATA

Article No. 10481969
220-240V~, 50/60Hz
500 Watt
KB TIME: 1 Minute

PRODUCER

Epiq ApS
Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Denmark
www.epiq.dk

We cannot be held responsible for any printing errors.