

KØKKENHEF



INSTRUCTION MANUAL MICROWAVE OVEN

10077928

INTRODUKTION

Mange tak fordi du har valgt et produkt fra Køkkenchef. Dermed har du erhvervet et kvalitetsprodukt som opfylder alle gældende krav til præstation og sikkerhedsstandarder i EU. For at sikre en korrekt behandling og en lang levetid anbefaler vi, at du overholder nedenstående anvisninger.

Du bedes læse vejledningen og især sikkerheds anvisningerne omhyggeligt igennem, inden du tager produktet i brug. Opbevar denne betjeningsvejledning, og overlad altid kun produktet til andre sammen med betjeningsvejledningen.

GENERELLE SIKKERHEDSFORANSTALTNINGER

- Forkert brug af produktet kan medføre personskade og beskadige produktet.
- Anvend kun produktet til det, det er beregnet til. Producenten er ikke ansvarlig for skader, der opstår som følge af forkert brug eller håndtering.
- Anbring altid produktet på et tørt, plant og stabilt underlag på god afstand af bordkant eller lignende.
- Produktet er udelukkende beregnet til husholdningsbrug. Produktet må ikke anvendes til erhvervsbrug.
- Produktet må kun sluttes til 220-240V~, 50Hz.
- Produktets motordel/elektronik, ledning og stikket må ikke nedsænkes i vand, og der må ikke trænge vand i motordel/elektronik.
- Rør aldrig ved produktet, ledningen eller stikkontakten med våde eller fugtige hænder.
- Udsæt ikke produktet for direkte sollys, høje temperaturer, fugt, støv eller ætsende stoffer.
- Forlad aldrig produktet, når det er tændt.
- Når produktet er i brug, bør det holdes under konstant opsyn.
- Når produktet bruges skal børn der opholder sig i nærheden af

den altid holdes under opsyn.

- Børn må ikke lege med produktet.
- Produktet kan indeholde skarpe dele og bør derfor opbevares utilgængeligt for børn.
- Brug kun tilbehør, der følger med produktet eller er anbefalet af producenten.
- Produktet må bruges af børn på 8 år eller derover og personer med reducerede fysiske, sensoriske eller mentale evner, eller som mangler erfaring og viden, hvis de er under opsyn eller har modtaget instruktion i sikker brug af produktet og forstår de involverede farer.
- Hold produktet og ledningen uden for rækkevidden af børn under 8 år.
- Rengøring og vedligeholdelse må ikke udføres af børn med mindre de er ældre end 8 år og under opsyn.

LEDNING OG STIK

- Lad ikke ledningen hænge ud over bordkanten.
- Hold ledningen og produktet væk fra varmekilder, varme genstande og åben ild.
- Tag stikket ud af stikkontakten før rengøring, og hvis produktet ikke er i brug. Undlad at trække i ledningen, når du tager stikket ud af stikkontakten, men tag fat om selve stikket.
- Sørg for, at ledningen er rullet helt ud.
- Kontrollér jævnligt, om ledningen eller stikket er beskadiget, og brug ikke produktet, hvis dette er tilfældet, eller hvis det har været tabt på gulvet, tabt i vand eller er blevet beskadiget på en anden måde.
- Hvis produktet, ledningen eller stikket er beskadiget, skal produktet efterses og om nødvendigt repareres af en autoriseret reparatør. Forsøg aldrig at reparere produktet selv. Kontakt købsstedet, hvis der er tale om en reparation, der falder ind under reklamationsretten. Hvis der foretages uautoriserede indgreb i produktet, bortfalder reklamationsretten.

REKLAMATIONSRETEN GÆLDER IKKE:

- Hvis ovennævnte ikke iagttages.
- Hvis der har været foretaget uautoriserede indgreb i produktet.
- Hvis produktet har været misligholdt, udsat for en voldsom behandling eller lidt anden form for overlast.

BORTSKAFFELSE AF PRODUKTET

Brugte produkter må ikke smides i husholdningsaffaldet. Iht. lovforskrifterne skal det udtjente produkt bortskaffes på ordentlig vis. Derved genanvendes de brugbare materialer, og miljøet skånes. Nærmere informationer fås hos den ansvarlige kommunale myndighed eller det lokale bortskaffelsesfirma. Produktet er forsynet med følgende logo:



FORHOLDSREGLER FOR AT UNDGÅ AT BLIVE UDSAT FOR FARLIG MIKROBØLGE-ENERGI

1. Forsøg ikke at bruge denne ovn med åben låge, da dette kan medføre fare for, at du bliver udsat for skadelig mikrobølgeenergi. Det er vigtigt ikke at bryde sikkerhedslåsene op eller pille ved dem.
2. Anbring ikke genstande mellem ovnens forside og lågen, og sørg for, at der ikke ophobes snavs eller rester af rengøringsmiddel på tætningsflader.
3. Ovnens må ikke anvendes, hvis den er beskadiget. Det er særligt vigtigt, at lågen kan lukke ordentligt, og at der ikke på nogen måde er påført skade på
 - a. låge [bøjel],
 - b. hængsler og låse [ødelagte eller løse],
 - c. lågens lukninger og tætningsflader.
4. Ovnens bør ikke justeres eller repareres af andre end kvalificeret servicepersonale.

VIGTIGE SIKKERHEDSINSTRUKTIONER

Ved anvendelse af ovnen skal grundlæggende sikkerhedsanvisninger for elektriske apparater følges, herunder:

ADVARSEL! For at minimere risikoen for forbrænding, elektrisk stød, brand, personskader eller udsættelse for skadelig mikrobølgeenergi:

1. Læs hele brugsanvisningen før mikrobølgeovnen tages i brug, og gem den til senere brug.
2. Brug kun mikrobølgeovnen til dens tilsigtede formål som beskrevet i denne brugsanvisning. Undgå at bruge ætsende kemikalier eller spray i denne mikrobølgeovn. Denne type ovn er kun beregnet til at opvarme, tilberede eller tørre mad. Den er ikke beregnet til anvendelse i industrien eller på et laboratorium.
3. Brug ikke ovnen, når den er tom.
4. Brug ikke ovnen, hvis ledningen eller stikket er defekt, hvis den ikke fungerer korrekt, eller hvis den er blevet beskadiget eller tabt. Hvis strømkablet er defekt, skal det udskiftes af producenten eller dennes servicetekniker eller en tilsvarende kvalificeret person, så der ikke opstår farlige situationer.
5. **ADVARSEL:** Børn må kun bruge ovnen uden opsyn, hvis de har fået tilstrækkelige anvisninger i dens brug, så de er i stand til at bruge ovnen på en sikker måde og forstår faren ved ukorrekt brug.
6. Reducer risikoen for brand inde i ovnen:
 - Når der opvarmes mad i plastik- eller papirbeholdere, skal du jævnligt holde øje med ovnen, da der er risiko for antændelse.
 - Fjern clips med metaltråd fra poser af papir eller plastik, før de anbringes i ovnen.
 - Hvis der observeres røg, skal ovnen slukkes, eller stikket skal tages ud, og lågen holdes lukket for at kvæle evt. flammer.
 - Brug ikke ovnen til opbevaringsformål. Opbevar ikke produkter af papir, køkken- grej eller mad i ovnen, når den ikke er i brug.
 - Mikrobølgeovnen er beregnet til opvarmning af mad- og drikkevarer. Tørring af tøj og opvarmning af varmepuder, hjemmesko, badesvampe, fugtige klude og lignende kan

- øge risikoen for personskade, antændelse eller brand.
7. ADVARSEL: Væske eller andre former for mad må ikke opvarmes i tillukkede beholdere, da der er fare for, at de eksploderer.
 8. Opvarmning af drikkevarer med mikrobølger kan medføre forsinket pludselig kogning. Der skal derfor udvises forsigtighed ved håndtering af beholderen.
 9. Undgå at stege mad i ovnen. Varm olie kan beskadige ovnens dele og køkkengrej og også forårsage forbrændinger på huden.
 10. Hele æg med skal og hårdkogte æg må ikke opvarmes i mikrobølgeovnen, da de kan eksplodere, selv efter at opvarmningen i mikrobølgeovnen er slut.
 11. Prik hul i madvarer med tyk skal som f.eks. kartofler, hele squash, æbler og kastanjer før tilberedning.
 12. Omrør eller ryst indholdet i sutteflasker og beholdere med babymad, og kontrollér temperaturen inden indtagelse for at undgå forbrændinger.
 13. Køkkengrej kan blive varmt ved overførsel af varmen fra det varme mad. Det kan der for være nødvendigt at bruge grydelapper, når det håndteres.
 14. Alt køkkengrej skal kontrolleres for at sikre, at det er egnet til brug i mikrobølgeovn.
 15. ADVARSEL: Det er farligt for alle andre end kompetente fagpersoner at udføre ser vice eller reparation, der indebærer fjernelse af det dæksel, der yder beskyttelse mod udsættelse for mikrobølgeenergi.
 16. Dette produkt tilhører ISM-udstyr i gruppe 2, klasse B. Definitionen af gruppe 2, som omfatter alt industrielt, videnskabeligt og medicinsk udstyr, hvori der med vilje generes intern radiofrekvensenergi og/eller anvendes i form af elektromagnetisk stråling til behandling af materiale, og gnistbearbejdningsudstyr. Klasse B-udstyr er udstyr velegnet til anvendelse i private hjem og under forhold ved direkte tilslutning til en lavspændingsstrømkilde, der forsyner bygninger med private beboelse.
 17. Dette apparat er ikke beregnet til at blive brugt af personer (inkl. børn), der har nedsat fysisk eller mental kapacitet, eller der mangler erfaring eller kendskab hertil, medmindre deres brug foregår under opsyn eller efter instruktion i brug af apparatet af en person, der er ansvarlig for deres sikkerhed.
 18. Børn bør være under opsyn for at sikre, at de ikke leger med apparatet.
 19. Mikrobølgeovnen bruges kun som fritstående enhed.
 20. ADVARSEL: Undgå at installere ovnen over kogepladen på et komfur eller andre varmeafgivende apparater. Hvis ovnen installeres i nærheden af eller over en varmekilde, kan ovnen blive beskadiget, og garantien vil bortfalde.
 21. Mikrobølgeovnen må ikke placeres i et skab.
 22. Lågen eller dens yderside kan blive varm, når apparatet er i brug.
 23. Advarsel: Tilgængelige dele kan blive varme ved brug. Små børn skal holdes væk.
 24. Tilbehørsdele bliver varme under brug. Man skal nøje undgå at berøre varmeelementerne inde i ovnen.
 25. Temperaturen på tilgængelige overflader kan blive meget høj, når ovnen bruges.
 26. Apparatet skal placeres op mod en væg.
 27. Dette apparat må ikke bruges af børn eller personer, der har nedsat fysisk eller mental kapacitet, eller der mangler erfaring eller kendskab hertil, medmindre dette foregår

- under opsyn eller efter instruktion.
28. ADVARSEL: Hvis lågen eller dens tætninger er beskadiget, må ovnen ikke anvendes, før den er blevet repareret af en fagmand.
 29. Brugsanvisningen skal oplyse om, at apparater ikke er beregnet til at blive brugt med en ekstern timer eller et separat fjernbetjeningssystem.
 30. Mikrobølgeovnen er kun beregnet til husholdningsbrug og ikke til kommerciel brug.
 31. Fjern aldrig afstandsholderen i bagenden eller på siderne, da den sikrer en minimumsafstand fra væggen med henblik på luftcirkulation.
 32. Fastgør drejeskiven før du flytter apparatet for at undgå beskadigelse.
 33. Forsigtig: Det er farligt for alle andre end kompetente fagpersoner at reparere eller vedligeholde apparatet. Dette arbejde kræver, at dækslet fjernes, som yder beskyttelse mod udsættelse for mikrobølgestråling. Dette gælder også, hvis el-ledningen eller lamperne skal udskiftes. Dette arbejde kræver, at apparatet sendes til vores servicecenter.
 34. Mikrobølgeovnen er udelukkende beregnet til optøning, tilberedning og dampning af madvarer.
 35. Brug handsker, når du tager varm mad ud.
 36. Forsigtig! Damp kan komme ud, når låg eller folie åbnes.
 37. Dette apparat kan bruges af børn fra 8 år og ældre og af personer med nedsat fysisk eller mental kapacitet, eller manglende erfaring eller kendskab hertil, hvis de er under opsyn eller har fået instruktioner i brug af apparatet på en sikker måde og forstår de involverede farer. Børn må ikke lege med apparatet. Rengøring og brugervedligeholdelse må ikke foretages af noget barn, medmindre barnet er ældre end 8 år og under opsyn.
 38. Hvis der observeres røg, skal apparatet slukkes, eller stikket skal tages ud, og lågen holdes lukket for at kvæle evt. flammer.

INSTALLATION

1. Sørg for, at al emballage er fjernet fra lågens inderside.
2. ADVARSEL: Kontroller ovnen for evt. beskadigelse, f.eks. om lågen er skæv eller bøjet, lågens lukninger eller tætningsflader er beskadigede, ødelagte eller løse haengsler og låse på lågen og buler inde i ovnen eller på lågen. Hvis ovnen er beskadiget, må den ikke tages i brug. Tag kontakt til kvalificeret servicepersonale.
3. Denne mikrobølgeovn skal placeres på en flad, stabil overflade, der kan bære ovnens vægt samt de tungeste madvarer, der skal tilberedes i ovnen.
4. Placér ikke ovnen i nærheden af varme- eller stærkt fugtgenererende kilder eller antændelige materialer.
5. Ovnens kræver tilstrækkeligt luftgennemstrømning for at fungere korrekt. Sørg for, at der er 20 cm frihøjde over ovnen, 10 cm bag ovnen og 5 cm til begge sider. Undgå at tildække eller blokere nogen åbninger på apparatet. Fjern ikke fødderne.
6. Brug ikke ovnen, uden at glastallerkenen, rullestøtten og akslen er anbragt korrekt.
7. Kontrollér, at strømkablet er ubeskadiget og ikke er ført ned under ovnen eller over varme eller skarpe overflader.

8. Stikket skal være let tilgængeligt, så det let kan trækkes ud i en nødsituation.
9. Ovnen må ikke bruges udendørs.

RADIOINTERFERENS

Mikrobølgeovne kan forårsage interferens på radio, tv eller lignende apparater. Når der opstår interferens, kan den mindskes eller fjernes ved at tage følgende forholdsregler:

1. Rengør ovnens låge eller tætningsflader.
2. Justér modtagerantennen på radioen eller tv'et.
3. Anbring mikrobølgeovnen et andet sted i forhold modtageren.
4. Flyt mikrobølgeovnen væk fra modtageren.
5. Sæt mikrobølgeovnen ind i en anden stikkontakt, så mikrobølgeovnen og modtageren er sluttet til forskellige strømgrene.

TILBEREDNINGSPRINCIPPER MED MIKROBØLGER

1. Madvarer skal fordeles omhyggeligt. De kompakte fødevarer skal anbringes yderst på tallerkenen.
2. Hold øje med tilberedningstiden. Varm retten i den kortest angivne tid, og tilføj lidt mere tid efter behov. Madvarer, der opvarmes alt for meget, kan udsende røg eller blive brændt.
3. Tildæk maden under tilberedningen. Når maden tildækkes, undgås sprøjt og hjælper med til at sikre et ensartet resultat.
4. Vend maden én gang under mikrobølgetilberedningen for at fremskynde tilberedningstiden af f.eks. kylling og hamburgere. Større retter, som f.eks. en steg, skal vendes mindst én gang.
5. Flyt rundt på mad som f.eks. frikadeller halvvejs gennem tilberedningen, fra top til bund og fra midten til yderst på tallerkenen.

JORDINGSANVISNINGER

Dette apparat skal jordforbindes. Ovnen har et jordkabel med stik. Stikket skal sættes i en korrekt installeret og jordet stikkontakt. I tilfælde af en kortslutning reducerer jordforbindelsen risikoen for elektrisk stød ved at give den elektriske strøm en udvej med lav modstand.

Det anbefales, at ovnen tilsluttes et særskilt, dedikeret elektrisk kredsløb. Brug af højspænding kan være farligt og resultere i brand eller andre ulykker, der kan beskadige ovnen.

ADVARSEL Ukorrekt anvendelse af jordkablets stik kan medføre elektrisk stød.

Bemærk:

1. Hvis du har spørgsmål til jording eller elektriske anvisninger, skal du søge råd hos en kvalificeret elektriker eller servicemedarbejder.
2. Hverken producenten eller forhandleren er ansvarlig for skader, der påføres ovnen eller personer, og som er opstået som følge af, at procedurer i relation til den elektriske tilslutning ikke er blevet fulgt.

Trådene inde i nedledningen er farvekodede som anført nedenfor:

Grøn og Gul = Jord

Blå = NEUTRAL

Brun = STRØM

FØR DU RINGER TIL KUNDESERVICE

Hvis ovnen ikke kan startes:

1. Kontrollér, at ovnen er sat korrekt i stikkontakten. Hvis den ikke er, skal stikket tages ud af kontakten. Vent 10 sekunder, og sæt stikket korrekt i.
2. Kontrollér, om der er sprunget en sikring, eller hovedafbryderen er blevet udløst. Hvis de ser ud til at virke korrekt, så test stikkontakten med et andet apparat.
3. Kontrollér, at kontrolpanelet er programmeret korrekt, og timeren er indstillet.
4. Kontrollér, at lågen er korrekt lukket og er tilkoblet lågens sikkerhedslås. Ellers vil mikrobølgeenergi ikke strømme ind i ovnen.

HVIS INGEN AF DE OVENSTÅENDE LØSNINGSFORSLAG VIRKER, SKAL DU KONTAKTE EN KVALIFICERET TEKNIKER. FØRSØG IKKE AT JUSTERE ELLER REPARERE OVNE SELV.

EGNEDE KØKKENGREJ


1. Mikrobølger kan ikke trænge gennem metal. Brug kun køkkengrej, der er beregnet til brug i mikrobølgeovne. Metalbeholdere til mad og drikkevarer kan ikke bruges i mikrobølgeovne. Dette krav gælder ikke, hvis producenten har angivet størrelse og form på metalliske beholdere, der er egnede til madlavning i mikrobølgeovne.
2. Mikrobølger kan ikke trænge gennem metal, derfor er metalredskaber eller tallerkener med metallisk dekoration ikke egnede.
3. Undgå at bruge produkter af genbrugspapir til madlavning i mikrobølgeovnen, da de kan indeholde små metalpartikler, som kan danne gnister og/eller forårsage brand.
4. Runde/ovale tallerkener bør bruges i stedet for firkantede/aflange tallerkener, da fødevarer i hjørnerne tit bliver overophedet.

KØKKENGREJ	MIKROBØLGE
Varmebestandigt glas	Ja
Ikke-varmebestandigt glas	Nej
Varmebestandigt keramik	Ja
Plastskål egnede til mikrobølgeovn	Ja
Køkkenrulle	Ja
Metalbakke	Nej
Metalstativ	Nej
Sølvpapir og beholdere af sølvpapir	Nej

5. Der kan bruges smalle strimler af sølvpapir til at undgå overophedning af udsatte områder. Men vær forsigtig og brug ikke for meget. Hold altid en afstand på [2,54 cm] mellem sølvpapiret og ovnens indvendige overflade.

Nedenfor vises en generel oversigt over velegnet køkkengrej:

NAVNE PÅ DELE

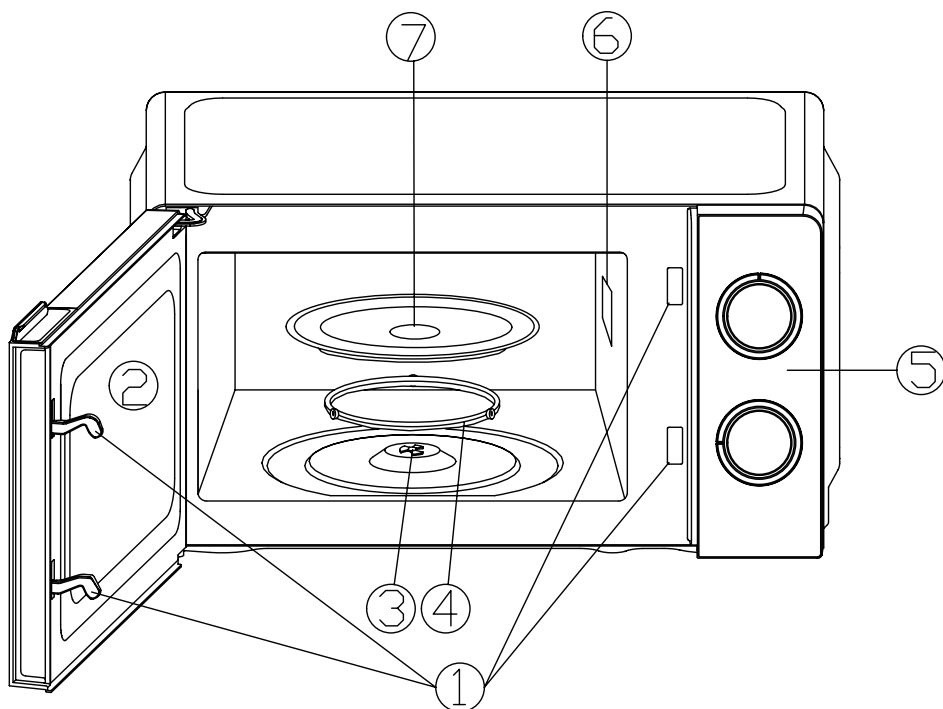

1. Sikkerhedslås til låge
2. Ovnvindue
3. Aksel
4. Rullestøtte
5. Kontrolpanel
6. Micaplade
[Bølgeafdækning, undgå at fjerne denne]
7. Glastallerken



KONTROLPANEL

Kontrolpanelet består af to funktionsknapper. Den ene er en timerknap, og den anden er en tænd/sluk-knap.

TÆND/SLUK-KNAP/FUNKTIONSVÆLGER

Brug denne knap til at vælge effektniveau. Det er første trin i tilberedningsprocessen.

TIMERKNAP

Viser tidsindstillinger. Brugervenlig timer-knap til at vælge den ønskede tid, op til 30 min. pr. tilberedningsproces.

TILBEREDNING I MIKROBØLGEOVN

Tilberedning kun med mikrobølger omfatter seks effekt niveauer, hvoraf det mest egnede skal vælges iht., hvad der skal tilberedes.

Effektniveauet øges ved at dreje knappen med uret. Effektniveauer har følgende klassifikation:

	Udgangseffekt	Beskrivelse
	100%	HØJ
	88%	M.HØJ
	73%	MED
	52%	M.LAV
❄	42%	OPTØNING
	20%	LAV

BETJENING

Sådan startes en tilberedningsproces.

1. Anbring maden i ovnen, og luk lågen.
2. Drej på tænd/sluk-knappen for at vælge effektniveau.
3. Brug timerknappen til at indstille tilberedningstiden.

BEMÆRK:

Ovnen starter, så snart der drejes på timeren.

Når der vælges en tid på mindre end 2 minutter, skal timeren drejes forbi 2 minutter, og derefter drejes tilbage til den korrekte tid.

FORSIGTIG: DREJ ALTID TIMEREN TILBAGE TIL NUL-POSITIONEN, hvis mad tages ud

af ovnen, før den indstillede tilberedningstid er afsluttet, eller når ovnen ikke er i brug. For at stoppe ovnen under tilberedningen trykkes på lågens udløsningsknap, eller lågen åbnes med håndtaget

RENGØRING OG PLEJE

1. Sluk for ovnen, og tag stikket ud af kontakten, før rengøring af ovnen.
2. Hold ovnen ren indvendigt. Fastsiddende madrester og væskespild på ovnens sider tørres af med en fugtig klud. Et mildt rengøringsmiddel kan bruges, hvis ovnen er meget snavset. Undgå at bruge spray eller andre kraftige rengøringsmidler, da de kan
3. Ovnens yderside skal rengøres med en fugtig klud. For at undgå at beskadige de funktionelle dele inde i ovnen må vand ikke trænge ind i ventilationsåbningerne.
4. Tør lågen og vinduet af på begge sider, tør lågens lukninger og tilstødende dele af jævnlige med en fugtig klud for at fjerne madrester og spild. Brug ikke skuremidler.
5. En damprenser må ikke bruges.
6. Kontrolpanelet må ikke blive vådt. Rengør med en blød, fugtig klud. Når kontrolpanelet rengøres, skal ovnens låge holdes åben for at undgå, at ovnen startes utilsigtet.
7. Hvis damp akkumuleres inde i eller omkring ydersiden af ovnlågen, skal den tørres væk med en blød klud. Dette kan ske, når mikrobølgeovnen betjenes under meget fugtige betingelser. Det er helt normalt.
8. Det kan lejlighedsvist være nødvendigt at fjerne og rengøre glastallerkenen. Vask tallerkenen i varmt sæbevand eller i opvaskemaskine.
9. Rullestøtten og ovnbunden skal rengøres jævnlige for at undgå overdreven støj. Bunnildt sæbevand eller i opvaskemaskine. Når rullestøtten fjernes fra ovnbunden, skal den sættes rigtigt på plads igen.
10. Fjern lugte fra ovnen ved at blande en kop vand med saft og skal fra en citron i en dyb skål egnet til mikrobølgeovn. Varm i mikrobølgeovn i 5 minutter. Tør den grundig af med en blød klud.
11. Når ovnlyset skal udskiftes, skal forhandleren kontaktes med henblik på udskiftning.
12. Ovnen skal rengøres jævnlige, og madrester skal fjernes. Hvis ovnen ikke holdes ren, kan overfladen tage skade, hvilket har en negativ indvirkning på apparatets levetid, og kan potentielt være farligt.
13. Dette apparat må ikke bortkastes med almindeligt husholdningsaffald, men skal afleveres på en kommunal genbrugsstation.

Strømforbrug i standby tilstand	Nej
Automatisk standby	Nej
Strømforbrug i slukket tilstand	< 0.5 Watt
Automatisk sluk	0 min.

TEKNISKE DATA

Artikelnr. 10077928
220-240V~, 50Hz
1100 Watt (mikrobølge) 700 Watt
Ovnkapacitet: 20 liter
Nettovægt: Ca. 9,4 kg

PRODUCENT

Epiq ApS
Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Danmark
www.epiq.dk

Vi tager forbehold for trykfejl.

INTRODUCTION

Thank you for choosing a product from Køkkenchef. You have acquired a quality product which meets all applicable performance and safety standards in the EU. In order to ensure proper treatment and a long product life, we recommend that you comply with the instructions below.

Please read the manual and especially the safety instructions carefully before using the product. Keep this manual and provide it for referral along with the product when others are using it.

GENERAL SAFETY INSTRUCTIONS

- Improper use of the product can cause personal injury and damage.
- Only use the product for what it is intended. The manufacturer is not liable for damages arising from improper use or handling.
- Always place the product on a dry, flat and stable surface well away from table edge or similar.
- The product is intended for household use only. The product is not for professional use.
- The product may only be connected to 220-240V~, 50Hz.
- The product engine/electronics, cord or plug cannot be submerged in water, and no water may get in contact with the engine/electronics.
- Never touch the product, cord or plug with wet or damp hands.
- Do not expose the product to direct sunlight, high temperatures, humidity, dust or corrosive substances.
- Never leave the product when it is turned on.
- When the product is in use, it should be kept under constant supervision. Children should always be supervised when using the product to ensure that they do not play with the product. The product is not a toy.
- The product may have sharp parts and must, therefore, be kept

out of reach of children.

- Only use the accessories that come with the product or that are recommended by the manufacturer.
- This product can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.
- Keep the product and its cord out of reach of children less than 8 years of age.
- Cleaning and user maintenance shall not be made by children without supervision.

CORD AND PLUG

- Do not let the cord hang over the edge.
- Keep the cord and the product away from heat sources, hot objects and open flames.
- Unplug the power cord before cleaning and if the product is not in use. Do not pull the cord when removing the plug from the socket, rather grasp the plug itself.
- Make sure that the cord is fully extended.
- Check regularly that the cord and the plug are not damaged and do not use the product if this is the case, or if it has been dropped on the floor, dropped in water or damaged in another way.
- If the product or plug is damaged, the product must be inspected and, if necessary, repaired by an authorised repairer. Never try to repair the product yourself. Please, contact the store to see if there is a repair that falls under warranty. Tampering of the product will void the warranty.

RULES OF COMPLAINTS THE WARRANTY DOES NOT APPLY:

- If the above is not observed.
- If there has been unauthorised intervention of the product.
- If the product has been mishandled, subjected to rough

treatment or some other form of damage.

PRODUCT DISPOSAL

Used product should not be disposed as household waste. According to legislation, the product should be disposed of properly so that the materials can be recycled in an environmentally friendly manner. Further information is available from the responsible local authority or local disposal company. The product is equipped with the following logo:



PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

1. Do not attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
2. Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
3. Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the
 - a. Door (bent),
 - b. Hinges and latches (broken or loosened),
 - c. Door seals and sealing surfaces.
4. The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliance basic safety precautions should be followed, including the following:

WARNING! To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

1. Read all instructions before using the appliance and keep for future reference.
2. Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
3. Do not operate the oven when empty.
4. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
5. **WARNING:** Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
6. To reduce the risk of fire in the oven cavity:
 - When heating food in plastic or paper container, check the oven frequently to the possibility of ignition.
 - Remove wire twist-ties from paper or plastic bags before placing bag in oven.
 - If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
 - Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.
 - The microwave oven is intended for heating food and beverages. Drying of clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to

risk of injury, ignition or fire.

7. **WARNING:** Liquid or other food must not be heated in sealed containers since they are liable to explode.
8. Microwave heating of beverage can result in delayed eruptive boiling, therefore care has to be taken when handle the container.
9. Do not fry food in the oven. Hot oil can damage oven parts and utensils and even result in skin burns.
10. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode even after microwave heating has ended.
11. Pierce foods with heavy skins such as potatoes, whole squashes, apples and chestnuts before cooking.
12. The contents of feeding bottles and baby jars should be stirred or shaken and the temperature should be checked before serving in order to avoid burns.
13. Cooking utensils may become hot because of heat transferred from the heated food. Potholders may be needed to handle the utensil.
14. Utensils should be checked to ensure that they are suitable for use in microwave oven.
15. **WARNING:** It is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy.
16. This product is a Group 2 Class B ISM equipment. The definition of Group 2 which contains all ISM (Industrial, Scientific and Medical) equipment in which radio-frequency energy is intentionally generated and/or used in the form of electromagnetic radiation for the treatment of material, and spark erosion equipment. For Class B equipment is equipment suitable for use in domestic establishments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purpose.
17. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
18. Children should be supervised to ensure that they do not play with the appliance.
19. The microwave oven is only used in freestanding.
20. **WARNING:** Do not install oven over a range cook top or other heat-producing appliance. If installed could be damaged and the warranty would be avoid.
21. The microwave oven shall not be placed in a cabinet.
22. The door or the outer surface may get hot when the appliance is operating.
23. **Warning:** Accessible parts may become hot during use. Young children should be kept away.
24. During use the appliances becomes hot. Care should be taken to avoid touching heating elements inside the oven, for cooking ranged and ovens.
25. The temperature of accessible surfaces may be high when the appliance is operating.
26. The appliance shall be placed against a wall.

26. The appliance shall be placed against a wall.
27. Appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
28. WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.
29. The instructions shall state that appliances are not intended to be operated by means of an external timer or separate remote-control system.
30. The microwave oven is for household use only and not for commercial use.
31. Never remove the distance holder in the back or on the sides, as it ensures a minimum distance from the wall for air circulation.
32. Please secure the turn table before you move the appliance to avoid damages.
33. Caution: It is dangerous to repair or maintain the appliance by no other than a specialist because under these circumstances the cover have to be removed which assures protection against microwave radiation. This applies to changing the power cord or the lighting as well. Send the appliance in these cases to our service centre.
34. The microwave oven is intended for defrosting, cooking and steaming of food only.
35. Use gloves if you remove any heated food.
36. Caution! Steam will escape, when opening lids or wrapping foil.
37. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.
38. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.

INSTALLATION

1. Make sure that all the packing materials are removed from the inside of the door.
2. WARNING: Check the oven for any damage, such as misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches and dents inside the cavity or on the door. If there is any damage, do not operate the oven and contact qualified service personnel.
3. This microwave oven must be placed on a flat, stable surface to hold its weight and the heaviest food likely to be cooked in the oven.
4. Do not place the oven where heat, moisture, or high humidity are generated, or near combustible materials.
5. For correct operation, the oven must have sufficient airflow. Allow 20cm of space above the oven, 10cm at back and 5cm at both sides. Do not cover or block any openings on the appliance. Do not remove feet.
6. Do not operate the oven without glass tray, roller support, and shaft in their proper positions.

7. Make sure that the power supply cord is undamaged and does not run under the oven or over any hot or sharp surface.
8. The socket must be readily accessible so that it can be easily unplugged in an emergency.
9. Do not use the oven outdoors.

RADIO INTERFERENCE

Operation of the microwave oven can cause interference to your radio, TV, or similar equipment.

When there is interference, it may be reduced or eliminated by taking the following measures:

1. Clean door and sealing surface of the oven.
2. Reorient the receiving antenna of radio or television.
3. Relocate the microwave oven with respect to the receiver.
4. Move the microwave oven away from the receiver.
5. Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

MICROWAVE COOKING PRINCIPLES

1. Arrange food carefully. Place thickest areas towards outside of dish.
2. Watch cooking time. Cook for the shortest amount of time indicated and add more as needed. Food severely overcooked can smoke or ignite.
3. Cover foods while cooking. Covers prevent spattering and help foods to cook evenly.
4. Turn foods over once during microwave cooking to speed cooking of such foods as chicken and hamburgers. Large items like roasts must be turned over at least once.
5. Rearrange foods such as meatballs halfway through cooking both from top to bottom and from the center of the dish to the outside.

GROUNDING INSTRUCTIONS

This appliance must be grounded. This oven is equipped with a cord having a grounding wire with a grounding plug. It must be plugged into a wall receptacle that is properly installed and grounded. In the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current. It is recommended that a separate circuit serving only the oven be provided. Using a high voltage is dangerous.

WARNING Improper use of the grounding plug can result in a risk of electric shock. **Note:**

1. If you have any questions about the grounding or electrical instructions, consult a qualified electrician or service person.
2. Neither the manufacturer nor the dealer can accept any liability for damage to the oven or personal injury resulting from failure to observe the electrical connection procedures.

The wires in this cable main are colored in accordance with the following code:

Green and Yellow = EARTH

Blue = NEUTRAL

Brown = LIVE

BEFORE YOU CALL FOR SERVICE

If the oven fails to operate:

- 1. Check to ensure that the oven is plugged in securely. If it is not, remove the plug from the outlet, wait 10 seconds, and plug it in again securely.
- 2. Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with another appliance.
- 3. Check to ensure that the control panel is programmed correctly and the timer is set.
- 4. Check to ensure that the door is securely closed engaging the door safety lock system. Otherwise, the microwave energy will not flow into the oven.

IF NONE OF THE ABOVE RECTIFIES THE SITUATION, THEN CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE OVEN YOURSELF.


UTENSILS GUIDE

- 1. Microwave cannot penetrate metal. Only use utensils that are suitable for use in microwave ovens. Metallic containers for food and beverages are not allowed during microwave cooking. This requirement is not applicable if the manufacturer specifies size and shape of metallic containers suitable for microwave cooking.
- 2. Microwave cannot penetrate metal, so metal utensils or dishes with metallic trim should not be used.
- 3. Do not use recycled paper products when microwave cooking, as they may contain small metal fragments which may cause sparks and/or fires.
- 4. Round / oval dishes rather than square / oblong ones are recommended, as food in corners tends to overcook.
- 5. Narrow strips of aluminum foil may be used to prevent overcooking of exposed areas. But be careful don't use too much and keep a distance of 1 inch [2.54cm] between foil and cavity.

The list below is a general guide to help you select the correct utensils.

COOKWARE	MICROWAVE
Heat-Resistant Glass	Yes
Non Heat-Resistant Glass	No
Heat-Resistant Ceramics	Yes
Microwave-Safe Plastic Dish	Yes
Kitchen Paper	Yes
Metal Tray	No
Metal Rack	No
Aluminum Foil & Foil Containers	No

PART NAMES

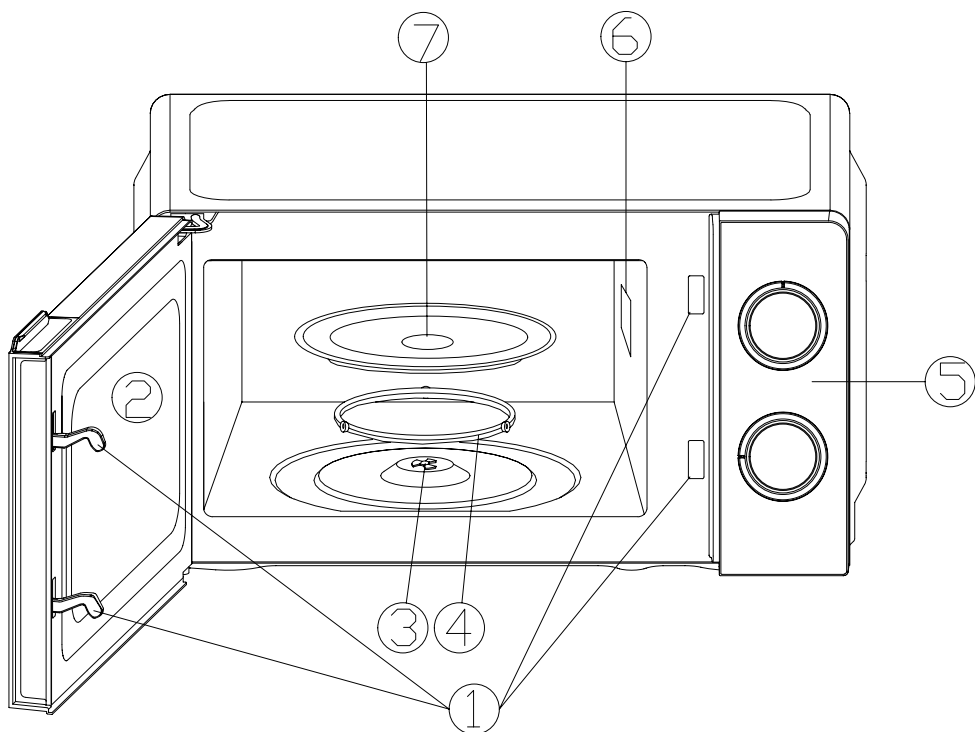

1. Door Safety Lock System
2. 2. Oven Window
3. 3. Shaft
4. 4. Roller Ring
5. 5. Control Panel
6. 6. Wave Guide
[Please do not remove the mica plate
covering the wave guide]
7. Glass Tray



CONTROL PANEL

The control panel consists of two function operators. One is a timer knob, and another a power knob.

POWER/ACTION SELECTOR

You use this operator knob to choose a cooking power level. It is the first step to start a cooking session.

TIMER KNOB

Offer visual timing settings at easy turn of your thumb to select a desired cooking time up to 30 minutes per cooking session.

MICROWAVE COOKING

For pure microwave cooking, there are six power levels from which to choose one as best fit to do the job at hand.

Power level increases with the knob turning clockwise. The power levels can be classified as the following:

	Power Output	Description
	100%	HIGH
	88%	M.HIGH
	73%	MED
	52%	M.LOW
❄️	42%	DEFROST
	20%	LOW

OPERATION

To start a cooking session,

1. Place food in oven and close the door.
2. Turn Power Selector to select a power level.
3. Use Timer knob to set a cooking time

NOTE: As soon as the timer is turned, oven starts cooking.

When selecting time for less than 2 minutes, turn timer past 2 minutes and then return to the correct time.

CAUTION: ALWAYS RETURN TIMER BACK TO ZERO POSITION if food is removed from oven before the set cooking time is complete or when oven is not in use. To stop oven during cooking process, push the door release button or open the door by the handle.

CLEANING AND CARE

1. Turn off the oven and remove the power plug from the wall socket before cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergent may be used if the oven gets very dirty. Avoid the use of spray and other harsh cleaners as they may stain, streak or dull the door surface.
3. The outside surfaces should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. Wipe the door and window on both sides, the door seals and adjacent parts frequently with a damp cloth to remove any spills or spatters. Do not use abrasive cleaner.
5. A steam cleaner is not be used.
6. Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
7. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity condition. And it is normal.
8. It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm sudsy water or in a dishwasher.
9. The roller ring and oven floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent. The roller ring may be washed in mild sudsy water or dishwasher. When removing the roller ring from cavity floor for cleaning, be sure to replace in the proper position.
10. Remove odors from your oven by combining a cup of water with the juice and skin of one lemon in a deep microwaveable bowl, microwave for 5 minutes. Wipe thoroughly and dry with a soft cloth.
11. When it becomes necessary to replace the oven light, please consult a dealer to have it replaced.
12. The oven should be cleaned regularly and any food deposits removed. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous.
13. Please do not dispose this appliance into the domestic rubbish bin; it should be disposed to the particular disposal center provided by the municipalities.

Power consumption in standby mode	No
Automatic standby	No
Power consumption in off mode	< 0.5 Watt
Automatic off	0 minute

TECHNICAL DATA

Article No.10077928
220-240V~, 50Hz
1100 Watt (microwave) 700 Watt
Oven capacity: 20 Litres
Net Weight: Approx. 9,4 kg

PRODUCER

Epiq ApS
Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Denmark
www.epiq.dk

We cannot be held responsible for any printing errors.