

sall_{ing}



INSTRUCTION MANUAL

COFFEE MAKER

10008453

INTRODUKTION

Mange tak fordi du har valgt et produkt fra Epiq. Dermed har du erhvervet et kvalitetsprodukt som opfylder alle gældende krav til præstation og sikkerhedsstandarder i EU. For at sikre en korrekt behandling og en lang levetid anbefaler vi, at du overholder nedenstående anvisninger.

Du bedes læse vejledningen og især sikkerheds anvisningerne omhyggeligt igennem, inden du tager apparatet i brug. Opbevar denne betjeningsvejledning, og overlad altid kun produktet til andre sammen med betjeningsvejledningen.

GENERELLE SIKKERHEDSFORANSTALTNINGER

- Forkert brug af produktet kan medføre personskade og beskadige apparatet.
- Anvend kun produktet til det, det er beregnet til. Producenten er ikke ansvarlig for skader, der opstår som følge af forkert brug eller håndtering.
- Anbring altid produktet på et tørt, plant og stabilt underlag på god afstand af bordkant eller lignende.
- Produktet er udelukkende beregnet til husholdningsbrug. Produktet må ikke anvendes til erhvervsbrug.
- Produktet må kun sluttes til 220-240V, 50/60Hz.
- Produktets motordel/elektronik, ledning og stikket må ikke nedsænkes i vand, og der må ikke trænge vand i motordel/elektronik.
- Rør aldrig ved produktet, ledningen eller stikkontakten med våde eller fugtige hænder.
- Udsæt ikke produktet for direkte sollys, høje temperaturer, fugt, støv eller ætsende stoffer.
- Forlad aldrig produktet, når det er tændt.
- Når produktet er i brug, bør det holdes under konstant opsyn.
- Når apparatet bruges skal børn der opholder sig i nærheden af den altid holdes under opsyn.
- Børn må ikke lege med apparatet.

- Produktet kan indeholde skarpe dele og bør derfor opbevares utilgængeligt for børn.
- Brug kun tilbehør, der følger med produktet eller er anbefalet af producenten.
- Produktet må ikke bruges af personer med nedsat følsomhed, fysiske eller mentale handicap, eller personer, som ikke er i stand til at betjene produktet, medmindre de overvåges eller instrueres i brugen af en person, som er ansvarlig for deres sikkerhed.
- Apparatet må bruges af børn på 8 år eller derover og personer med reducerede fysiske, sensoriske eller mentale evner, eller som mangler erfaring og viden, hvis de er under opsyn eller har modtaget instruktion i sikker brug af apparatet og forstår de involverede farer.
- Hold apparatet og ledningen uden for rækkevidden af børn under 8 år.
- Rengøring og vedligeholdelse må ikke udføres af børn med mindre de er ældre end 8 år og under opsyn.

LEDNING OG STIK

- Lad ikke ledningen hænge ud over bordkanten.
- Hold ledningen og produktet væk fra varmekilder, varme genstande og åben ild.
- Tag stikket ud af stikkontakten før rengøring, og hvis apparatet ikke er i brug. Undlad at trække i ledningen, når du tager stikket ud af stikkontakten, men tag fat om selve stikket.
- Sørg for, at ledningen er rullet helt ud.
- Kontrollér jævnligt, om ledningen eller stikket er beskadiget, og brug ikke produktet, hvis dette er tilfældet, eller hvis det har været tabt på gulvet, tabt i vand eller er blevet beskadiget på en anden måde.
- Hvis produktet, ledningen eller stikket er beskadiget, skal produktet efterses og om nødvendigt repareres af en autoriseret reparatør. Forsøg aldrig at reparere produktet selv. Kontakt købsstedet, hvis der er tale om en reparation, der falder ind under reklamlationsretten. Hvis der foretages uautoriserede indgreb i produktet, bortfalder reklamlationsretten.

REKLAMATIONSRETEN GÆLDER IKKE:

- Hvis ovennævnte ikke iagttages.
- Hvis der har været foretaget uautoriserede indgreb i apparatet.
- Hvis apparatet har været misligholdt, udsat for en voldsom behandling eller lidt anden form for overlast.

BORTSKAFFELSE AF PRODUKTET


Brugte produkter må ikke smides i husholdningsaffaldet. Iht. lovfor-
skrifterne skal det udtjente produkt bortskaffes på ordentlig vis.

Derved genanvendes de brugbare materialer, og miljøet skånes.

Nærmere informationer fås hos den ansvarlige kommunale myndig-
hed eller det lokale bortskaffelsesfirma. Produktet er forsynet med
følgende logo:



KEND DIN KAFFEMASKINE

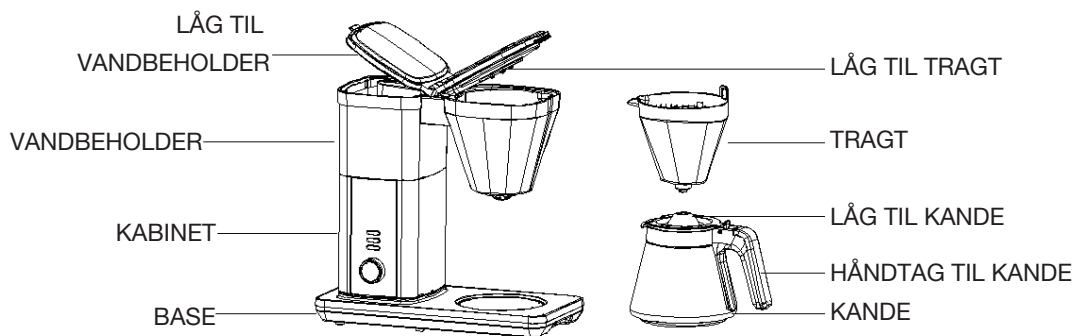

FØR FØRSTE BRUG

Kontrollér, at tilbehøret er komplet, og at enheden ikke er beskadiget. Rengør og tør alle aftagelige dele grundigt i henhold til afsnittet “RENGØRING OG VEDLIGEHOLDELSE”. Hæld derefter vand i vandbeholderen op til maksimumsmærket, og følg anvisningerne i “BRUG AF KAFFEMASKINEN” for at koge vandet flere gange uden kaffebønner. Hæld derefter vandet ud.

BRUG AF KAFFEMASKINEN

ADVARSEL:

- 1) Tragten og kanden skal samles og sættes på plads før brygning af kaffe.
 - 2) Fjern ikke vandoverløbet, tragten og kanden under kaffebrygningen.
 - 3) Visse dele af kaffemaskinen bliver varme under brug og må ikke røres. Brug kun håndtag og knapper.
 - 4) Efterlad aldrig en tom kande på varmepladen. Kanden kan revne.
 - 5) Brug aldrig kaffemaskinen, hvis kanden er revnet, eller håndtaget sidder løst eller er blevet skrøbeligt. Brug kun kanden sammen med kaffemaskinen. Brug kanden forsigtigt. Den går nemt i stykker.
 - 6) Anbring ikke en varm beholder på en varm eller en kold overflade.
 - 7) Brug ikke kaffemaskinen uden vand.
-
1. Tag låget til vandbeholderen af, og hæld drikkevand i beholderen. Sæt derefter låget på vandbeholderen.

Bemærk:

1. Vandet må ikke overstige MAX-niveauet angivet på vandmåleren.
2. Anbring tragten i tragholderen. Kontrollér, at den er samlet korrekt.

3. Hæld kaffebønner i filteret, og sæt filteret i tragten. Normalt skal du bruge en strøget skefuld kaffebønner til én kop kaffe, men du kan justere mængden efter din egen smag. Sæt låget på tragten.
4. Sæt kanden på varmepladen.
5. Sæt ledningen i en stikkontakt.

Advarsel:

- 1) Hvis brugeren løfter tragten, når der brygges kaffe, kan varmt vand sprøjte ud. (se fig. 3).



Fig. 3

- 2) Rør ikke ved kanten af låget til tragten under kaffebrygningen.

Bemærk: Du kan når som helst tage kanden af. Kaffemaskinen holder automatisk op med at dryppe i 30 sekunder. Tag ikke kanden af i mere end 30 sekunder.

6. Tag kanden af, og servér kaffen, når den er færdig.
7. Når kaffen er færdig, og du ikke straks vil servere kaffen, holder kaffemaskinen automatisk kaffen varm på varmepladen, hvis maskinen er tændt.

Bemærk: Den kaffe, du får, vil være mindre end det vand, du har tilsat, da noget vand absorberes af kaffemaalene.

8. Husk at tømme kaffemaskinen for restvand efter kaffebrygningen. Træk først ledningen til kaffemaskinen ud af stikkontakten, tag tragt og filter af, og vend derefter bunden i vejret på kaffemaskinen (se fig. 4). Hvis kaffemaskinen ikke tømmes for vand, opstår der en unormal lugt, og der dannes et hvidt pulver (se fig. 5 og fig. 6). Sæt tragt og filter på igen, når kaffemaskinen er tømt for vand.


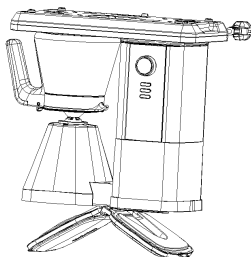


Fig. 4



Lille mængde hvidt pulver efter en uge

Fig. 5

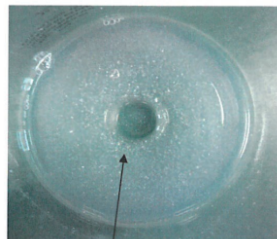

Stor mængde hvidt pulver efter halvanden måned

Fig. 6

9. Sluk altid kaffemaskinen, og træk stikket ud af stikkontakten, når maskinen ikke bruges.
Bemærk: Vær forsigtig, når du skænker kaffe. Ellers kan du komme til skade, fordi den færdigbryggede kaffe er meget varm.

10. Indstilling af ur:

- (I). Tryk på timetasten i standbytilstand i mere end tre sekunder for at aktivere indstillingen af timer. Tallet "12:00" blinker. Symbolet ":" blinker ikke
Tryk hurtigt én gang på timetasten. Timetallet forøges med en time for hvert tryk. Tryk længe på timetasten. Timetallet forøges kontinuerligt. Under indstillingen blinker timetallet.
Efter kl. 23:59 vises tiden som 00:00.
- (II). Tryk på minuttasten i standbytilstand i mere end tre sekunder for at aktivere indstillingen af minutter. Tallet "12:00" blinker. Symbolet ":" blinker ikke.
Tryk hurtigt én gang på minuttasten. Minuttallet forøges med et minut for hvert tryk. Tryk længe på minuttasten. Minuttallet forøges kontinuerligt. Minuttallet blinker under indstillingen.
Efter kl. 23:59 vises tiden som 00:00.
- (III). Klokkeslættet gemmes, hvis der ikke trykkes på en tast inden for fem sekunder, eller tryk på  eller Auto for at bekræfte indstillingen af uret.
- (IV). Klokkeslættet gemmes som det aktuelle klokkeslæt, hvis der ikke trykkes på en tast inden for fem sekunder. Status for det aktuelle klokkeslæt vises. Symbolet ":" blinker én gang i sekundet. Uret kan ikke indstilles, når kaffemaskinen er i brug.

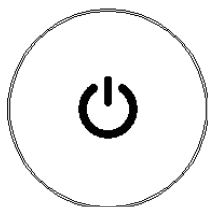


Fig. 7



Fig. 8

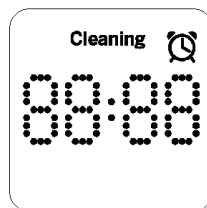


Fig. 9


11. Forsinket start:

- (I). Tryk på tasten Auto i 1,5 sekunder.  og "12:00" blinker.
Symbolet ":" blinker ikke. Start indstillingen af klokkeslættet for den forsinkede start (følg trinene I, II og III for indstillingen af ur). Klokkeslættet for den forsinkede start gemmes, hvis der ikke trykkes på en tast inden for fem sekunder, eller tryk på  eller tasten Auto for at bekræfte indstillingen af klokkeslættet for den forsinkede start. 
og "12:00" holder op med at blinke.
- (II). Efter indstillingen af klokkeslættet for den forsinkede start, vises ikonet  for det aktuelle klokkeslæt. Tryk på tasten Auto. LCD-skærmen viser  og klokkeslættet for den forsinkede

start. Efter fem sekunder viser skærmen igen det aktuelle klokkeslæt. Nu viser LCD-skærmen det aktuelle klokkeslæt. På skærmen for klokkeslættet for den forsinkede start skal du trykke på tasten Auto i 1,5 sekunder for at annullere den forsinkede start. På skærmen for det aktuelle klokkeslæt, skal du trykke længe på tasten Auto igen for at åbne skærmen for indstilling af klokkeslættet for den forsinkede start. Når det aktuelle klokkeslæt når klokkeslættet for den forsinkede start, tændes den hvide kontrollampe , og kaffemaskinen starter brygningen af kaffen. Når kaffen er færdig, annullerer en manuel start af brygningen af kaffe den forsinkede start.

12. Afkalkning:

- ① Når kaffemaskinen har være brugt til 80 kaffebrygninger, tændes ikonet for "Afkalkning" på LCD-skærmen og angiver, at kaffemaskinen skal afkalkes. Hæld afkalkningsmiddel i vandbeholderen, og tryk på tasten  i tre sekunder for at starte afkalkningen. Ikonet for "Afkalkning" på LCD-skærmen blinker nu én gang i sekundet. Ikonet for "Afkalkning" på LCD-skærmen blinker. Varmeelementet tændes i 10 sekunder og slukker i 20 sekunder. Efter 15 minutter tændes varmeelementet uden afbrydelse for at koge vandet. Ikonet "Afkalkning" på LCD-skærmen slukker efter afkalkningen.
- ② Tryk på tasten  i standbytilstand i tre sekunder for manuelt at starte afkalkningen. Ikonet for "Afkalkning" på LCD-skærmen blinker én gang i sekundet. Når ikonet for "Afkalkning" på LCD-skærmen blinker, skal du igen trykke på tasten i tre sekunder for at annullere afkalkningen. Ikonet for "Afkalkning" på LCD-skærmen slukker, når afkalkningen annulleres.

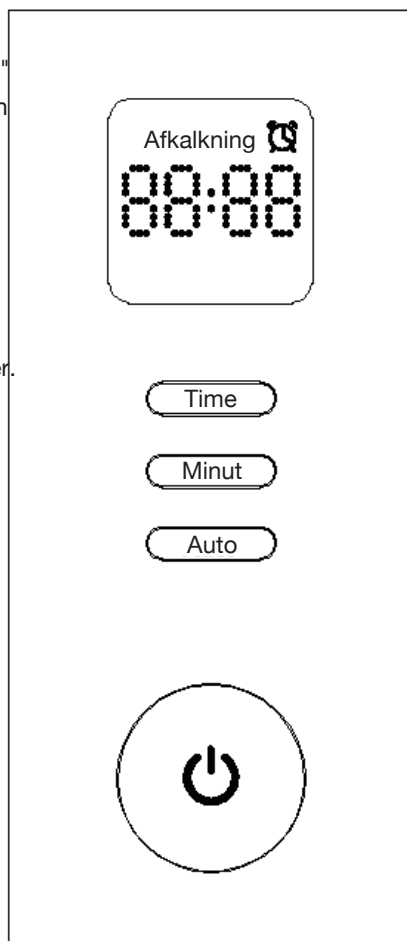

Bemærk: Kaffemaskinen har ingen hukommelsesfunktion. Uret skal derfor indstilles igen efter en strømafbrydelse.

RENGØRING OG VEDLIGEHOLDELSE

FORSIGTIG: Kontrollér, at du har trukket ledningen ud af stikkontakten før rengøring. For at beskytte mod elektrisk stød må du ikke nedsænke ledning, stik eller kaffemaskine i vand eller anden væske. Kontrollér altid efter hver brug, at ledningen er trukket ud af stikkontakten.

1. Fjern alle aftagelige dele såsom tragt, filter, vandkande osv. for fuldstændig rengøring. Rengør alle aftagelige dele hver gang efter brug i varmt sæbevand.
2. Fjern pletter på kaffemaskinens yderside med en blød, fugtig klud.
3. Små vanddråber kan ophobes ovenover tragten og dryppe ned på produktets base under brygning. Dryppene kan kontrolleres ved at tørre området af med en ren, tør klud, hver gang produktet har været i brug.
4. Brug en fugtig klud til forsigtigt at tørre varmepladen af. Brug aldrig skuremiddel til at rengøre enheden.
5. Sæt alle dele på igen, og kaffemaskinen er klar til næste brug.

Bemærk: Rengør ikke vandbeholderen med rensmidler, svampe af ståluld eller andre slibende materialer.

FJERNELSE AF KALK

For at holde din kaffemaskine i god driftsmæssig stand skal du jævnligt rense den for kalk. Du skal rense kaffemaskinen for kalk iht. vandkvaliteten i dit område, og hvor ofte du bruger apparatet. Se nærmere nedenfor:

1. Fyld vandbeholderen med vand og kalkfjerner til MAX-angivelsen i kaffemaskinen (vand og kalkfjerner skal blandes i forholdet 4:1. Se nærmere anvisninger på kalkfjerner. Du skal bruge "kalkfjerner til husholdningsbrug". Du kan bruge citronsyre i stedet for kalkfjerner (hundrede dele vand og tre dele citronsyre).
2. Sæt kanden på varmepladen. Kontrollér, at centerlinjen på kanden flugter med linjen på tragten.
3. Hold knappen ON/OFF inde i ca. tre sekunder. LCD-displayet viser teksten "Rengøring" og blinker. Kontrollampen lyser konstant. Kaffemaskinen starter.
4. Afkalkningen er færdig, når vandbeholderen er tømt for opløsningen. Hæld opløsningen ud af kaffemaskinen.
5. Sluk kaffemaskinen, og hæld rent vand på vandbeholderen.
6. Skyl ved at køre vand igennem kaffemaskinen mindst 3 gange.
7. Hæld til slut vandet ud af kaffemaskinen.

TIPS TIL VELSMAGENDE KAFFE

1. En ren kaffemaskine er afgørende for at lave velsmagende kaffe. Rengør regelmæssigt kaffemaskinen som beskrevet i afsnittet "RENGØRING OG VEDLIGEHOLDELSE". Benyt altid frisk, koldt vand med kaffemaskinen.
2. Opbevar ubrugte kaffebønner et koldt, tørt sted. Når du har åbnet en pakke kaffebønner, skal du lukke den tæt og opbevare den i et køleskab for holde kaffen frisk.
3. Den optimale kaffesmag fås ved at købe hele kaffebønner og kværne dem fint lige før brygning.
4. Genbrug ikke kaffebønner, da smagen af kaffe er kraftigt reduceret. Genopvarmning af kaffe frarådes, fordi kaffe smager bedst lige efter brygning.
5. Rengør kaffemaskinen, når for stor udtrækning har genereret olie. Små oliedråber på overfladen af den bryggede, sorte kaffe skyldes, at olie er blevet trukket ud af kaffebønnerne.
6. Olie dannes hyppigere, hvis der bruges kraftigt ristet kaffe.

TEKNISKE DATA

Artikelnr. 10008453

220-240V / 50-60Hz

1550 Watt

1,25 liter, 10 kopper

Producent

Epiq ApS

Krøyer Kielbergs Vej 3, 3. th

8660 Skanderborg - Danmark

www.epiq.dk

Vi tager forbehold for trykfejl

INTRODUCTION

Thank you for choosing a product from Epiq. You have acquired a quality product which meets all applicable performance and safety standards in the EU. In order to ensure proper treatment and a long product life, we recommend that you comply with the instructions below.

Please read the manual and especially the safety instructions carefully before using the device. Keep this manual and provide it for referral along with the product when others are using it.

GENERAL SAFETY INSTRUCTIONS

- Improper use of the product can cause personal injury and damage.
- Only use the product for what it is intended. The manufacturer is not liable for damages arising from improper use or handling.
- Always place the product in a dry, flat and stable surface well away from table edge or similar.
- The product is intended for household use only. The product is not for professional use.
- The product may only be connected to 220-240V, 50/60Hz.
- The product engine/electronics, cord or plug cannot be submerged in water, and no water may get in contact with the engine/electronics.
- Never touch the product, cord or plug with wet or damp hands.
- Do not expose the product to direct sunlight, high temperatures, humidity, dust or corrosive substances.
- Never leave the product when it is turned on.
- When the product is in use, it should be kept under constant supervision. Children should always be supervised when using the product to ensure that they do not play with the product. The product is not a toy.
- The product may have sharp parts and must, therefore, be kept out of reach of children.

- Only use the accessories that come with the product or that are recommended by the manufacturer.
- The product must not be used by people with reduced sensitivity, physical or mental disability, or people who are not able to operate the product unless they are supervised or instructed by a person responsible for their safety.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Keep the appliance and its cord out of reach of children less than 8 years of age.
- Cleaning and user maintenance shall not be made by children without supervision.

CORD AND PLUG

- Do not let the cord hang over the edge.
- Keep the cord and the product away from heat sources, hot objects and open flames.
- Unplug the power cord before cleaning and if the appliance is not in use. Do not pull the cord when removing the plug from the socket, rather grasp the plug itself.
- Make sure that the cord is fully extended.
- Check regularly that the cord and the plug are not damaged and do not use the product if this is the case, or if it has been dropped on the floor, dropped in water or damaged in another way.
- If the product or plug is damaged, the product must be inspected and, if necessary, repaired by an authorised repairer. Never try to repair the product yourself. Please, contact the store to see if there is a repair that falls under warranty. Tampering of the product will void the warranty.

RULES OF COMPLAINTS THE WARRANTY DOES NOT APPLY:

- If the above is not observed.
- If there has been unauthorised intervention of the device.


- If the appliance has been mishandled, subjected to rough treatment or some other form of damage.

PRODUCT DISPOSAL

Used product should not be disposed as household waste. According to legislation, the product should be disposed of properly so that the materials can be recycled in an environmentally friendly manner. Further information is available from the responsible local authority or local disposal company. The product is equipped with the following logo:



KNOW YOUR COFFEE MAKER

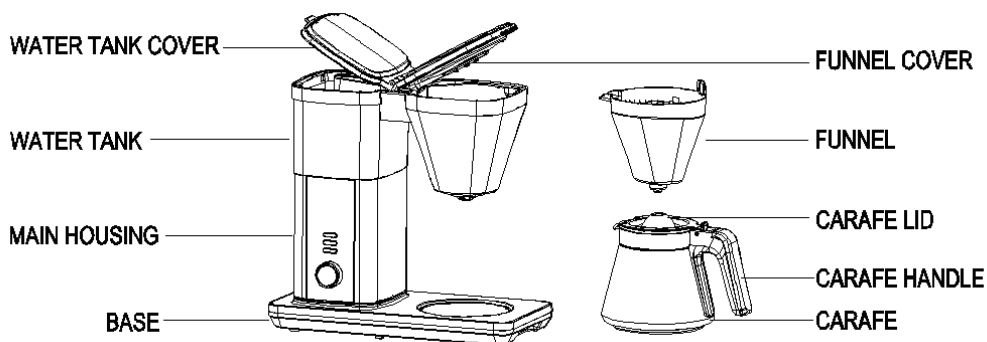

BEFORE THE FIRST USE

Check that all accessories are complete, and the unit is not damaged. Clean and dry all detachable parts thoroughly according to the section “CLEANING AND MAINTENANCE”, then fill water into the water tank to the MAX level and follow the operation of “USING YOUR COFFEE MAKER” to brew water for several times without coffee powder, then discard the water.

USING THE COFFEE MAKER

WARNING:

- 1) The funnel and carafe must be assembled and positioned properly before brewing.
- 2) Do not remove the sprayer, funnel, and carafe during brewing.
- 3) Some parts of appliance are hot when operated, so do not touch. Only use handles or knobs.
- 4) Never leave the empty carafe on the warming plate otherwise the carafe is liable to crack.
- 5) Never use the appliance if the carafe shows any signs of cracks or having a loose or weakened handle. Only use the carafe with this appliance. Use carefully as the carafe is very fragile.
- 6) Do not set a hot container on a hot or cold surface.
- 7) Do not let the coffee maker operate without water.

1. Open the water tank cover and fill the water tank with drinking water and then close the water tank cover.

Note:

1. The water level should not exceed MAX level as indicated on the water gauge.
2. Place the funnel into the funnel support, make sure it is assembled correctly.

3. Add coffee powder into the filter and place it into the funnel. Usually, a cup of coffee needs a level spoon of coffee powder, but you may adjust according to personal taste. Close the funnel cover completely.
4. Insert the carafe onto warming plate horizontally.
5. Plug the power cord into the outlet.

Warning:

- 1) If in the process of brewing coffee and the user lifts the funnel hot water may erupt. (see Fig.3).



Fig. 3

- 2) Do not touch the funnel lid trim pieces during the coffee brewing process.

Note: You can take out the carafe at any time. The appliance will stop dripping automatically for 30 seconds. So do not exceed 30 seconds.

6. Remove the carafe to serve when the brewing process is finished.
7. When the process is finished, if you do not want to serve immediately, the coffee maker will enter into keep-warm condition automatically if it is energized, and then the coffee can be kept warm in the warming plate.

Note: the coffee you get will less than the water you have added, as some water is absorbed by coffee ground.

8. After each brewing process, remember to empty the remaining water inside the boiler. Firstly, unplug the appliance, detach the funnel and filter, and then reverse the appliance (see Fig.4). If not, the water remained in the boiler will produce abnormal odor and white powder will come out (see Fig.5 & Fig.6). After emptying the boiler, replace the funnel and filter.


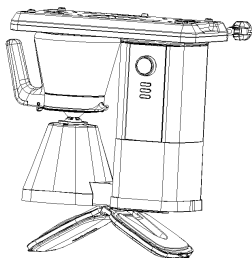


Fig. 4



A little white powder after one week

Fig. 5

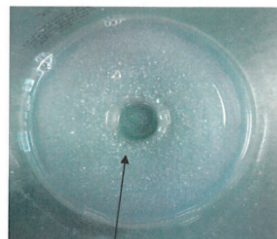

A lot of white powder after 1.5 month

Fig. 6

9. Always turn the coffee maker off and disconnect the power supply when not in use.
 Note: pay attention when serving/pouring the coffee out, otherwise you may get hurt as the temperature of the just finished coffee is high.

10. Clock settings :

- (I). In the standby mode, press the hour key for more than 3S to enter the Hour period setting, "12:00" flashes, and the ":" part does not flash.
 Quickly press the HOUR key once, and the hours will increase one by one. Long press the HOUR key, and the hours will increase continuously. In the process of adjustment, the "hours" part will flash.
- (II). In standby mode, press the MIN key for more than 3S to enter the minute setting, the "12:00" flashes, and the ":" part does not flash.
 Quickly press the MIN key once, and the minutes will increase one by one. Long press the MIN key, and the minutes will increase continuously. In the process of adjustment, the "MIN" part will flash. After 23:59 is to 0:00.
- (III). After setting the time without any operation for 5S or press "  " or AUTO to confirm the setting time.
- (IV). After setting the time without any operation for 5S, it will be confirmed as the current clock, and display the status of the current time, the ":" part flashes at the frequency of once per second, the clock cannot be set in the working state.

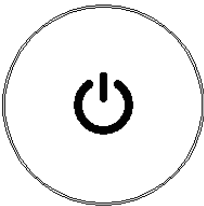


Fig. 7



Fig. 8



Fig. 9

11. Delay function :


- (I). Press the auto key for 1.5 seconds, the "  " and "12:00" flash, and the ":" part does not flash, and start to set the reservation clock (according to the I, II, III operation of the clock setting). When the reservation clock is set and there is no operation for 5S, or press "  " or AUTO to confirm the setting time, the reservation time is recorded, "  " and the "12:00" stops flashing.

(II). After the reservation is successful, the icon "🕒" in the current clock state will be displayed. Press the "Auto" key, and the LCD will display "🕒" and "reservation time", after 5S, it will return to the current clock. At this time, the LCD will display "current time". In the reservation time interface, press the auto key again for 1.5 seconds to cancel the reservation. In the current time interface, long press the auto key again to enter the reservation time interface setting, When the current time is up to the reservation time, the white indicator "🔌" will be on and start making coffee; When the reservation is successful, manually starting the coffee making function will cancel the current reservation time.

12. Cleaning function:

- ① When the product record works for 80 cycles, the "cleaning" icon on the LCD lights up, indicating that the coffee machine needs to be cleaned, at this time, add the descaling liquid into the water tank, and press the "🔌" switch for 3 seconds to start the cleaning program, at this time, the "cleaning" icon on the LCD flashes at a frequency of once a second. During the cleaning process, the "cleaning" icon on the LCD flashes, the heating tube works for 10 seconds and stops for 20 seconds, after 15 minutes, the heating tube is fully powered to brew the water. After descaling, the "cleaning" icon on the LCD goes out.
- ② In standby mode, press the "🔌" switch for 3 seconds to start the manual cleaning program, at this time, the "cleaning" icon on the LCD flashes once a second, when the "cleaning" icon on the LCD flashes, press again for 3 seconds to cancel the cleaning, after canceling the cleaning, the "cleaning" icon on the LCD goes out.

Note: This machine has no memory function, it needs to reset the time after power failure.

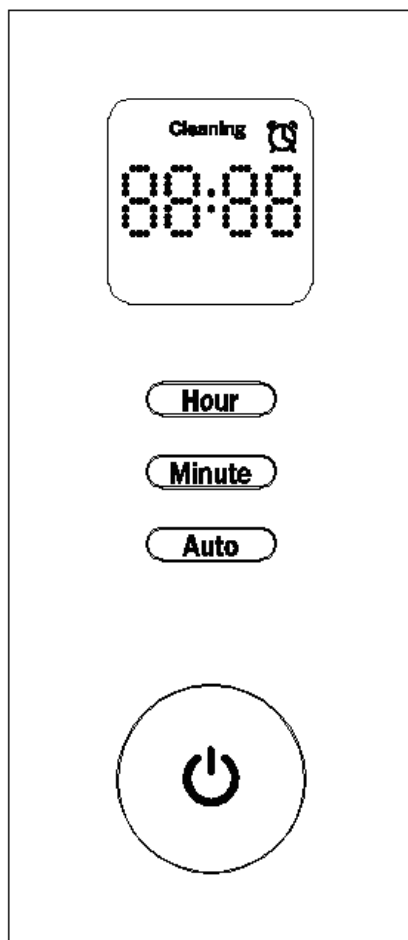

CLEANING AND MAINTENANCE

CAUTION: Be sure to unplug this appliance before cleaning. To protect against electrical shock, do not immerse cord, plug or unit in water or liquid. After each use, always make sure plug is removed from the wall outlet.

1. Remove all detachable parts such as funnel, filter, and carafe etc. to clean completely. Clean all detachable parts after each use in hot, sudsy water.
2. Wipe the appliance exterior surface with a soft, damp cloth to remove stains.
3. Water droplets may buildup in the area above the funnel and drip onto the product base during brewing. To control the dripping, wipe off the area with a clean, dry cloth after each use of the appliance.
4. Use a damp cloth to gently wipe the warming plate. Never use abrasive cleaner to clean it.
5. Replace all parts and keep ready for next use.

Note: Do not clean the container with cleansers, steel wool pads, or other abrasive materials.

REMOVING MINERAL DEPOSITS

To keep your coffee maker operating efficiently, you should clean away the mineral deposits left by the water regularly according to the water quality in your area and the frequency use the appliance, the detail is as follows:

1. Fill the water tank with water and descaler to the MAX level in the gauge of the coffee maker (the scale of water and descaler is 4:1, the detail refers to the instruction of descaler. Please use “household descaler”, you can use the citric acid instead of the descaler (the one hundred parts of water and three parts of citric acid).
2. place the carafe onto the warming plate, make sure the center line of the carafe aligns with that of the funnel.
3. Hold and press the On/Off button for about 3 seconds. The LCD display will show “Cleaning” and keep flashing, the indicator will change to illuminating solidly from flashing and then the appliance will begin working.
4. The descaling is finished when the solution in the water tank is empty. Empty the solution in the boiler.
5. Turn off the appliance and refill the water tank with clean water.
6. Rinse by operating the appliance with water at least 3 times.
7. Finally, empty the water in the boiler.

HINTS FOR GREAT-TASTING COFFEE

1. A clean coffee maker is essential for making great-tasting coffee. Regularly clean the coffee maker as specified in the “CLEANING AND MAINTENANCE” section. Always use fresh, cold water in the coffee maker.
2. Store unused coffee powder in a cool, dry place. After opening a package of coffee powder, reseal it tightly and store it in a refrigerator to maintain its freshness.
3. For an optimum coffee taste, buy whole coffee beans and finely grind them just before brewing.
4. Do not reuse coffee powder since this will greatly reduce the coffee’ flavor. Reheating coffee is not recommended as coffee is at its peak flavor immediately after brewing.
5. Clean the coffee maker when over-extraction causes oiliness. Small oil droplets on the surface of brewed, black coffee are due to the extraction of oil from the coffee powder.
6. Oiliness may occur more frequently if heavily roasted coffees are used.

TECHNICAL DATA

Article No. 10008453

220-240V / 50-60Hz

1550 Watt

1.25 litres, 10 cups

Producer

Epiq ApS

Krøyer Kielbergs Vej 3, 3. th

8660 Skanderborg - Denmark

www.epiq.dk

We cannot be held responsible for any printing errors