

# sall<sub>ing</sub>



## INSTRUCTION MANUAL UPRIGHT TOASTER

11272336

## INTRODUKTION

Mange tak fordi du har valgt et produkt fra Salling. Dermed har du erhvervet et kvalitetsprodukt som opfylder alle gældende krav til præstation og sikkerhedsstandarder i EU. For at sikre en korrekt behandling og en lang levetid anbefaler vi, at du overholder nedenstående anvisninger.

Du bedes læse vejledningen og især sikkerheds anvisningerne omhyggeligt igennem, inden du tager produktet i brug. Opbevar denne betjeningsvejledning, og overlad altid kun produktet til andre sammen med betjeningsvejledningen.

## GENERELLE SIKKERHEDSFORANSTALTNINGER

- Forkert brug af produktet kan medføre personskade og beskadige produktet.
- Anvend kun produktet til det, det er beregnet til. Producenten er ikke ansvarlig for skader, der opstår som følge af forkert brug eller håndtering.
- Anbring altid produktet på et tørt, plant og stabilt underlag på god afstand af bordkant eller lignende.
- Produktet er udelukkende beregnet til husholdningsbrug. Produktet må ikke anvendes til erhvervsbrug.
- Produktet må kun sluttes til 220-240V~, 50-60Hz.
- Produktets motordel/elektronik, ledning og stikket må ikke nedsænkes i vand, og der må ikke trænge vand i motordel/elektronik.
- Rør aldrig ved produktet, ledningen eller stikkontakten med våde eller fugtige hænder.
- Udsæt ikke produktet for direkte sollys, høje temperaturer, fugt, støv eller ætsende stoffer.
- Forlad aldrig produktet, når det er tændt.
- Når produktet er i brug, bør det holdes under konstant opsyn.
- Når produktet bruges skal børn der opholder sig i nærheden af

den altid holdes under opsyn.

- Børn må ikke lege med produktet.
- Produktet kan indeholde skarpe dele og bør derfor opbevares utilgængeligt for børn.
- Brug kun tilbehør, der følger med produktet eller er anbefalet af producenten.
- Produktet må bruges af børn på 8 år eller derover og personer med reducerede fysiske, sensoriske eller mentale evner, eller som mangler erfaring og viden, hvis de er under opsyn eller har modtaget instruktion i sikker brug af produktet og forstår de involverede farer.
- Hold produktet og ledningen uden for rækkevidden af børn under 8 år.
- Rengøring og vedligeholdelse må ikke udføres af børn med mindre de er ældre end 8 år og under opsyn.
- Brødet kan bryde i brand, og af samme årsag må brødristeren ikke benyttes i nærheden eller under brændbare materialer såsom gardiner. Brødristeren skal overvåges ved brug.

## **LEDNING OG STIK**

- Lad ikke ledningen hænge ud over bordkanten.
- Hold ledningen og produktet væk fra varmekilder, varme genstande og åben ild.
- Tag stikket ud af stikkontakten før rengøring, og hvis produktet ikke er i brug. Undlad at trække i ledningen, når du tager stikket ud af stikkontakten, men tag fat om selve stikket.
- Sørg for, at ledningen er rullet helt ud.
- Kontrollér jævnligt, om ledningen eller stikket er beskadiget, og brug ikke produktet, hvis dette er tilfældet, eller hvis det har været tabt på gulvet, tabt i vand eller er blevet beskadiget på en anden måde.
- Hvis produktet, ledningen eller stikket er beskadiget, skal produktet efterses og om nødvendigt repareres af en autoriseret reparatør. Forsøg aldrig at reparere produktet selv. Kontakt købsstedet, hvis der er tale om en reparation, der falder ind under

reklamationsretten. Hvis der foretages uautoriserede indgreb i produktet, bortfalder reklamationsretten.

### **REKLAMATIONSRETEN GÆLDER IKKE:**


- Hvis ovennævnte ikke iagttages.
- Hvis der har været foretaget uautoriserede indgreb i produktet.
- Hvis produktet har været misligholdt, udsat for en voldsom behandling eller lidt anden form for overlast.

### **BORTSKAFFELSE AF PRODUKTET**

Brugte produkter må ikke smides i husholdningsaffaldet. Iht. lovforskrifterne skal det udtjente produkt bortskaffes på ordentlig vis. Derved genanvendes de brugbare materialer, og miljøet skånes. Nærmere informationer fås hos den ansvarlige kommunale myndighed eller det lokale bortskaffelsesfirma. Produktet er forsynet med følgende logo:



## KEND DIN UPRIGIT BRØDRISTER

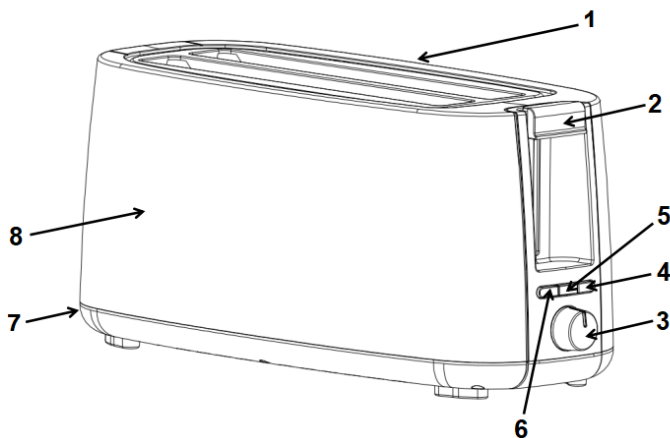

1. Brødbåbning
2. Sænkehåndtag
3. Ristningsgrad (7 niveauer)
4. OPTØNING-knap
5. ANNULLER-knap
6. GENOPVARM-knap
7. Krummebakke
8. Kabinet

**FØR FØRSTE BRUG** Da der kan sidde rester eller olie fra fremstillingen i brødristeren eller på varmelegemet, vil den normalt afgive en lugt de første par gange, den bruges. Dette er normalt og lugten forsvinder hurtigt. Før du rister den første skive brød, anbefales det kraftigt at køre en cyklus uden brød ved at følge nedenstående instruktioner.

### BETJENING

1. Placer en brødske i brødbåbningen. Der kan ristes op til fire skiver ad gangen (to i hver åbning). Der må kun anvendes almindelige brødskeiver.
  - Bemærk: Sørg for, at krummebakken er placeret korrekt før brug.
2. Sæt stikket i stikkontakten.
3. Indstil ristningsgraden til det ønskede niveau (1–7). Niveau 1 er det lyseste, og 7 er det mørkeste.
  - Bemærk:
    - a. Ristningsgraden bliver mørkere, hvis der kun ristes i én åbning fremfor begge åbninger samtidigt.
    - b. Ved kontinuerlig brug vil de efterfølgende skiver blive mørkere end de foregående på samme niveau grundet restvarme.

- c. Indstillingen skal vælges, før ristningen startes, og bør ikke ændres undervejs.
4. Tryk sænkehåndtaget lodret ned, indtil det låser. Når brødet er færdigristet, springer håndtaget automatisk op, og du kan tage brødet ud.
- Bemærk: Håndtaget kan kun låse, når apparatet er tilsluttet strøm.
5. Du kan holde øje med farven undervejs. Du kan til enhver tid afbryde processen ved at trykke på ANNULLER-knappen.

**RISTNING AF FROSSENT BRØD** Placer det frosne brød i åbningerne og vælg den ønskede ristningsgrad. Tryk sænkehåndtaget ned, indtil det klikker på plads, og tryk derefter på OPTØNING-knappen.

**GENOPVARMNING AF BRØD** Placer brødet i åbningerne, tryk sænkehåndtaget ned, indtil det klikker på plads, og tryk derefter på GENOPVARM-knappen.

## **ADVARSEL**

1. Fjern al beskyttelsesemballage før brug.
2. Hvis brødristeren begynder at ryge, skal du trykke på ANNULLER eller dreje knappen helt til venstre for at stoppe processen.
3. Undgå at riste madvarer med ingredienser, der kan smelte eller løbe, såsom smør.
4. Forsøg aldrig at fjerne brød, der sidder fast, uden først at tage stikket ud. Pas på ikke at beskadige de interne dele eller varmelegemerne.
5. Åbningerne er kun beregnet til almindelige brødsriver.

## **RENGØRING OG VEDLIGEHOLDELSE**

1. Tag stikket ud af kontakten før rengøring.
2. Tør ydersiden af med en blød, tør klud, når brødristeren er kølet af. Brug aldrig metalpuds.
3. Træk krummebakken ud i bunden og tøm den. Ved hyppig brug bør krummer fjernes mindst én gang om ugen.
4. Under opbevaring kan ledningen rulles op under bunden af brødristeren.

### **TEKNISKE DATA**

Artikelnr. 11272336  
220-240V~, 50/60Hz  
1200-1400W

### **PRODUCENT**

Epiq ApS  
Krøyer Kielbergs Vej 3, 3. th  
8660 Skanderborg, Danmark  
**[www.epiq.dk](http://www.epiq.dk)**

Vi tager forbehold for trykfejl.

## INTRODUCTION

Thank you for choosing a product from Salling. You have acquired a quality product which meets all applicable performance and safety standards in the EU. In order to ensure proper treatment and a long product life, we recommend that you comply with the instructions below.

Please read the manual and especially the safety instructions carefully before using the product. Keep this manual and provide it for referral along with the product when others are using it.

## GENERAL SAFETY INSTRUCTIONS

- Improper use of the product can cause personal injury and damage.
- Only use the product for what it is intended. The manufacturer is not liable for damages arising from improper use or handling.
- Always place the product on a dry, flat and stable surface well away from table edge or similar.
- The product is intended for household use only. The product is not for professional use.
- The product may only be connected to 220-240V~, 50-60Hz.
- The product engine/electronics, cord or plug cannot be submerged in water, and no water may get in contact with the engine/electronics.
- Never touch the product, cord or plug with wet or damp hands.
- Do not expose the product to direct sunlight, high temperatures, humidity, dust or corrosive substances.
- Never leave the product when it is turned on.
- When the product is in use, it should be kept under constant supervision. Children should always be supervised when using the product to ensure that they do not play with the product. The product is not a toy.
- The product may have sharp parts and must, therefore, be kept

out of reach of children.

- Only use the accessories that come with the product or that are recommended by the manufacturer.
- This product can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.
- Keep the product and its cord out of reach of children less than 8 years of age.
- Cleaning and user maintenance shall not be made by children without supervision.
- Bread may burn, therefore this toaster must not be used near or below curtains or other combustible material and it must be supervised at all times when in use.

## **CORD AND PLUG**

- Do not let the cord hang over the edge.
- Keep the cord and the product away from heat sources, hot objects and open flames.
- Unplug the power cord before cleaning and if the product is not in use. Do not pull the cord when removing the plug from the socket, rather grasp the plug itself.
- Make sure that the cord is fully extended.
- Check regularly that the cord and the plug are not damaged and do not use the product if this is the case, or if it has been dropped on the floor, dropped in water or damaged in another way.
- If the product or plug is damaged, the product must be inspected and, if necessary, repaired by an authorised repairer. Never try to repair the product yourself. Please, contact the store to see if there is a repair that falls under warranty. Tampering of the product will void the warranty.



## **RULES OF COMPLAINTS THE WARRANTY DOES NOT APPLY:**


- If the above is not observed.
- If there has been unauthorised intervention of the product.
- If the product has been mishandled, subjected to rough treatment or some other form of damage.

## **PRODUCT DISPOSAL**

Used product should not be disposed as household waste. According to legislation, the product should be disposed of properly so that the materials can be recycled in an environmentally friendly manner. Further information is available from the responsible local authority or local disposal company. The product is equipped with the following logo:



## KNOW YOUR UPRIGHT TOASTER

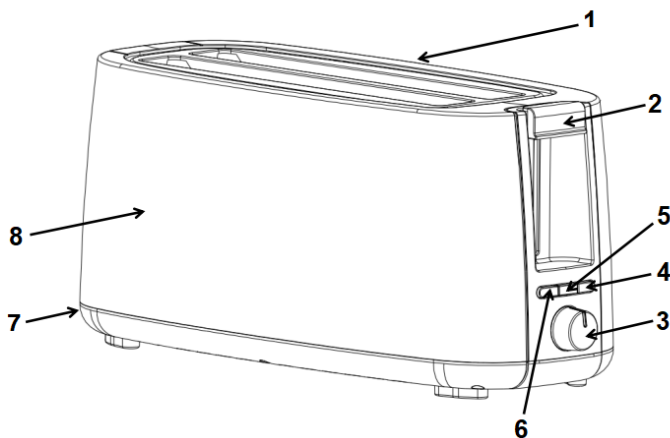

1. Bread Slot
2. Carriage Handle
3. Browning Knob (7 levels)
4. DEFROST Button
5. CANCEL Button
6. REHEAT Button
7. Crumb Tray
8. Housing

**BEFORE FIRST USE** As manufacturing residue or oil may remain in the toaster or on the heating element, the appliance will usually emit an odor during the first few uses. This is normal and will disappear after a short time. Before toasting the first slice of bread, it is strongly suggested to operate the appliance following the instructions below, but without bread.

### OPERATION

1. Place a bread slice into the bread slot. Up to four slices can be toasted at the same time (two in each slot). Only standard bread slices should be inserted.
  - Note: Ensure the crumb tray is positioned correctly before use.
2. Plug the power cord into a power outlet.
3. Set the browning knob to your desired level (1–7). Level 1 is the lightest, and level 7 is the darkest.
  - Note:
    - a. The toast will be darker if only one slot is used compared to both slots being used at the same time.
    - b. If used continuously, subsequent slices will be darker than the first cycle at the same

setting due to residual heat.

- c. The level should be set before toasting and should not be adjusted during the cycle.
4. Press the carriage handle down vertically until it locks into place. Once the bread reaches the preset level, the handle will automatically pop up.
  - Note: The handle will only lock when the appliance is connected to a power outlet.
5. You can observe the toasting color during the process. You may interrupt the cycle at any time by pressing the CANCEL button.

**TOASTING FROZEN BREAD** Place the frozen bread into the slots and select the desired browning level. Press the carriage handle down until it clicks into place, then press the DEFROST button.

**REHEATING BREAD** Place the bread into the slots and press the carriage handle down until it clicks into place, then press the REHEAT button.

## **CAUTION**

1. Remove all protective wrapping before use.
2. If the toaster starts to smoke, press CANCEL or turn the knob to the lowest setting to stop the process.
3. Avoid toasting foods with runny ingredients such as butter or jam.
4. Never attempt to remove jammed bread without first unplugging the toaster. Be careful not to damage the internal mechanism or heating elements.
5. The slots are only intended for regular bread slices.

## **CLEANING AND MAINTENANCE**

1. Disconnect the power supply before cleaning.
2. Wipe the exterior with a soft, dry cloth once the toaster has cooled down. Never use metal polish.
3. Pull out the crumb tray at the bottom and empty it. If used frequently, remove crumbs at least once a week.
4. The power cord can be stored by winding it under the base of the toaster.

## **TECHNICAL DATA**

Article No. 11272336  
220-240V~, 50/60Hz  
1200-1400W

## **PRODUCER**

Epiq ApS  
Krøyer Kielbergs Vej 3, 3. th  
8660 Skanderborg, Denmark  
**[www.epiq.dk](http://www.epiq.dk)**

We cannot be held responsible for any printing errors.