

KØKKENØHEF



INSTRUCTION MANUAL

BLENDER

10387303

INTRODUKTION

Mange tak fordi du har valgt et produkt fra Køkkenchef. Dermed har du erhvervet et kvalitetsprodukt som opfylder alle gældende krav til præstation og sikkerhedsstandarder i EU. For at sikre en korrekt behandling og en lang levetid anbefaler vi, at du overholder nedenstående anvisninger.

Du bedes læse vejledningen og især sikkerheds anvisningerne omhyggeligt igennem, inden du tager produktet i brug. Opbevar denne betjeningsvejledning, og overlad altid kun produktet til andre sammen med betjeningsvejledningen.

GENERELLE SIKKERHEDSFORANSTALTNINGER

- Forkert brug af produktet kan medføre personskade og beskadige produktet.
- Anvend kun produktet til det, det er beregnet til. Producenten er ikke ansvarlig for skader, der opstår som følge af forkert brug eller håndtering.
- Anbring altid produktet på et tørt, plant og stabilt underlag på god afstand af bordkant eller lignende.
- Produktet er udelukkende beregnet til husholdningsbrug. Produktet må ikke anvendes til erhvervsbrug.
- Produktet må kun sluttes til 220-240V~, 50/60Hz.
- Produktets motordel/elektronik, ledning og stikket må ikke nedsænkes i vand, og der må ikke trænge vand i motordel/elektronik.
- Rør aldrig ved produktet, ledningen eller stikkontakten med våde eller fugtige hænder.
- Udsæt ikke produktet for direkte sollys, høje temperaturer, fugt, støv eller ætsende stoffer.
- Forlad aldrig produktet, når det er tændt.
- Når produktet er i brug, bør det holdes under konstant opsyn.
- Når produktet bruges skal børn der opholder sig i nærheden af

den altid holdes under opsyn.

- Børn må ikke lege med produktet.
- Produktet kan indeholde skarpe dele og bør derfor opbevares utilgængeligt for børn.
- Brug kun tilbehør, der følger med produktet eller er anbefalet af producenten.
- Produktet må ikke bruges af personer med nedsat følsomhed, fysiske eller mentale handicap, eller personer, som ikke er i stand til at betjene produktet, medmindre de overvåges eller instrueres i brugen af en person, som er ansvarlig for deres sikkerhed.

LEDNING OG STIK

- Lad ikke ledningen hænge ud over bordkanten.
- Hold ledningen og produktet væk fra varmekilder, varme genstande og åben ild.
- Tag stikket ud af stikkontakten før rengøring, og hvis produktet ikke er i brug. Undlad at trække i ledningen, når du tager stikket ud af stikkontakten, men tag fat om selve stikket.
- Sørg for, at ledningen er rullet helt ud.
- Kontrollér jævnligt, om ledningen eller stikket er beskadiget, og brug ikke produktet, hvis dette er tilfældet, eller hvis det har været tabt på gulvet, tabt i vand eller er blevet beskadiget på en anden måde.
- Hvis produktet, ledningen eller stikket er beskadiget, skal produktet efterses og om nødvendigt repareres af en autoriseret reparatør. Forsøg aldrig at reparere produktet selv. Kontakt købsstedet, hvis der er tale om en reparation, der falder ind under reklamationsretten. Hvis der foretages uautoriserede indgreb i produktet, bortfalder reklamationsretten.

REKLAMATIONSRETEN GÆLDER IKKE:

- Hvis ovennævnte ikke iagttages.
- Hvis der har været foretaget uautoriserede indgreb i produktet.
- Hvis produktet har været misligholdt, udsat for en voldsom behandling eller lidt anden form for overlast.

BORTSKAFFELSE AF PRODUKTET

Brugte produkter må ikke smides i husholdningsaffaldet. Iht. lovforskrifterne skal det udtjente produkt bortskaffes på ordentlig vis. Derved genanvendes de brugbare materialer, og miljøet skånes. Nærmere informationer fås hos den ansvarlige kommunale myndighed eller det lokale bortskaffelsesfirma. Produktet er forsynet med følgende logo:




VIGTIGE SIKKERHEDSANVISNINGER

1. Undgå kontakt med dele i bevægelse.
2. Knivene er skarpe og skal behandles forsigtigt.
3. Brug aldrig varme væsker, og start ikke apparatet uden indhold.
4. Blenderen må ikke bruges til blanding eller knusning af hårde og tørre madvarer. Knivene kan blive sløve.
5. Sørg for, at blenderlåget er sat korrekt på, før du bruger blenderen.
6. Stik ikke hænder eller køkkengrej ned i beholderen under blanding eller knusning for at undgå risikoen for alvorlig personskade eller skade på blenderen. Du kan bruge en skraber men kun, når blenderen ikke kører.
7. For at undgå risikoen for personskade må du aldrig placere knivenheden på foden uden først at sætte kanden eller skålen korrekt på.
8. Vær forsigtig, når du håndterer de skarpe knive, tømmer skålen, og når du rengør blenderen.

FORSIGTIG: Kontrollér, at blenderen er slukket, før du tager den af foden.

BESKRIVELSE AF DELE

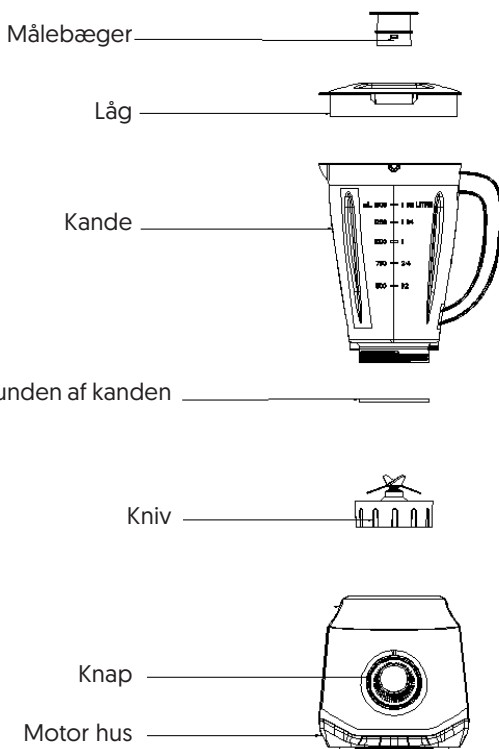

FØR FØRSTE BRUG

Kontrollér, at alle dele er komplette og uden skader. Vælg tilbehør, der passer til den ønskede funktion. Blendertilbehøret er egnet til blanding af frugt og grøntsager eller til knusning af is, mens kværntilbehøret er til maling af kaffebønner. Rengør tilbehøret i henhold til afsnittet "RENGØRING OG VEDLIGEHOLDELSE".

ADVARSEL: Knivene er skarpe. Håndtér dem med stor forsigtighed, og sørg for at trække ledningen til blenderen ud af stikkontakten før samling og fjernelse af dele.

BRUG AF BLENDER

1. Placér motorenheden på en flad vandret overflade, og kontrollér, at ledningen ikke er sat i en stikkontakt.

BEMÆRK: Der er en sikkerhedslås i bunden af kanden. Blenderen vil ikke starte, hvis kanden ikke er sat korrekt på.

2. Tag låget af kanden ved at dreje det mod uret, og læg det på bordet. Skræl frugterne eller grøntsagerne, fjern eventuelle kerner, og skær ingredienserne i mindre stykker. Læg stykkerne i kanden. Du skal normalt tilføje en vis mængde rent vand, for at apparatet kan køre jævnt. Blandingen må ikke overstige maksimumsniveauet, angivet på kanden, eller være under minimumsniveauet. Det ideelle forhold mellem frugter eller grøntsager og vand er 2:3.

OPSKRIFT

MADVARE	KLARGØRING	VÆGT	HASTIGHED
Gulerødder (æbler, pærer osv.)	Skæres i terninger på 15 x 15 x 15 mm	Gulerødder: 600 g Vand: 900 g	High (Højeste hastighed)

BEMÆRK: Blenderen kan ikke bruges til at piske æggeghvider, knuse is, mose kartofler eller ælte dej.

BEMÆRK: Brug aldrig kogende væsker, og start ikke blenderen uden indhold.

3. Du kan tilsætte ingredienser i kanden gemmen midteråbningen i låget, mens blenderen kører. Sæt eventuelt målebægeret i igen. Flugt tapperne på målebægeret med rillerne i låget, tryk det ned, og drej målebægeret med uret, indtil det sidder korrekt.
4. Kontrollér, at hastighedsvælgeren er i stillingen "0". Sæt ledningen til blenderen i en stikkontakt, og vælg den ønskede hastighed med hastighedsvælgeren. Du kan trykke på og holde impulsknappen nede, hvis du vil blende hurtigere. Detaljerede oplysninger findes nedenfor i fig. 1

BEMÆRK: Kontrollér, at låget er sat korrekt på før brug, og åbn aldrig låget under brug.

Du kan bruge rørependen til at røre i blandingen gennem åbningen i låget for at kontrollere konsistensen.

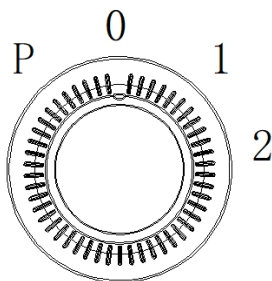


Fig. 1

5. Brug blenderen i højst 3 minutter ad gangen, og vent, indtil den er kølet af til rumtemperatur, før du bruger blenderen igen.
6. Drej hastighedsvælgeren til stillingen "0", når blandingen har den ønskede konsistens.
7. Drej kanden mod uret, og tag den af motorenheden. Tag forsigtigt låget af, hæld blandingen ud, og servér den.

ADVARSEL:

1. Brug blenderen kontinuerligt i højst 3 minutter ad gangen.
2. Knivene er meget skarpe. Skal behandles forsigtigt.
3. Brug ikke blenderen uden låg.
4. Adskil ikke kanden eller skålen fra den tilhørende fod under normale omstændigheder.


RENGØRING OG VEDLIGEHOLDELSE

Sørg for at trække ledningen til blenderen ud af stikkontakten før rengøringen

For blenderen

Du kan rengøre blenderen nemt og hurtigt med den automatiske rengøringsfunktion.

1. Hæld lidt varmt sæbevand i kanden, drej hastighedsvælgeren til stillingen "1", og tryk på impulsknappen i nogle få sekunder.
2. Fjern alle aftagelige dele. Tag kanden af motorenheden, og skyl den under rindende vand. Fjern derefter knivenheden fra kandeenheden, tag knivenheden ud, og fjern tætningsringen i bunden af kanden. Fjern også målebægeret fra låget. Skyl kanden, knivene, kandefoden, låget og målebægeret under rindende vand.

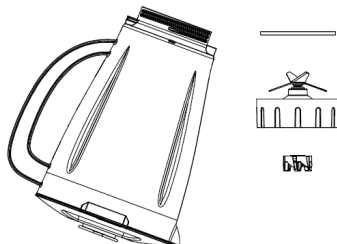

3. Tør motorenheden af udvendigt med en fugtig klud.

BEMÆRK: Brug ikke slibende rengøringsmiddel, og sænk aldrig motorenheden ned i vand med henblik på rengøring

4. Tør alle dele efter, og saml dem igen.

TEKNISKE DATA

Artikelnr. 10387303
220-240V~, 50/60Hz
400 Watt

PRODUCENT

Epiq ApS
Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Danmark
www.epiq.dk

Vi tager forbehold for trykfejl.

INTRODUCTION

Thank you for choosing a product from Køkkenchef. You have acquired a quality product which meets all applicable performance and safety standards in the EU. In order to ensure proper treatment and a long product life, we recommend that you comply with the instructions below.

Please read the manual and especially the safety instructions carefully before using the product. Keep this manual and provide it for referral along with the product when others are using it.

GENERAL SAFETY INSTRUCTIONS

- Improper use of the product can cause personal injury and damage.
- Only use the product for what it is intended. The manufacturer is not liable for damages arising from improper use or handling.
- Always place the product on a dry, flat and stable surface well away from table edge or similar.
- The product is intended for household use only. The product is not for professional use.
- The product may only be connected to 220-240V~, 50/60Hz.
- The product engine/electronics, cord or plug cannot be submerged in water, and no water may get in contact with the engine/electronics.
- Never touch the product, cord or plug with wet or damp hands.
- Do not expose the product to direct sunlight, high temperatures, humidity, dust or corrosive substances.
- Never leave the product when it is turned on.
- When the product is in use, it should be kept under constant supervision. Children should always be supervised when using the product to ensure that they do not play with the product. The product is not a toy.
- The product may have sharp parts and must, therefore, be kept

out of reach of children.

- Only use the accessories that come with the product or that are recommended by the manufacturer.
- The product must not be used by people with reduced sensitivity, physical or mental disability, or people who are not able to operate the product unless they are supervised or instructed by a person responsible for their safety.

CORD AND PLUG

- Do not let the cord hang over the edge.
- Keep the cord and the product away from heat sources, hot objects and open flames.
- Unplug the power cord before cleaning and if the product is not in use. Do not pull the cord when removing the plug from the socket, rather grasp the plug itself.
- Make sure that the cord is fully extended.
- Check regularly that the cord and the plug are not damaged and do not use the product if this is the case, or if it has been dropped on the floor, dropped in water or damaged in another way.
- If the product or plug is damaged, the product must be inspected and, if necessary, repaired by an authorised repairer. Never try to repair the product yourself. Please, contact the store to see if there is a repair that falls under warranty. Tampering of the product will void the warranty.

RULES OF COMPLAINTS THE WARRANTY DOES NOT APPLY:

- If the above is not observed.
- If there has been unauthorised intervention of the product.
- If the product has been mishandled, subjected to rough treatment or some other form of damage.

PRODUCT DISPOSAL

Used product should not be disposed as household waste. According to legislation, the product should be disposed of

properly so that the materials can be recycled in an environmentally friendly manner. Further information is available from the responsible local authority or local disposal company. The product is equipped with the following logo:




IMPORTANT SAFEGUARDS

1. Avoid contact with moving parts.
2. Blades are sharp, so handle them with care.
3. Never use hot liquids or run the appliance empty.
4. The appliance cannot be used for blending or grinding hard and dry substance, otherwise the blade could be blunted.
5. Be sure the blending lid is placed accurately before operating the appliance.
6. Keep hands and utensils out of the container while blending or grinding to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not in use.
7. To reduce the risk of injury, never place the cutting assembly on the base without the jar or bowl properly attached.
8. Care shall be taken when handling the sharp cutting blades, emptying the bowl, and cleaning.

CAUTION: Ensure that the blender is switched off before removing it from the base.

PARTS IDENTIFICATION

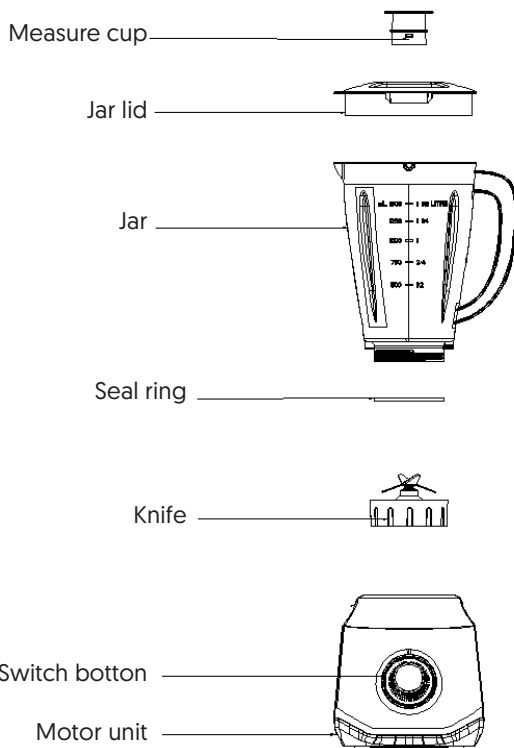

BEFORE THE FIRST USE

Check that all parts are complete and not damaged. Choose the appropriate attachment to perform your desired task. The blender attachment is suitable for blending fruits or vegetables or crushing ice, while the grinder attachment for grinding coffee beans. Clean the attachment according to the section “CLEANING AND MAINTENANCE”.

WARNING: The blade is sharp, handle with great care and ensure that unplug the appliance from the power outlet before assembling and removing parts.

BLENDER OPERATION

1. Place the motor unit on a flat horizontal surface and make sure it is unplugged.
NOTE: There is a safety interlock device at the bottom of the jar, if the jar is not assembled properly, the blender will not operate.
2. Open the jar cover by turning it anticlockwise and placing it on the surface. Peel or core the fruits or vegetables and then cut them into small pieces, then put them into the jar. Usually, a certain amount of purified water must be added to facilitate the smooth running of the appliance. The amount of mixture should not exceed the max level as indicated on the jar, nor sit lower than the min level. The best proportion of fruits or vegetables and water is 2:3.

RECIPE

FOOD TYPE	SPEC	WEIGHT	SPEED
Carrot [apple, pear etc.]	Cut into 15mm*15mm*15mm	Carrot: 600g Water: 900g	High speed

NOTE: The blender is not applicable for beating egg white, crushing ice,mashing potatoes, or mixing dough.

NOTE: Never use boiling liquids or run the appliance empty.

3. You may add ingredients into the jar through the center opening of the lid during use, then replace the measuring cup if necessary. Let the tabs of the measuring cup align with the grooves of the lid, put it down, and turn the measuring cup clockwise until it is in place.
4. Ensure the Speed Selector is in the “0” Position, then plug the blender to the power outlet and set the Speed Selector to your desired setting. You can press down the Pulse button without releasing it if you want to accelerate the blending process. The detailed information is shown in below Fig. 1

NOTE: Make sure the lid is placed properly before use, and never open the lid during use. In addition, for the sake of consistency, you can use the stir stick to stir mixture through the opening in the lid.

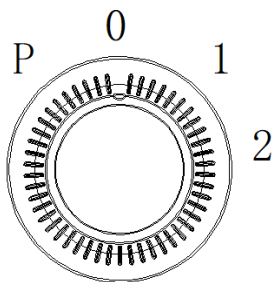


Fig. 1

5. Do not operate the appliance for more than 3 minutes at a time and wait until the appliance has cooled down to room temperature before operating the appliance again.
6. Turn the Speed Selector to the "0" position once the mixture has been blended to your desired consistency.
7. Turn the jar anti-clockwise and remove it from the motor unit, carefully remove the lid, then pour and serve.

WARNING:


1. Never operate the appliance continuously for more than 3 minutes at a time.
2. Blades are very sharp. Handle with care.
3. Do not operate without the lid properly in place.
4. Do not disassemble the jar or bowl from the jar base or bowl base in general condition.

CLEANING AND MAINTENANCE

Make sure to disconnect the appliance from the power outlet before cleaning
For blender

The Auto Clean function can clean the blender easily and rapidly.

1. Pour a little warm soapy water into the Jar and turn the Speed Selector to the "1" position and press down the Pulse button without releasing it for a few seconds.
2. Dismantle all detachable parts. Disassemble the Jar from the motor unit and rinse it under running water, then detach the blade assembly from the jar assembly, take the blade assembly out, and finally remove the jar base seal ring. In addition, detach the measuring cup from the lid. Rinse the jar, blade, jar base, lid, and measuring cup under running water.

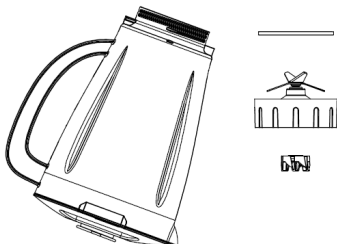

3. Wipe the outer surface of motor unit and with a damp cloth.

NOTE: Do not use abrasive cleanser and never immerse motor unit in water for cleaning

4. Dry all parts and then assemble them.

TECHNICAL DATA

Article No. 10387303
220-240V~, 50/60Hz
400 Watt

PRODUCER

Epiq ApS
Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Denmark
www.epiq.dk

We cannot be held responsible for any printing errors.