

salling



INSTRUCTION MANUAL UPRIGHT TOASTER

10068175

INTRODUKTION

Mange tak fordi du har valgt et produkt fra Salling. Dermed har du erhvervet et kvalitetsprodukt som opfylder alle gældende krav til præstation og sikkerhedsstandarder i EU. For at sikre en korrekt behandling og en lang levetid anbefaler vi, at du overholder nedenstående anvisninger.

Du bedes læse vejledningen og især sikkerheds anvisningerne omhyggeligt igennem, inden du tager produktet i brug. Opbevar denne betjeningsvejledning, og overlad altid kun produktet til andre sammen med betjeningsvejledningen.

GENERELLE SIKKERHEDSFORANSTALTNINGER

- Forkert brug af produktet kan medføre personskade og beskadige produktet.
- Anvend kun produktet til det, det er beregnet til. Producenten er ikke ansvarlig for skader, der opstår som følge af forkert brug eller håndtering.
- Anbring altid produktet på et tørt, plant og stabilt underlag på god afstand af bordkant eller lignende.
- Produktet er udelukkende beregnet til husholdningsbrug. Produktet må ikke anvendes til erhvervsbrug.
- Produktet må kun sluttes til 220-240V~, 50/60Hz.
- Produktets motordel/elektronik, ledning og stikket må ikke nedsænkes i vand, og der må ikke trænge vand i motordel/elektronik.
- Rør aldrig ved produktet, ledningen eller stikkontakten med våde eller fugtige hænder.
- Udsæt ikke produktet for direkte sollys, høje temperaturer, fugt, støv eller ætsende stoffer.
- Forlad aldrig produktet, når det er tændt.
- Når produktet er i brug, bør det holdes under konstant opsyn.
- Når produktet bruges skal børn der opholder sig i nærheden af

den altid holdes under opsyn.

- Børn må ikke lege med produktet.
- Produktet kan indeholde skarpe dele og bør derfor opbevares utilgængeligt for børn.
- Brug kun tilbehør, der følger med produktet eller er anbefalet af producenten.
- Produktet må bruges af børn på 8 år eller derover og personer med reducerede fysiske, sensoriske eller mentale evner, eller som mangler erfaring og viden, hvis de er under opsyn eller har modtaget instruktion i sikker brug af produktet og forstår de involverede farer.
- Hold produktet og ledningen uden for rækkevidden af børn under 8 år.
- Rengøring og vedligeholdelse må ikke udføres af børn med mindre de er ældre end 8 år og under opsyn.
- Brødet kan bryde i brand, og af samme årsag må brødristeren ikke benyttes i nærheden eller under brændbare materialer såsom gardiner. Brødristeren skal overvåges ved brug.

LEDNING OG STIK

- Lad ikke ledningen hænge ud over bordkanten.
- Hold ledningen og produktet væk fra varmekilder, varme genstande og åben ild.
- Tag stikket ud af stikkontakten før rengøring, og hvis produktet ikke er i brug. Undlad at trække i ledningen, når du tager stikket ud af stikkontakten, men tag fat om selve stikket.
- Sørg for, at ledningen er rullet helt ud.
- Kontrollér jævnligt, om ledningen eller stikket er beskadiget, og brug ikke produktet, hvis dette er tilfældet, eller hvis det har været tabt på gulvet, tabt i vand eller er blevet beskadiget på en anden måde.
- Hvis produktet, ledningen eller stikket er beskadiget, skal produktet efterses og om nødvendigt repareres af en autoriseret reparatør. Forsøg aldrig at reparere produktet selv. Kontakt købsstedet, hvis der er tale om en reparation, der falder ind under

reklamationsretten. Hvis der foretages uautoriserede indgreb i produktet, bortfalder reklamationsretten.

REKLAMATIONSRETEN GÆLDER IKKE:

- Hvis ovennævnte ikke iagttages.
- Hvis der har været foretaget uautoriserede indgreb i produktet.
- Hvis produktet har været misligholdt, udsat for en voldsom behandling eller lidt anden form for overlast.

BORTSKAFFELSE AF PRODUKTET

Brugte produkter må ikke smides i husholdningsaffaldet. Iht. lovforskrifterne skal det udtjente produkt bortskaffes på ordentlig vis. Derved genanvendes de brugbare materialer, og miljøet skånes. Nærmere informationer fås hos den ansvarlige kommunale myndighed eller det lokale bortskaffelsesfirma. Produktet er forsynet med følgende logo:



FØR BRUG

Fjern omhyggeligt al emballage fra brødristeren. Gem eventuelt emballagen til senere brug.

SIKKERHED

1. Sørg for, at ledningen ikke rører ved varme genstande eller overflader.
2. Før nøje tilsyn med brødristeren, når den bruges, hvor børn er til stede.
3. Lad altid brødristeren afkøle helt, før du sætter den væk.
4. Sørg for, at brødet passer til brødrillerne, før du bruger brødristeren. Iturevet brød eller tykt brød kan sætte sig fast i brødristeren.
5. Hvis brødet sidder fast i brødristeren, skal du trække stikket ud af stikkontakten, vente indtil apparatet er afkølet, og derefter fjerne brødet. **FJERN ALDRIG BRØD MED KØKKENGREJ AF METAL.**
6. Vær omhyggelig med ikke at beskadige brødristerens indvendige dele, når du tager brødet ud af brødristeren.

BEMÆRK ISÆR:

Brødristeren kan lugte lidt brændt, når den bruges første gang, på grund af opvarmningen af varmeelementerne. Det udgør ingen fare for brugeren og er ikke et tegn på en fejl i brødristeren.


Lad brødristeren varme op, indtil lugten forsvinder.

DET ANBEFALES AT BRUGE BRØDRISTEREN FØRSTE GANG UDEN BRØD.

1. Sæt brødristeren i stikkontakten, og tænd brødristeren.
2. Indstil ristekontrollen til den laveste indstilling [1].
3. Tryk brødholderen ned, og lad varmeelementerne varme op.
4. Lad elementerne varme op, indtil den brændte lugt forsvinder.
5. Tryk på knappen ANNULLÉR for at løfte brødholderen op.

HOVEDKOMPONENTER

1. Håndtag til brødholder
2. Knappen Annullér
3. Knappen Opvarm
4. Knappen Optø
5. Ristekontrol
6. Brødriller
7. Krummebakke
8. Metalplade
9. Løftehåndtag til bollerister

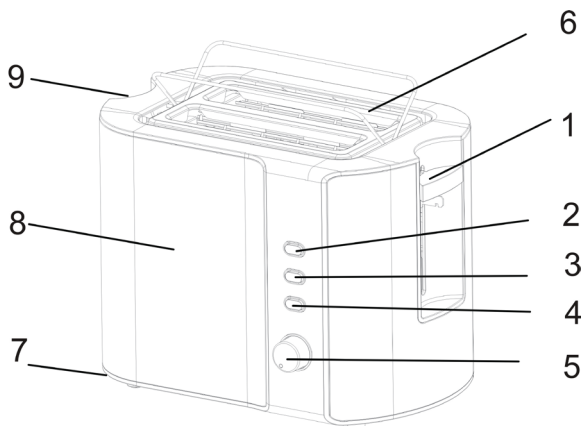

SÅDAN BRUGER DU BRØDRISTEREN

1. Kontrollér, at brødristeren er sat i stikkontakten og er tændt.
2. Læg en eller to skiver brød i brødrillerne, og tryk brødholderen ned. Brødholderen bliver nede, indtil brødet er ristet.
3. Brødristeren begynder automatisk at riste brødet.
4. Justér ristekontrollen i henhold til den ønskede grad af ristning.
5. Tryk på knappen ANNULLÉR for at stoppe brødristningen.
6. Brødholderen springer automatisk op, når brødet er ristet.
7. Du kan riste brødet igen, hvis det ikke er ristet tilstrækkeligt.
8. Justér ristekontrollen til en lavere indstilling, og læg brødet i igen. Kontrollér, at brødet ikke brænder under den gentagne ristning.

RISTEKONTROL

Du kan justere længden af ristningen ved hjælp af ristekontrollen. Kan justeres fra 1-6. 1-2 er til let ristning, 3-4 er til mellemristning, og 5-6 er til mørk ristning.

OPVARMNING

Du kan opvarme brødet i brødristeren, hvis brødet er afkølet for hurtigt.

- Sæt brødet tilbage i brødristeren.
- Justér ristekontrollen til en lav indstilling.
- Tryk brødholderen ned.
- Tryk på knappen OPVARM. Lysdioden for opvarmning lyser. Kontrollér, at brødet ikke brænder.

OPTØNING

Du kan optø frosset brød i brødristeren.

- Placér brødet i brødristeren.
- Justér ristekontrollen til den ønskede indstilling.
- Tryk brødholderen ned
- Tryk på knappen OPTØ. Lysdioden for optøning lyser. Kontrollér, at brødet ikke brænder.

ANNULLERING

- Tryk på knappen ANNULLÉR, hvis brødet begynder at ryge.
- Brødristningen kan annulleres på et hvilket som helst tidspunkt under ristningen.

PLEJE OG VEDLIGEHOLDELSE

Rengøring

1. Sluk brødristeren. Træk ledningen ud af stikkontakten. Lad brødristeren afkøle helt før rengøringen.
2. Rengør kun overfladerne på brødristeren med en blød, fugtig klud.
3. Lad ikke krummer samle sig i brødristeren.
4. Du kan fjerne krummer ved at trække krummebakken i enden af brødristeren ud og

fjerne eventuelle krummer med en fugtig klud.

5. Det er nemt at beskadige de indvendige dele. Rør ikke brødristerens indvendige dele med køkkengrej.

TEKNISKE DATA

Artikelnr. 10068175
220-240V~, 50/60Hz
800 Watt

PRODUCENT

Epiq ApS
Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Danmark
www.epiq.dk

Vi tager forbehold for trykfejl.

INTRODUCTION

Thank you for choosing a product from Salling. You have acquired a quality product which meets all applicable performance and safety standards in the EU. In order to ensure proper treatment and a long product life, we recommend that you comply with the instructions below.

Please read the manual and especially the safety instructions carefully before using the product. Keep this manual and provide it for referral along with the product when others are using it.

GENERAL SAFETY INSTRUCTIONS

- Improper use of the product can cause personal injury and damage.
- Only use the product for what it is intended. The manufacturer is not liable for damages arising from improper use or handling.
- Always place the product on a dry, flat and stable surface well away from table edge or similar.
- The product is intended for household use only. The product is not for professional use.
- The product may only be connected to 220-240V~, 50/60Hz.
- The product engine/electronics, cord or plug cannot be submerged in water, and no water may get in contact with the engine/electronics.
- Never touch the product, cord or plug with wet or damp hands.
- Do not expose the product to direct sunlight, high temperatures, humidity, dust or corrosive substances.
- Never leave the product when it is turned on.
- When the product is in use, it should be kept under constant supervision. Children should always be supervised when using the product to ensure that they do not play with the product. The product is not a toy.
- The product may have sharp parts and must, therefore, be kept

out of reach of children.

- Only use the accessories that come with the product or that are recommended by the manufacturer.
- This product can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.
- Keep the product and its cord out of reach of children less than 8 years of age.
- Cleaning and user maintenance shall not be made by children without supervision.
- Bread may burn, therefore this toaster must not be used near or below curtains or other combustible material and it must be supervised at all times when in use.

CORD AND PLUG

- Do not let the cord hang over the edge.
- Keep the cord and the product away from heat sources, hot objects and open flames.
- Unplug the power cord before cleaning and if the product is not in use. Do not pull the cord when removing the plug from the socket, rather grasp the plug itself.
- Make sure that the cord is fully extended.
- Check regularly that the cord and the plug are not damaged and do not use the product if this is the case, or if it has been dropped on the floor, dropped in water or damaged in another way.
- If the product or plug is damaged, the product must be inspected and, if necessary, repaired by an authorised repairer. Never try to repair the product yourself. Please, contact the store to see if there is a repair that falls under warranty. Tampering of the product will void the warranty.

RULES OF COMPLAINTS THE WARRANTY DOES NOT APPLY:

- If the above is not observed.
- If there has been unauthorised intervention of the product.
- If the product has been mishandled, subjected to rough treatment or some other form of damage.

PRODUCT DISPOSAL

Used product should not be disposed as household waste. According to legislation, the product should be disposed of properly so that the materials can be recycled in an environmentally friendly manner. Further information is available from the responsible local authority or local disposal company. The product is equipped with the following logo:



BEFORE USING

Carefully remove your toaster from its packaging. You may wish to store the packaging for future use.

SAFETY

1. Ensure the mains lead is kept clear from hot objects and surfaces.
2. Ensure close supervision when operating the toaster while children are present.
3. Always allow the toaster to cool completely after use before storing it.
4. Ensure the bread fits easily into the slots before using the toaster. Torn or thick bread can cause the toaster to jam.
5. If the bread sticks to the inside of the toaster, unplug it, wait for it to cool down and then remove the bread. **NEVER USE METAL UTENSILS TO REMOVE THE BREAD.**
6. Take care not to damage the internal of the toaster when removing the bread.

SPECIAL NOTE:


When using the toaster for the first time, there may be a slight burning odor, as the heating elements warm up. This represents no danger to the user and does not indicate a defect in the appliance. Allow the toaster to heat up until the odor disappears.

IT IS ADVISABLE TO FIRST OPERATE THE TOASTER WITHOUT PLACING BREAD IN THE SLOT.

1. Connect the toaster to the mains supply and switch the toaster ON.
2. Set the browning control to the lowest setting [1].
3. Press the loading handle down and allow the heating elements to warm up.
4. Allow the elements to heat up until burning odor disappears.
5. Press the CANCEL button to release the loading handle.

MAIN PART

1. Toaster lever
2. Cancel Button
3. Reheat Button
4. Defrost Button
5. Browning Control
6. Toasting Slots
7. Crumb Tray
8. Metal plate
9. Bun rack lift handle

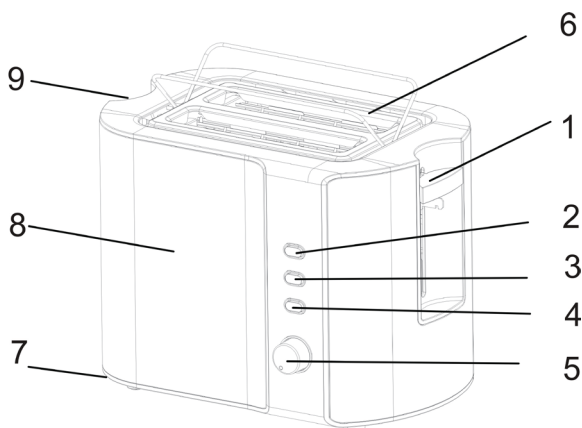

HOW TO USE THE TOASTER

1. Ensure the toaster is connected to mains supply and switched ON.
2. Place one or two slices of bread into the toasting slots and press down the toaster lever. It will remain down until the bread is toasted.
3. The toaster will heat up automatically and start toasting.
4. Adjust the browning control to achieve the desired toasting degree.
5. To stop toasting process press the CANCEL button at any time.
6. When the toasting is finished the lever will rise automatically.
7. If the bread is not toasted enough, you can toast the bread again.
8. Adjust the browning control to a lower setting and replace the bread. Make sure the bread does not burn while re-toasting.

BROWNING CONTROL

The browning control enables adjustment of toasting time. Adjustable from 1 to 6. 1-2 for light toasting, 3-4 for medium toasting and 5-6 for dark toasting.

REHEAT FUNCTION

Your toaster can re-heat the bread if it has cooled too quickly.

- Replace the bread in the toaster.
- Set the browning control to a low setting.
- Press the lever down.
- Press the REHEAT button, the reheat indicator will light up. Make sure the bread does not burn.

DEFROST FUNCTION

Your toaster can defrost frozen bread.

- Place the bread into the toaster.
- Set the browning control to the required setting.
- Press the lever down
- Press the defrost button, the defrost indicator will light up. Make sure the bread does not burn.

CANCEL FUNCTION

- Press the CANCEL button if bread starts to smoke.
- The CANCEL button can be pressed at any time during the toasting process.

CARE AND MAINTENANCE

Cleaning

1. Switch OFF and unplug the toaster. Allow the toaster to cool completely before cleaning.
2. Only clean the surfaces of the toaster with a soft damp cloth.
3. Do not allow crumbs to build up inside the toaster.
4. Crumbs can be removed by pulling out the crumb tray, located at the end of the

toaster, and clearing any build up with a damp cloth.

5. Internal parts can be easily damaged. Do not touch the internal parts of the toaster with any utensils.

TECHNICAL DATA

Article No. 10068175
220-240V~, 50/60Hz
800 Watt

PRODUCER

Epiq ApS
Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Denmark
www.epiq.dk

We cannot be held responsible for any printing errors.