

salling



INSTRUCTION MANUAL ELECTRIC TOOTHBRUSH

10958287

INTRODUKTION

Mange tak fordi du har valgt et produkt fra Salling. Dermed har du erhvervet et kvalitetsprodukt som opfylder alle gældende krav til præstation og sikkerhedsstandarder i EU. For at sikre en korrekt behandling og en lang levetid anbefaler vi, at du overholder nedenstående anvisninger.

Du bedes læse vejledningen og især sikkerheds anvisningerne omhyggeligt igennem, inden du tager produktet i brug. Opbevar denne betjeningsvejledning, og overlad altid kun produktet til andre sammen med betjeningsvejledningen.

GENERELLE SIKKERHEDSFORANSTALTNINGER

- Forkert brug af produktet kan medføre personskade og beskadige produktet.
- Anvend kun produktet til det, det er beregnet til. Producenten er ikke ansvarlig for skader, der opstår som følge af forkert brug eller håndtering.
- Anbring altid produktet på et tørt, plant og stabilt underlag på god afstand af bordkant eller lignende.
- Produktet er udelukkende beregnet til husholdningsbrug. Produktet må ikke anvendes til erhvervsbrug.
- Produktet må kun sluttes til 220-240V~, 50/60Hz.
- Produktets motordel/elektronik, ledning og stikket må ikke nedsænkes i vand, og der må ikke trænge vand i motordel/elektronik.
- Rør aldrig ved produktet, ledningen eller stikkontakten med våde eller fugtige hænder.
- Udsæt ikke produktet for direkte sollys, høje temperaturer, fugt, støv eller ætsende stoffer.
- Forlad aldrig produktet, når det er tændt.
- Når produktet er i brug, bør det holdes under konstant opsyn.
- Når produktet bruges skal børn der opholder sig i nærheden af

den altid holdes under opsyn.

- Børn må ikke lege med produktet.
- Produktet kan indeholde skarpe dele og bør derfor opbevares utilgængeligt for børn.
- Brug kun tilbehør, der følger med produktet eller er anbefalet af producenten.
- Produktet må ikke bruges af personer med nedsat følsomhed, fysiske eller mentale handicap, eller personer, som ikke er i stand til at betjene produktet, medmindre de overvåges eller instrueres i brugen af en person, som er ansvarlig for deres sikkerhed.

LEDNING OG STIK

- Lad ikke ledningen hænge ud over bordkanten.
- Hold ledningen og produktet væk fra varmekilder, varme genstande og åben ild.
- Tag stikket ud af stikkontakten før rengøring, og hvis produktet ikke er i brug. Undlad at trække i ledningen, når du tager stikket ud af stikkontakten, men tag fat om selve stikket.
- Sørg for, at ledningen er rullet helt ud.
- Kontrollér jævnligt, om ledningen eller stikket er beskadiget, og brug ikke produktet, hvis dette er tilfældet, eller hvis det har været tabt på gulvet, tabt i vand eller er blevet beskadiget på en anden måde.
- Hvis produktet, ledningen eller stikket er beskadiget, skal produktet efterses og om nødvendigt repareres af en autoriseret reparatør. Forsøg aldrig at reparere produktet selv. Kontakt købsstedet, hvis der er tale om en reparation, der falder ind under reklamationsretten. Hvis der foretages uautoriserede indgreb i produktet, bortfalder reklamationsretten.

REKLAMATIONSRETEN GÆLDER IKKE:


- Hvis ovennævnte ikke iagttages.
- Hvis der har været foretaget uautoriserede indgreb i produktet.
- Hvis produktet har været misligholdt, udsat for en voldsom behandling eller lidt anden form for overlast.

BORTSKAFFELSE AF PRODUKTET

Brugte produkter må ikke smides i husholdningsaffaldet. Iht. lovforskrifterne skal det udtjente produkt bortskaffes på ordentlig vis. Derved genanvendes de brugbare materialer, og miljøet skånes. Nærmere informationer fås hos den ansvarlige kommunale myndighed eller det lokale bortskaffelsesfirma. Produktet er forsynet med følgende logo:



OVERBLIK

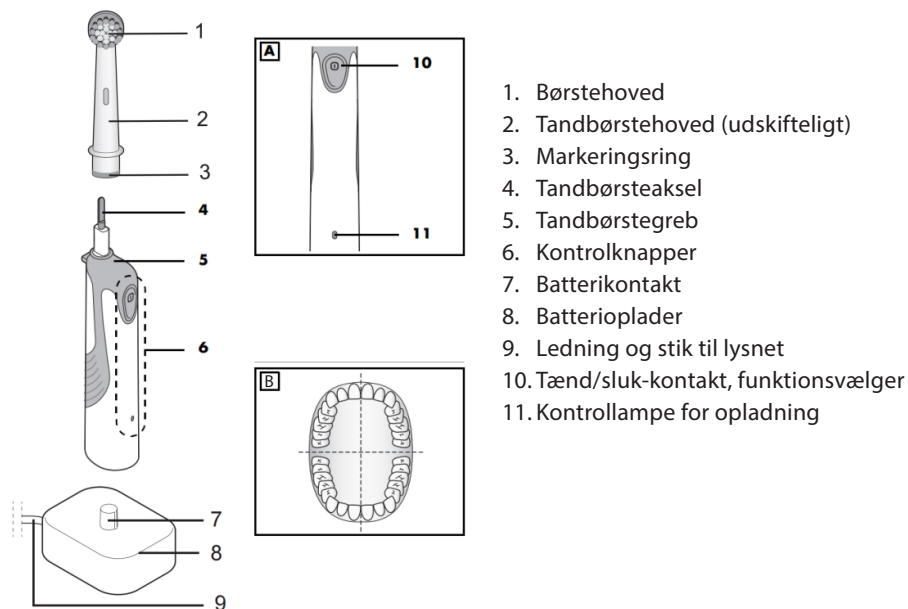

INDHOLDET I PAKKEN:

- 1 tandbørste
- 2 tandbørstehoveder
- 1 batterioplader
- 1 brugervejledning

Fjern al emballagen.

Kontrollér enheden for evt. transportskader.

OPSÆTNING AF BATTERIOPLADEREN

 FARE! Risiko for elektrisk stød pga. fugt!

- Batteriopladeren er forbundet til lysnettet og må ikke anvendes i brusekabine, badekar eller over en fyldt håndvask.
- Placér aldrig batteriopladeren på et sted, hvor den kan falde i vandet.

OPLADNING AF BATTERIET

BEMÆRKNINGER:

- Oplad batteriet fuldt ud inden første ibrugtagning.
- Det tager ca. 16 timer at oplade batteriet helt.
- Placér tandbørsten over ladekontakten på batteriopladeren efter brugen for at sikre, at tandbørsten altid er fuldt opladet. Regelmæssig opladning skader ikke batteriet.

1. Slut batteriopladerens stik til en passende stikkontakt. Der skal være let adgang til stikkontakten, når opladeren er sluttet til.
2. Placér den slukkede tandbørste over ladekontakten på batteriopladeren. Kontrollampen for opladning lyser rødt under opladningen. Når opladningen er gennemført, skifter kontrollampen til grønt.

Batterisignaler: Kontrollampe for opladning

TANDBØRSTEN PLACERET PÅ BATTERIOPLADEREN:

- Kontrollampen for opladning lyser grønt: Batteriet er fuldt opladet.
- Kontrollampen for opladning lyser rødt: Batteriet oplades.

TANDBØRSTEN ER TÆNDT:

- Tandbørsten slukker automatisk, og kontrollampen for opladning blinker rødt som tegn på, at batterikapaciteten er lav. Oplad batteriet.

TANDBØRSTEHOVERER

Med denne enhed følger 2 tandbørstehoveder.

- Tag et tandbørstehoved, og skub det ned over akslen på tandbørsten.
- Tag tandbørstehovedet af ved forsigtigt at trække det opad.

Bemærk: Vi anbefaler, at tandbørstehovedet udskiftes hver 3. måned samt efter en infektion.

Betjening

FORSIGTIG:

- Der kan opstå mindre blødninger i tandkødet i de første dage, den elektriske tandbørste anvendes. Hvis blødningen fortsætter i flere dage, bør du kontakte en tandlæge.
- Hvis du er blevet opereret i munden indenfor de seneste to måneder, bør du kontakte en tandlæge, inden du tager tandbørsten i brug.
- Tryk kun let under børstningen, så du ikke beskadiger tandkødet. Dette forlænger også børsternes levetid.

TILSTAND

Tandbørsten har 2 forskellige funktioner:

- Normal tilstand:
Når du tænder tandbørsten på tænd/sluk-knappen, starter den op i normal tilstand, som er tandbørstning med pulserende bevægelser.
- Skånsom tilstand:
Hvis du trykker på tænd/sluk-knappen igen, skifter tandbørsten til skånsom tilstand, der giver en blidere tandbørstning, der er ideel til børstning af tænder men følsomt tandkød.

BEMÆRK:

Hvis det er første gang, du bruger en elektrisk tandbørste, og hvis du har forholdsvis

følsomt tandkød, anbefales det, at du bruger den skånsomme funktion de første 1-2 uger og dernæst skifter til normal tilstand.


TANDBØRSTNING

1. Tag tandbørsten af batteriopladeren.
2. Fugt børsterne, påfør tandpasta, og tænd først tandbørsten, når tandbørstehovedet allerede befinder sig i din mund.
3. Tryk én gang på tænd/sluk-knappen for at aktivere normal tilstand.
4. Tryk på tænd/sluk-knappen igen for at skifte til skånsom tilstand.
5. Før langsomt tandbørstehovedet fra tand til tand, idet du trykker blidt. Rengør omhyggeligt tandens overflader, herunder indersider og kanter.

Figur C: Den anbefalede børstetid er mindst 2 minutter opdelt i intervaller à 30 sekunder for hver del af munden (højre undermund, venstre undermund, højre overmund, venstre overmund). Tandbørsten afgiver signal med to korte afbrydelser for hvert interval. Efter 2 minutter signalerer en række korte afbrydelser, at den anbefalede børstetid er forløbet.

6. Tryk på tænd/sluk-knappen for at slukke tandbørsten. Tag først tandbørstehovedet ud af munden, når du har slukket tandbørsten.

RENGØRING / HYGIEJNEKRAV

 FARE! Fare for elektrisk stød!

- Tag stikket ud af stikkontakten, inden du rengør batteriopladeren.
- Undlad at nedsænke tandbørsten eller batteriopladeren i vand! Batteriopladeren skal være helt tør, før du igen slutter den til lysnettet.
- For at opretholde tandbørstehovedets hygiejniske funktionalitet bør du skylle det grundigt efter hver brug og lade det tørre.
- Tag tandbørstehovedet af én gang om ugen, og rengør det i varmt vand.
- Skyl tandbørstens håndgreb, og tør det.
- Tør om nødvendigt batteriopladeren over med en fugtig klud, og tør den omhyggeligt.

OPBEVARING

Kobl enheden fra lysnettet, og opbevar den på et tørt sted.

TEKNISKE DATA

Artikelnr. 10958287

Lysnetspænding: 220-240 V,
50/60 Hz

Effekt: 1,4 W, standby: 0,4 W

Batteri: 1x 3,7 V Li-ion 600 mAh

PRODUCENT

Epiq ApS

Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Danmark

www.epiq.dk

Vi tager forbehold for trykfejl.

INTRODUCTION

Thank you for choosing a product from Salling. You have acquired a quality product which meets all applicable performance and safety standards in the EU. In order to ensure proper treatment and a long product life, we recommend that you comply with the instructions below.

Please read the manual and especially the safety instructions carefully before using the product. Keep this manual and provide it for referral along with the product when others are using it.

GENERAL SAFETY INSTRUCTIONS

- Improper use of the product can cause personal injury and damage.
- Only use the product for what it is intended. The manufacturer is not liable for damages arising from improper use or handling.
- Always place the product on a dry, flat and stable surface well away from table edge or similar.
- The product is intended for household use only. The product is not for professional use.
- The product may only be connected to 220-240V~, 50/60Hz.
- The product engine/electronics, cord or plug cannot be submerged in water, and no water may get in contact with the engine/electronics.
- Never touch the product, cord or plug with wet or damp hands.
- Do not expose the product to direct sunlight, high temperatures, humidity, dust or corrosive substances.
- Never leave the product when it is turned on.
- When the product is in use, it should be kept under constant supervision. Children should always be supervised when using the product to ensure that they do not play with the product. The product is not a toy.
- The product may have sharp parts and must, therefore, be kept

out of reach of children.

- Only use the accessories that come with the product or that are recommended by the manufacturer.
- The product must not be used by people with reduced sensitivity, physical or mental disability, or people who are not able to operate the product unless they are supervised or instructed by a person responsible for their safety.

CORD AND PLUG

- Do not let the cord hang over the edge.
- Keep the cord and the product away from heat sources, hot objects and open flames.
- Unplug the power cord before cleaning and if the product is not in use. Do not pull the cord when removing the plug from the socket, rather grasp the plug itself.
- Make sure that the cord is fully extended.
- Check regularly that the cord and the plug are not damaged and do not use the product if this is the case, or if it has been dropped on the floor, dropped in water or damaged in another way.
- If the product or plug is damaged, the product must be inspected and, if necessary, repaired by an authorised repairer. Never try to repair the product yourself. Please, contact the store to see if there is a repair that falls under warranty. Tampering of the product will void the warranty.

RULES OF COMPLAINTS THE WARRANTY DOES NOT APPLY:

- If the above is not observed.
- If there has been unauthorised intervention of the product.
- If the product has been mishandled, subjected to rough treatment or some other form of damage.


PRODUCT DISPOSAL

Used product should not be disposed as household waste. According to legislation, the product should be disposed of

properly so that the materials can be recycled in an environmentally friendly manner. Further information is available from the responsible local authority or local disposal company. The product is equipped with the following logo:



OVERVIEW

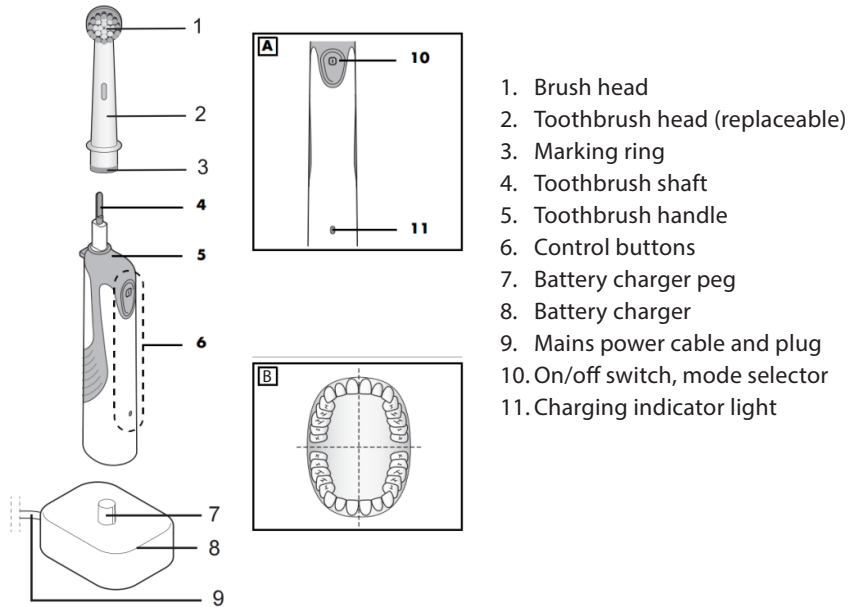

ITEMS SUPPLIED:

- 1 toothbrush
- 2 toothbrush heads
- 1 battery charger
- 1 manual

Remove all packing materials.

Check that the device is undamaged.

SETTING UP THE BATTERY CHARGER

 DANGER! Risk of electric shock due to moisture!

- The battery charger is connected to mains voltage and must not be used in the shower, bath, or over washbasins filled with water.
- Never place the battery charger anywhere it could fall into water.

CHARGING THE BATTERY

NOTES:

- Fully charge the battery before using it for the first time.
- It takes approximately 16 hours to fully charge the battery.
- Place the toothbrush on the peg of the battery charger after use to ensure it always operates at full power. Regular charging will not damage the battery.

1. Plug the mains plug of the battery charger into a suitable wall socket. The wall socket should remain easily accessible after connection.
2. Place the switched-off toothbrush onto the peg of the battery charger. The charging indicator light will be red throughout the charging process. When the optimal charging state has been reached, the charging indicator light will turn green.

Battery Signals: Charging Indicator Light

TOOTHBRUSH ON THE BATTERY CHARGER:

- Charging indicator light is green: The battery is fully charged.
- Charging indicator light is red: The battery is currently charging.

TOOTHBRUSH SWITCHED ON:

- The toothbrush will automatically switch off, and the charging indicator light will flash red, indicating that the battery is low. Please charge the battery.

TOOTHBRUSH HEADS

The items supplied include 2 toothbrush heads.

- Take a toothbrush head and slide it onto the shaft of the toothbrush.
- To remove the head, carefully pull it upwards.

Note: We recommend replacing the toothbrush head every 3 months or after an infection.

Operation

CAUTION:

- Mild gum bleeding may occur during the first few days of using the electric toothbrush. If bleeding persists for several days, consult a dentist.
- If you have had dental surgery within the last two months, consult a dentist before using the toothbrush.
- Apply only light pressure when brushing to prevent gum damage and to extend the lifespan of the bristles.

MODES

The toothbrush offers 2 different modes:

- Normal Mode:
When switched on with the on/off button, the toothbrush operates in normal mode for high-pulsation teeth cleaning.
- Sensitive Mode:
By pressing the on/off button again, the toothbrush switches to Sensitive mode for gentle brushing, ideal for cleaning teeth with sensitive gums.

NOTE:

If you are new to using an electric toothbrush and have relatively sensitive gums, it's recommended to use Sensitive mode for the first 1 to 2 weeks, and then switch to Normal

mode later.


BRUSHING TEETH

1. Remove the toothbrush from the battery charger.
2. Moisten the bristles, apply toothpaste, and switch on the toothbrush only when the brush head is already in your mouth.
3. Press the on/off button once to start the toothbrush in Normal mode.
4. Press the on/off button again to switch the toothbrush to Sensitive mode.
5. Slowly guide the brush head from tooth to tooth, applying light pressure. Carefully clean all tooth surfaces, including the inner surfaces and edges.

Figure C: The recommended brushing time is at least 2 minutes, divided into 30-second intervals for each area of the mouth (bottom right, bottom left, top right, top left). The toothbrush will signal each interval with two brief interruptions. After 2 minutes, several short interruptions will signal that the recommended brushing time has been completed.

6. Press the on/off button to turn off the toothbrush. Remove the brush head from your mouth only after the toothbrush has been switched off.

CLEANING / HYGIENE REQUIREMENTS

 DANGER! Risk of Electric Shock!

- Before cleaning the battery charger, unplug it from the wall socket.
- Do not immerse the toothbrush or battery charger in water! The battery charger must be completely dry before reconnecting it to the socket.
- To maintain the hygienic functionality of the toothbrush heads, rinse them thoroughly after each use and allow them to dry.
- Remove the toothbrush head once a week and clean it in hot water.
- Rinse the toothbrush handle and wipe it dry.
- If necessary, wipe the battery charger with a damp cloth and dry it thoroughly.

STORAGE

Unplug the device from the mains and store it in a dry location.

TECHNICAL DATA

Article No. 10958287

Mains voltage: 220-240V~, 50/60 Hz

Power rating: 1.4 W,
standby: 0.4 W

Battery: 1x 3.7V Li-ion 600 mAh

PRODUCER

Epiq ApS

Krøyer Kielbergs Vej 3, 3. th

8660 Skanderborg, Denmark

www.epiq.dk

We cannot be held responsible for any printing errors.