

salling



INSTRUCTION MANUAL

BLENDER

89892651

INTRODUKTION

Mange tak fordi du har valgt et produkt fra Epiq. Dermed har du erhvervet et kvalitetsprodukt som opfylder alle gældende krav til præstation og sikkerhedsstandarder i EU. For at sikre en korrekt behandling og en lang levetid anbefaler vi, at du overholder nedenstående anvisninger.

Du bedes læse vejledningen og især sikkerheds anvisningerne omhyggeligt igennem, inden du tager apparatet i brug. Opbevar denne betjeningsvejledning, og overlad altid kun produktet til andre sammen med betjeningsvejledningen.

SIKKERHEDSFORANSTALTNINGER

GENERELT

- Forkert brug af produktet kan medføre personskade og beskadige apparatet.
- Anvend kun produktet til det, det er beregnet til. Producenten er ikke ansvarlig for skader, der opstår som følge af forkert brug eller håndtering.
- Anbring altid produktet på et tørt, plant og stabilt underlag på god afstand af bordkant eller lignende.
- Produktet er udelukkende beregnet til husholdningsbrug. Produktet må ikke anvendes til erhvervsbrug.
- Produktet må kun sluttes til 220-240V,50/60Hz.
- Produktets motordel/elektronik, ledning og stikket må ikke nedsænkes i vand, og der må ikke trænge vand i motordel / elektronik.
- Rør aldrig ved produktet, ledningen eller stikkontakten med våde eller fugtige hænder.
- Udsæt ikke produktet for direkte sollys, høje temperaturer, fugt, støv eller ætsende stoffer.
- Forlad aldrig produktet, når det er tændt.
- Når produktet er i brug, bør det holdes under konstant opsyn. Børn bør altid holdes under opsyn, når produktet anvendes, for at sikre at de ikke leger med produktet. Produktet er ikke legetøj.
- Produktet kan indeholde skarpe dele og bør derfor opbevares utilgængeligt for børn.
- Brug kun tilbehør, der følger med produktet eller er anbefalet af producenten.
- Produktet må ikke bruges af personer med nedsat følsomhed, fysiske eller mentale handicap, eller personer, som ikke er i stand til at betjene produktet, medmindre de overvåges eller instrueres i brugen af en person, som er ansvarlig for deres sikkerhed.

LEDNING OG STIK

- Lad ikke ledningen hænge ud over bordkanten.
- Hold ledningen og produktet væk fra varmekilder, varme genstande og åben ild.
- Tag stikket ud af stikkontakten før rengøring, og hvis apparatet ikke er i brug. Undlad at trække i ledningen, når du tager stikket ud af stikkontakten, men tag fat om selve stikket.
- Sørg for, at ledningen er rullet helt ud.
- Kontrollér jævnligt, om ledningen eller stikket er beskadiget, og brug ikke produktet, hvis dette er tilfældet, eller hvis det har været tabt på gulvet, tabt i vand eller er blevet beskadiget på en anden måde.
- Hvis produktet, ledningen eller stikket er beskadiget, skal produktet efterses og om nødvendigt repareres af en autoriseret reparatør. Forsøg aldrig at reparere produktet selv. Kontakt købsstedet, hvis der er tale om en reparation, der falder ind under reklamationsretten. Hvis der foretages uautoriserede indgreb i produktet, bortfalder reklamationsretten.

REKLAMATIONSBESTEMMELSER

Reklamationsretten gælder ikke:


- Hvis ovennævnte ikke iagttages
- Hvis der har været foretaget uautoriserede indgreb i apparatet
- Hvis apparatet har været misligholdt, udsat for en voldsom behandling eller lidt anden form for overlast
- Hvis fejl i apparatet er opstået på grund af fejl på ledningsnettet.

BORTSKAFFELSE AF PRODUKTET

Brugte produkter må ikke smides i husholdningsaffaldet. Iht. Lovforskrifterne skal det ud-tjente produkt bortskaffes på ordentlig vis. Derved genanvendes de brugbare materialer, og miljøet skånes. Nærmere informationer fås hos den ansvarlige kommunale myndighed eller det lokale bortskaffelsesfirma. Produktet er forsynet med følgende logo:



LÆR DIN BLENDER AT KENDE

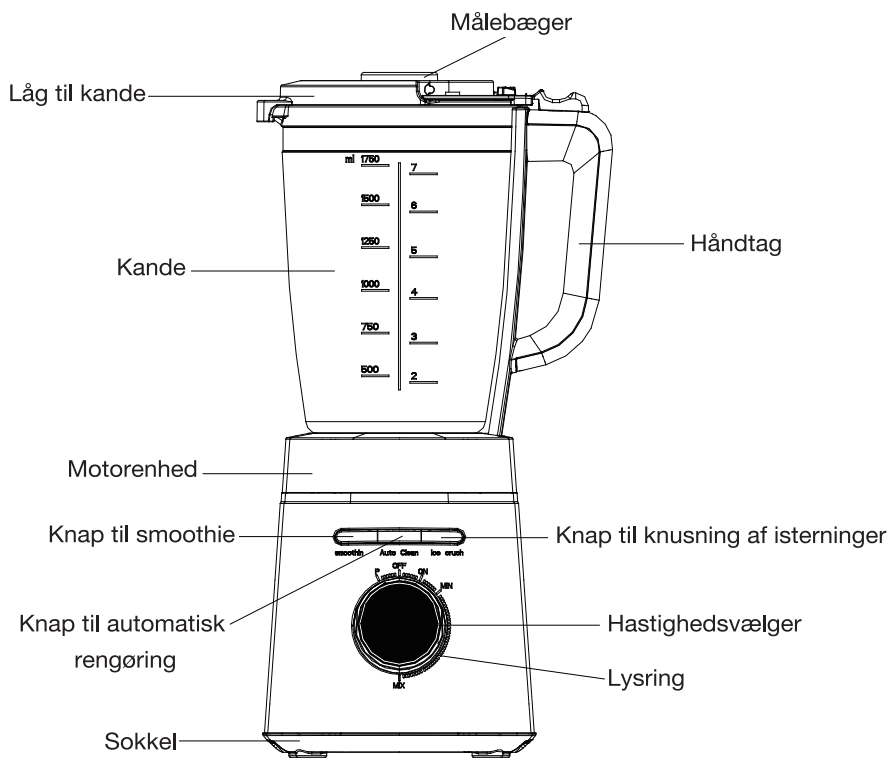

INDEN FØRSTE BRUG

1. Pak apparatet ud, og placér alle dele på en vandret overflade.
2. Vask kanden, låget til kanden og målebægeret i varmt sæbevand, skyl delene og tør dem.
Rengør aldrig motorenheden ved at nedsænke den i vand for at undgå risikoen for elektrisk stød.

FORSIGTIG: Kniven er meget skarp og skal håndteres forsigtigt.

BETJENING

GRØNTSAGER/FRUGTSAFT

1. Placér apparatet på en flad vandret overflade. Kontrollér, at apparatet ikke er tilsluttet strøm, og at hastighedsvælgeren "Hastighedsvælger" er i stillingen "OFF" før brugen.
2. Klargør grøntsagerne/frugterne. Vi har brugt en gulerod som eksempel. Skræl først guleroden, og skær den i terninger på 15 mm x 15 mm x 15 mm. Tag derefter målebægeret og låget til kanden af. Læg gulerodsterningerne i kanden. Du skal normalt tilføje en vis mængde rent vand, for at apparatet kan køre jævnt. Forholdet mellem gulerod og vand er 2:3. Blandingen må ikke overstige maksimumsmærket på kanden.
BEMÆRK: Brug aldrig varme væsker, og start ikke apparatet uden indhold.
3. Sæt låget til kanden og målekoppen på igen. Låget til kanden skal lukkes korrekt, ellers kan du ikke starte apparatet.
4. Placér kanden på kandesoklen, og kontrollér, at kanden sidder korrekt.
5. Slut apparatet til strømkilden.
6. Drej hastighedsvælgeren "Hastighedsvælger" til en stilling mellem "Min" og "Max". Apparatet starter. Lysringen lyser op. Du kan også dreje hastighedsvælgeren "Hastighedsvælger" til stillingen "P" for at få apparatet til at køre med høj hastighed.
BEMÆRK: Knapperne "Smoothie", "Auto clean" og "Ice crush" deaktiveres, når apparatet kører med en valgt hastighed eller på indstillingen "P".
7. Du kan fjerne målebægeret, når blenderen kører, for at lægge flere ingredienser i kanden gennem hullet i midten af låget. Sæt målebægeret på igen, når du har lagt ingredienserne i.
BEMÆRK: Fjern ikke kanden fra motorenheden, når blenderen kører. Hvis du skal fjerne kanden, skal du først slukke apparatet.
FORSIGTIG: Brug apparatet i højst 3 minutter ad gangen. Lad blenderen hvile i 30 minutter mellem to på hinanden følgende aktiveringer.
8. Drej hastighedsvælgeren "Hastighedsvælger" til stillingen "OFF", når blandingen i blenderen har den ønskede konsistens.
9. Træk stikket til apparatet ud af stikkontakten, og tag kanden af motorenheden. Tag derefter forsigtigt låget af kanden, og servér indholdet.
FORSIGTIG: Træk stikket til apparatet ud af stikkontakten, før du tager låget af.

SMOOTHIE

1. Placér apparatet på en flad vandret overflade. Kontrollér, at apparatet ikke er tilsluttet strøm, og at hastighedsvælgeren "Hastighedsvælger" er i stillingen "OFF" før brugen.
2. Læg ingredienserne i kanden. Kontrollér, at ingredienserne ikke overstiger maksimumsmærket på kanden.

BEMÆRK: Brug aldrig varme væsker, og start ikke apparatet uden indhold.

3. Sæt låget til kanden og målekoppen på igen. Låget til kanden skal lukkes korrekt, ellers kan du ikke starte apparatet.
4. Placér kanden på kandesoklen, og kontrollér, at kanden sidder korrekt.
5. Slut apparatet til strømkilden.
6. Drej hastighedsvælgeren "Hastighedsvælger" til stillingen "ON". Kontrollamperne på de tre knapper blinker. Tryk på knappen "Smoothie". Den tilhørende kontrollampe tændes, og blenderen starter.

BEMÆRK: Hastigheden kan ikke justeres med hastighedsvælgeren "Hastighedsvælger", når apparatet bruges i tilstanden "Smoothie".

BEMÆRK: Tryk på knappen "Smoothie" igen, eller drej hastighedsvælgeren "Hastighedsvælger" til stillingen "OFF", hvis du vil standse apparatet under blanding.

7. Du kan fjerne målebægeret, når blenderen kører, for at lægge flere ingredienser i kanden gennem hullet i midten af låget. Sæt målebægeret på igen, når du har lagt ingredienserne i.

BEMÆRK: Fjern ikke kanden fra motorenheden, når blenderen kører. Hvis du skal fjerne kanden, skal du først slukke apparatet.

FORSIGTIG: Brug apparatet i højst 3 minutter ad gangen. Lad blenderen hvile i 30 minutter mellem to på hinanden følgende aktiveringer.

8. Apparatet stopper automatisk, når smoothien er færdig, og kontrollamperne på de 3 knapper blinker.
9. Træk stikket til apparatet ud af stikkontakten, og tag kanden af motorenheden. Tag derefter forsigtigt låget af kanden, og servér indholdet.

FORSIGTIG: Træk stikket til apparatet ud af stikkontakten, før du tager låget af.

KNUSNING AF ISTERNINGER

1. Placér apparatet på en flad vandret overflade. Kontrollér, at apparatet ikke er tilsluttet strøm, og at hastighedsvælgeren "Hastighedsvælger" er i stillingen "OFF" før brugen.
2. Gør isterninger med en størrelse på 15 mm x 15 mm x 15 mm klar. Tag derefter målebægeret og låget til kanden af, og læg isterningerne i kanden. Du skal normalt tilføje en vis mængde rent vand, for at apparatet kan køre jævnt. Forholdet mellem isterninger og vand er 2:3. Blandingen må ikke overstige maksimumsmærket på kanden.

3. Sæt låget til kanden og målekoppen på igen. Låget til kanden skal lukkes korrekt, ellers kan du ikke starte apparatet.
4. Placér kanden på kandesoklen, og kontrollér, at kanden sidder korrekt.
5. Slut apparatet til strømkilden.
6. Drej hastighedsvælgeren “Hastighedsvælger” til stillingen “ON”. Kontrollamperne på de tre knapper blinker. Tryk på knappen “Ice crush”. Den tilhørende kontrollampe tændes, og blenderen starter.

BEMÆRK: Hastigheden kan ikke justeres med hastighedsvælgeren “Hastighedsvælger”, når apparatet bruges i tilstanden “Ice crush”.

BEMÆRK: Du kan trykke på knappen “Ice crush” igen eller dreje hastighedsvælgeren “Hastighedsvælger” til stillingen “OFF”, hvis du vil stoppe apparatet under knusningen af isterninger.

7. Du kan fjerne målebægeret, når blenderen kører, for at lægge flere ingredienser i kanden gennem hullet i midten af låget. Sæt målebægeret på igen, når du har lagt ingredienserne i.

BEMÆRK: Fjern ikke kanden fra motorenheden, når blenderen kører. Hvis du skal fjerne kanden, skal du først slukke apparatet.

FORSIGTIG: Brug apparatet i højst 3 minutter ad gangen. Lad blenderen hvile i 30 minutter mellem to på hinanden følgende aktiveringer.

8. Apparatet stopper automatisk, når isterningerne er knuste, og kontrollamperne på de 3 knapper blinker.
9. Træk stikket til apparatet ud af stikkontakten, og tag kanden af motorenheden. Tag derefter forsigtigt låget af kanden, og servér indholdet.

FORSIGTIG: Træk stikket til apparatet ud af stikkontakten, før du tager låget af.

RENGØRING OG VEDLIGEHOLDELSE

BEMÆRK: Kontrollér før rengøring, at apparatets stik er trukket ud af stikkontakten, og at hastighedsvælgeren “Hastighedsvælger” er i stillingen “OFF”.

1. Funktionen til automatisk rengøring kan hjælpe med at rengøre blenderen og knivenheden hurtigt, nemt og fuldstændig sikkert. Følg nedenstående 4 trin for at anvende funktionen til automatisk rengøring.
 - (1) Saml kanden igen efter brug, og fyld ca. 400-500 ml varmt vand i kanden.
 - (2) Drej hastighedsvælgeren “Hastighedsvælger” til stillingen “ON”. Kontrollamperne på de tre knapper blinker. Tryk på knappen “Auto clean”. Den tilhørende kontrollampe tændes, og blenderen starter.

- (3) Når funktionen "Auto-clean" er afsluttet, stopper apparatet automatisk, og kontrollamperne på de tre knapper blinker.
 - (4) Træk stikket til apparatet ud af stikkontakten, og tag kanden af motorenheden. Skyl kanden under rindende vand.
2. Tør motorenheden af udvendigt med en fugtig klud. Brug ikke slibende rengøringsmidler. Nedsænk aldrig motorenheden i vand eller andre væsker med henblik på rengøring.
 3. Alle dele med undtagelse af motorenheden kan lægges i opvaskemaskinen. Du kan også vaske delene med undtagelse af motorenheden i varmt sæbevand.
 4. Tør alle dele efter, og saml dem igen. Opbevar apparatet med låget til kanden taget af, for at luft kan cirkulere og forhindre lugt i kanden.
 5. Hvis du oplever problemer under brugen, må du aldrig selv adskille motorenheden. Der findes ingen dele i enheden, der kan serviceres af brugeren. Kontakt et godkendt servicecenter for eftersyn og reparation.

Advarsel:

- (1)Kniven er skarp og skal håndteres forsigtigt under rengøring.
- (2)Brug ikke slibende rengøringsmidler. Nedsænk aldrig motorenheden i vand med henblik på rengøring.

TEKNISKE DATA

Model: 89892651
220-240 V, 50/60 Hz
1.400 W

Importør

Epiq ApS
Krøyer Kielbergs Vej 3, 3th
8660 Skanderborg
Denmark

www.epiq.dk

Vi tager forbehold for trykfejl

INTRODUCTION

Thank you for choosing a product from Epiq. You have acquired a quality product which meets all applicable performance and safety standards in the EU. In order to ensure proper treatment and a long product life, we recommend that you comply with the instructions below.

Please read the manual and especially the safety instructions carefully before using the device. Keep this manual and provide it for referral along with the product when others are using it.

SAFETY PRECAUTIONS

GENERAL

- Improper use of the product can cause personal injury and damage.
- Only use the product for what it is intended. The manufacturer is not liable for damages arising from improper use or handling.
- Always place the product in a dry, flat and stable surface well away from table edge or similar.
- The product is intended for household use only. The product is not for professional use.
- The product may only be connected to 220-240V, 50/60Hz.
- The product engine/electronics, cord or plug cannot be submerged in water, and no water may get in contact with the engine/electronics.
- Never touch the product, cord or plug with wet or damp hands.
- Do not expose the product to direct sunlight, high temperatures, humidity, dust or corrosive substances.
- Never leave the product when it is turned on.
- When the product is in use, it should be kept under constant supervision. Children should always be supervised when using the product to ensure that they do not play with the product. The product is not a toy.
- The product may have sharp parts and must, therefore, be kept out of reach of children.
- Only use the accessories that come with the product or that are recommended by the manufacturer.
- The product must not be used by people with reduced sensitivity, physical or mental disability, or people who are not able to operate the product unless they are supervised or instructed by a person responsible for their safety.

CORD AND PLUG

- Do not let the cord hang over the edge.
- Keep the cord and the product away from heat sources, hot objects and open flames.
- Unplug the power cord before cleaning and if the appliance is not in use. Do not pull the cord when removing the plug from the socket, rather grasp the plug itself.
- Make sure that the cord is fully extended.
- Check regularly that the cord and the plug are not damaged and do not use the product if this is the case, or if it has been dropped on the floor, dropped in water or damaged in another way.
- If the product or plug is damaged, the product must be inspected and, if necessary, repaired by an authorised repairer. Never try to repair the product yourself. Please, contact the store to see if there is a repair that falls under warranty. Tampering of the product will void the warranty.

RULES OF COMPLAINTS

THE WARRANTY DOES NOT APPLY:


- If the above is not observed
- If there has been unauthorised intervention of the device
- If the appliance has been mishandled, subjected to rough treatment or some other form of damage
- If faults have arisen because of faults in the distribution system

PRODUCT DISPOSAL

Used product should not be disposed as household waste. According to legislation, the product should be disposed of properly so that the materials can be recycled in an environmentally friendly manner. Further information is available from the responsible local authority or local disposal company. The product is equipped with the following logo:



KNOW YOUR BLENDER

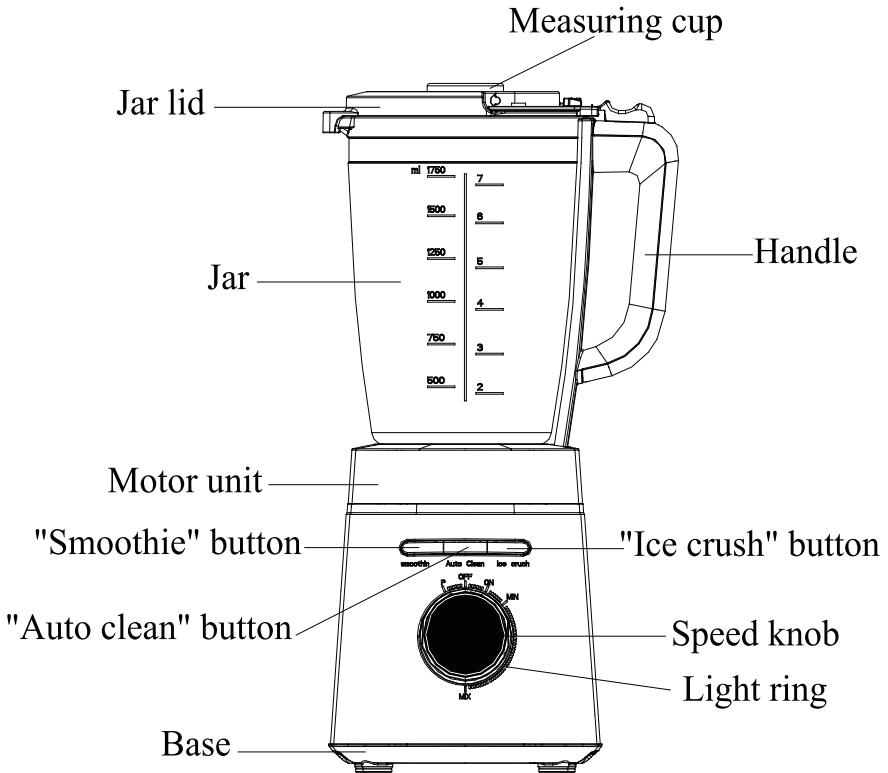

FOR THE INITIAL USE

1. Unpack the appliance and place all parts on a horizontal surface.
2. Immerse the jar, jar lid and measuring cup in warm soapy water and rinse them and dry. Never immerse the motor unit in water for cleaning to prevent the risk of electric shock.
CAUTION: The blade is very sharp, please handle carefully.

OPERATION

VEGETABLE/FRUIT JUICE

1. Place the appliance on a flat horizontal surface and make sure it is unplugged and the “Speed knob” is in the “OFF” position before operating.
2. Prepare the vegetable/fruit well, take a carrot for example. Firstly, peel the carrot and cut it into cubes with a size of 15mm*15mm*15mm, then remove the measuring cup and then the jar lid. Put the carrot cubes into the jar. Usually a certain amount of purified water must be added to facilitate the smooth running of the appliance. The proportion of carrot and water is 2:3. The amount of mixture should not exceed the maximum mark as indicated on the jar.
NOTE: Never use hot liquids or run the appliance empty.
3. Close the jar lid and put the measuring cup in place. The jar lid must be closed properly, or the appliance cannot be activated.
4. Place the jar onto the jar base, make sure that the jar is installed properly.
5. Connect the appliance to the power source.
6. Turn the “Speed knob” between the “Min” and “Max” speed setting and then the appliance starts to work. The light ring illuminates. Alternatively, you can turn the “Speed knob” to the “P” position to make the appliance work at a high speed.
NOTE: The buttons for “Smoothie”, “Auto clean” and “Ice crush” are deactivated when the appliance is running at a selected speed setting or the “P” setting.
7. During operation, you can remove the measuring cup and then add ingredients into the jar through the center opening on the jar lid, and then put back the measuring cup.
NOTE: You must not remove the jar from the motor unit during operation. If it is necessary to remove the jar, please turn off the appliance first and then remove the jar.
CAUTION: Do not operate the appliance for more than 3 minutes at a time. Let the blender rest for 30 minutes between two continuous cycles.
8. Turn the “Speed knob” to the “OFF” position once the mixture has been blended to your desired consistency.
9. Unplug the appliance and then remove the jar from the motor unit, then carefully remove the jar lid and pour and serve.
CAUTION: The appliance must be unplugged before removing the jar.

SMOOTHIE

1. Lay the appliance on a flat horizontal surface and make sure it is unplugged and the “Speed knob” is in the “OFF” position before operating.
2. Put the ingredients into the jar, make sure the amount of ingredients do not exceed the maximum mark indicated on the jar.
NOTE: Never use hot liquids or run the appliance empty.
3. Close the jar lid and put the measuring cup in place. The jar lid must be closed properly, or the appliance cannot be activated.
4. Place the jar onto the jar base, make sure that the jar is installed properly.
5. Connect the appliance to the power source.
6. Turn the “Speed knob” to the “ON” position. The indicator lights of the three buttons blinks. Press the “Smoothie” button. The corresponding indicator light will light up and then the appliance will start operating.

NOTE: The speed cannot be adjusted by the “Speed knob” when the appliance is operating in “Smoothie” mode.

NOTE: If you want to stop the appliance during the operating process you can press the “Smoothie” button again or turn the “Speed knob” to the “OFF” position.

7. During operation you can remove the measuring cup and then add ingredients into the jar through the center opening on the jar lid during operation, and then put back measuring cup.
NOTE: You must not remove the jar from the motor unit during operation. If it is necessary to remove the jar, please turn off the appliance first and then remove the jar.

CAUTION: Do not operate the appliance for more than 3 minutes at a time. Let the blender rest for 30 minutes between two continuous cycles.

8. The appliance will stop automatically when the smoothie is done, and the 3 button indicator lights will begin to blink.
9. Unplug the appliance and then remove the jar from the motor unit, then carefully remove the jar lid and pour and serve.

CAUTION: The appliance must be unplugged before removing the jar.

ICE CRUSH

1. Lay the appliance on a flat horizontal surface and make sure it is unplugged and the “Speed knob” is in the “OFF” position before operating.
2. Prepare some ice cubes with a size of 15mm*15mm*15mm, then remove the measuring cup and jar lid and put the ice cubes into the jar. Usually certain amount of purified water must be added to facilitate the smooth running of appliance. The proportion of ice and water is 2:3. The amount of mixture should not exceed the maximum mark as indicated on the jar.

3. Close the jar lid and put the measuring cup in place. The jar lid must be closed properly, or the appliance cannot be activated.
4. Place the jar onto the jar base, make sure that the jar is installed properly.
5. Connect the appliance to the power source.
6. Turn the “Speed knob” to the “ON” position. The indicator lights of the three buttons blinks. Press the “Ice crush” button. The corresponding indicator light will light up and then the appliance will start operating.
NOTE: The speed cannot be adjusted by the “Speed knob” when the appliance is operating in “Ice crush” mode.
NOTE: During the working process of crushing ice, if you want to make the appliance stop working, you can press “Ice crush” button again or turn the “Speed knob” to “OFF” position.
7. During operation you can remove the measuring cup and then add ingredients into the jar through the center opening on the jar lid during operation, and then put back measuring cup.
NOTE: You must not remove the jar from the motor unit during operation. If it is necessary to remove the jar, please turn off the appliance first and then remove the jar.
CAUTION: Do not operate the appliance for more than 3 minutes at a time. Let the blender rest for 30 minutes between two continuous cycles.
8. The appliance will stop automatically when crushing the ice is done, and the 3 button indicator lights will begin to blink.
9. Unplug the appliance and then remove the jar from the motor unit, then carefully remove the jar lid and pour and serve.
CAUTION: The appliance must be unplugged before removing the jar.

CLEANING AND MAINTENANCE

NOTE: Before cleaning, make sure the appliance is unplugged and the “Speed knob” is in the “OFF” position.

1. The auto-clean feature can help clean the blender and blade assembly easily and rapidly in complete safety. Follow the 4 steps below to perform the auto-clean function.
 - (1) After use, reassemble the jar and fill about 400-500ml warm water into it.
 - (2) Turn the “Speed knob” to the “ON” position. The indicator lights of the three buttons blinks. Press the “Auto cleaning” button. The corresponding indicator light will light up and then the appliance will start operating.

- (3) After the “Auto-clean” is finished, the appliance will stop automatically and the indicator lights of three buttons will begin to blink.
- (4) Unplug the appliance and then remove the jar from the motor unit. Rinse the jar under running water.
2. Wipe the outer surface of motor unit with a damp cloth, do not use abrasive cleansers. Never immerse the motor unit in water or other solution for cleaning.
3. All parts except the motor unit are dishwasher safe. You can also wash the parts, except the motor unit, in warm, soapy water.
4. Dry all parts and then reassemble them again. Store the appliance with the jar lid off open to allow air to circulate and prevent jar odors.
5. If any problem has been encountered during use, never disassemble the Motor Unit by yourself, there are no user serviceable parts inside. Contact only the authorized service facility for examination and repair.

Warning:

- (1)The blade is very sharp, handle carefully when cleaning.
- (2)Do not use abrasive cleaners. Never immerse the Motor Unit in water for cleaning.

TECHNICAL DATA

Model: 89892651
220-240V, 50/60Hz
1400 W

Importer

Epiq ApS
Krøyer Kielbergs Vej 3, 3th
8660 Skanderborg
Denmark

www.epiq.dk

We cannot be held responsible for any printing errors