

&me.



INSTRUCTION MANUAL HAIR CURLER

10958289

INTRODUKTION

Mange tak fordi du har valgt et produkt fra &me. Dermed har du erhvervet et kvalitetsprodukt som opfylder alle gældende krav til præstation og sikkerhedsstandarder i EU. For at sikre en korrekt behandling og en lang levetid anbefaler vi, at du overholder nedenstående anvisninger.

Du bedes læse vejledningen og især sikkerheds anvisningerne omhyggeligt igennem, inden du tager produktet i brug. Opbevar denne betjeningsvejledning, og overlad altid kun produktet til andre sammen med betjeningsvejledningen.

GENERELLE SIKKERHEDSFORANSTALTNINGER

- Forkert brug af produktet kan medføre personskade og beskadige produktet.
- Anvend kun produktet til det, det er beregnet til. Producenten er ikke ansvarlig for skader, der opstår som følge af forkert brug eller håndtering.
- Anbring altid produktet på et tørt, plant og stabilt underlag på god afstand af bordkant eller lignende.
- Produktet er udelukkende beregnet til husholdningsbrug. Produktet må ikke anvendes til erhvervsbrug.
- Produktet må kun sluttes til 110-240V~, 50/60Hz.
- Produktets motordel/elektronik, ledning og stikket må ikke nedsænkes i vand, og der må ikke trænge vand i motordel/elektronik.
- Rør aldrig ved produktet, ledningen eller stikkontakten med våde eller fugtige hænder.
- Udsæt ikke produktet for direkte sollys, høje temperaturer, fugt, støv eller ætsende stoffer.
- Forlad aldrig produktet, når det er tændt.
- Når produktet er i brug, bør det holdes under konstant opsyn.
- Når produktet bruges skal børn der opholder sig i nærheden af

den altid holdes under opsyn.

- Børn må ikke lege med produktet.
- Produktet kan indeholde skarpe dele og bør derfor opbevares utilgængeligt for børn.
- Brug kun tilbehør, der følger med produktet eller er anbefalet af producenten.
- Produktet må ikke bruges af personer med nedsat følsomhed, fysiske eller mentale handicap, eller personer, som ikke er i stand til at betjene produktet, medmindre de overvåges eller instrueres i brugen af en person, som er ansvarlig for deres sikkerhed.

LEDNING OG STIK

- Lad ikke ledningen hænge ud over bordkanten.
- Hold ledningen og produktet væk fra varmekilder, varme genstande og åben ild.
- Tag stikket ud af stikkontakten før rengøring, og hvis produktet ikke er i brug. Undlad at trække i ledningen, når du tager stikket ud af stikkontakten, men tag fat om selve stikket.
- Sørg for, at ledningen er rullet helt ud.
- Kontrollér jævnligt, om ledningen eller stikket er beskadiget, og brug ikke produktet, hvis dette er tilfældet, eller hvis det har været tabt på gulvet, tabt i vand eller er blevet beskadiget på en anden måde.
- Hvis produktet, ledningen eller stikket er beskadiget, skal produktet efterses og om nødvendigt repareres af en autoriseret reparatør. Forsøg aldrig at reparere produktet selv. Kontakt købsstedet, hvis der er tale om en reparation, der falder ind under reklamationsretten. Hvis der foretages uautoriserede indgreb i produktet, bortfalder reklamationsretten.

REKLAMATIONSRETEN GÆLDER IKKE:

- Hvis ovennævnte ikke iagttages.
- Hvis der har været foretaget uautoriserede indgreb i produktet.
- Hvis produktet har været misligholdt, udsat for en voldsom behandling eller lidt anden form for overlast.

BORTSKAFFELSE AF PRODUKTET

Brugte produkter må ikke smides i husholdningsaffaldet. Iht. lovforskrifterne skal det udtjente produkt bortskaffes på ordentlig vis. Derved genanvendes de brugbare materialer, og miljøet skånes. Nærmere informationer fås hos den ansvarlige kommunale myndighed eller det lokale bortskaffelsesfirma. Produktet er forsynet med følgende logo:



SIKKERHEDSANVISNINGER

Det er vigtigt, at du læser alle sikkerhedsanvisninger, før du bruger produktet. Hold udenfor børns rækkevidde.

ADVARSEL

- Lad aldrig dele af apparatet komme i kontakt med vand eller andre væsker for at forhindre elektrisk stød.
- Brug ikke apparatet i et badekar eller under en bruser.
- Placér ikke apparatet i nærheden af håndvaske, badekar, fugtige områder eller steder, hvor det kan falde ned i vand.
- Forsøg ALDRIG at samle et apparatet, der er faldet ned i vand, op.
- Afbryd først strømforsyningen ved hovedafbryderen, og træk derefter apparatet ud af stikkontakten.
- Brug IKKE et apparat, der har været nedsænket i vand, da dette kan medføre alvorlige personskader eller død.
- Rør ikke apparatet med våde hænder.

FORSIGTIG

- Fare for forbrændinger: Opvarmede dele bliver meget varme under brug og forbliver varme i nogen tid, efter at apparatet er slukket.
- Undgå at røre ved varme dele med de bare hænder.
- Hold varme plader væk fra tæpper, stoffer, plastik og overflader, der ikke er varmebestandige.
- Sørg for, at de varme plader ikke kommer i kontakt med strømkablet.
- Placér ikke apparatet i nærheden af aerosolkander, sprayer eller andre varmfølsomme materialer.
- Efterlad ikke apparatet uden opsyn i tændt tilstand.
- Træk strømkablet til apparatet ud af stikkontakten efter brug.

BRUGSVEJLEDNING

- Krøllejernet er kun tiltænkt brug på tørt hår. Sørg for, at dit hår er helt tørt, før du bruger jernet.
- Lad apparatet køle helt af, inden du lægger det væk.

EFTERSYN OG VEDLIGEHOLDELSE

- Efterse apparatet før hver brug.
- Kontrollér strømkablet, stikket og varmepladerne for eventuelle tegn på skade.
- Brug IKKE apparatet, hvis strømkablet, stikket eller pladerne er beskadigede.

BESKRIVELSE:




TILBEHØR:



SAMLING

1. Sæt staven i foden med et fast tryk, indtil den klikker på plads.

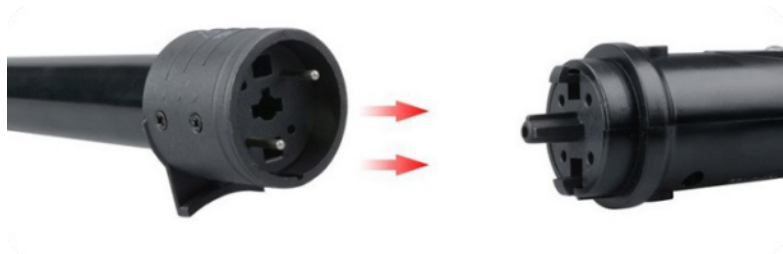

2. Tryk på udløserknapperne med et fast tryk for at fjerne staven.



Forsigtig: Håndtér den opvarmede stav forsigtigt under og efter brugen, da den kan give forbrændinger, hvis den håndteres uforsigtigt.



BRUG AF DIT KRØLLEJERN

1. Forberedelse

- Find en egnet stikkontakt. Kontrollér, at spændingen på krøllejernet svarer til spændingen i stikkontakten. Sæt ledningen til krøllejernet i stikkontakten, og tænd jernet.
- Lad krøllejernet varme op i ca. 60 sekunder. I mellemtiden skal du sørge for, at dit hår er fuldstændig tørt, da brugen af et krøllejern på vådt hår kan medføre skader.
- Red omhyggeligt dit hår, så det er glat og uden sammenfiltringer. Opdel dit hår i sektioner med en bredde på ca. 5 cm for at gøre det nemmere at håndtere.

2. Krølning

- Vælg en sektion af dit hår, og hold staven på krøllejernet vandret. Sno håret rundt om staven. Sørg for, at staven ikke rører ved din hovedbund. Sno håret stramt for at lave mere tydeligt definerede krøller, der holder i lang tid.
- Lad håret sidde på staven i 2-5 sekunder afhængigt af tykkelsen af håret. Lad håret sidde lidt længere, hvis det er tykt (op til 5 sekunder) men overskrid ikke denne tid for at forhindre varmeskader. 2-3 sekunder er tilstrækkeligt for tyndt hår.
- Fjern forsigtigt håret fra staven, når tiden er udløbet, og lad krøllen falde naturligt. Du

har nu en smukt formet krølle.

3. Gentagelse og finish

- Gentag processen for alle hårsektioner, indtil du har krøllet alle sektionerne. Prøv at opretholde en ensartet retning og stramhed for krøllerne for at få en mere sammenhængende og æstetisk behagelig frisure.
- Sluk krøllejernet, når du har krøllet alle sektionerne, og træk strømkablet ud af stikkontakten. Vent, indtil krøllejernet er kølet fuldstændig ned, før du lægger det væk til fremtidig brug.

RENGØRING

- Træk altid strømkablet til apparatet ud af stikkontakten, og lad apparatet afkøle fuldstændig før rengøring.
- Tør ydersiden af apparatet af med en blød, fugtig klud.
- Brug ikke rengøringsmidler, slibende rensemidler, opløsningsmidler eller kommercielle rensemidler.
- Sænk aldrig apparatet ned i vand.

OPBEVARING

- Træk altid stikket ud af stikkontakten, når apparatet ikke bruges.
- Lad apparatet køle fuldstændig ned, før du opbevarer det et køligt, tørt sted uden for børns rækkevidde.
- Sno ikke strømkablet rundt om apparatet, da det kan medføre, at kablet bliver flosset eller rives itu.
- Efterse apparatet, især strømkablet og stikket, regelmæssigt for tegn på slitage eller skader.

ADVARSEL

Forsøg ikke at reparere apparatet, hvis det har funktionsfejl.

Apparatet har ingen dele, der kan repareres.

TEKNISKE DATA

Artikelnr. 10958289
110-240V~, 50/60Hz
Effekt: 45 Watt

PRODUCENT

Epiq ApS
Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Danmark
www.epiq.dk

Vi tager forbehold for trykfejl.

INTRODUCTION

Thank you for choosing a product from &me. You have acquired a quality product which meets all applicable performance and safety standards in the EU. In order to ensure proper treatment and a long product life, we recommend that you comply with the instructions below.

Please read the manual and especially the safety instructions carefully before using the product. Keep this manual and provide it for referral along with the product when others are using it.

GENERAL SAFETY INSTRUCTIONS

- Improper use of the product can cause personal injury and damage.
- Only use the product for what it is intended. The manufacturer is not liable for damages arising from improper use or handling.
- Always place the product on a dry, flat and stable surface well away from table edge or similar.
- The product is intended for household use only. The product is not for professional use.
- The product may only be connected to 110-240V~, 50/60Hz.
- The product engine/electronics, cord or plug cannot be submerged in water, and no water may get in contact with the engine/electronics.
- Never touch the product, cord or plug with wet or damp hands.
- Do not expose the product to direct sunlight, high temperatures, humidity, dust or corrosive substances.
- Never leave the product when it is turned on.
- When the product is in use, it should be kept under constant supervision. Children should always be supervised when using the product to ensure that they do not play with the product. The product is not a toy.
- The product may have sharp parts and must, therefore, be kept

out of reach of children.

- Only use the accessories that come with the product or that are recommended by the manufacturer.
- The product must not be used by people with reduced sensitivity, physical or mental disability, or people who are not able to operate the product unless they are supervised or instructed by a person responsible for their safety.

CORD AND PLUG

- Do not let the cord hang over the edge.
- Keep the cord and the product away from heat sources, hot objects and open flames.
- Unplug the power cord before cleaning and if the product is not in use. Do not pull the cord when removing the plug from the socket, rather grasp the plug itself.
- Make sure that the cord is fully extended.
- Check regularly that the cord and the plug are not damaged and do not use the product if this is the case, or if it has been dropped on the floor, dropped in water or damaged in another way.
- If the product or plug is damaged, the product must be inspected and, if necessary, repaired by an authorised repairer. Never try to repair the product yourself. Please, contact the store to see if there is a repair that falls under warranty. Tampering of the product will void the warranty.

RULES OF COMPLAINTS THE WARRANTY DOES NOT APPLY:

- If the above is not observed.
- If there has been unauthorised intervention of the product.
- If the product has been mishandled, subjected to rough treatment or some other form of damage.

PRODUCT DISPOSAL

Used product should not be disposed as household waste. According to legislation, the product should be disposed of

properly so that the materials can be recycled in an environmentally friendly manner. Further information is available from the responsible local authority or local disposal company. The product is equipped with the following logo:



SAFETY INSTRUCTIONS

It is important to read all safety instructions before using this product.
Keep out of reach of children.

WARNING

- To prevent electric shock, never allow any part of the appliance to come into contact with water or other liquids.
- Do not use the appliance in a bathtub or shower.
- Do not place the appliance near sinks, baths, damp areas, or anywhere it might fall into water.
- NEVER attempt to retrieve an appliance that has fallen into water.
- First, turn off the power supply at the main breaker, then unplug the appliance.
- DO NOT attempt to reuse an appliance that has been submerged in water, as this can cause severe injury or death.
- Do not handle the appliance with wet hands.

CAUTION

- Risk of burns: Heating parts become very hot during use and remain hot for some time after the unit is turned off.
- Avoid touching hot parts with bare hands.
- Keep hot plates away from carpets, textiles, plastics, or any surfaces that are not heat-resistant.
- Ensure the hot plates do not come into contact with the power cord.
- Do not place the appliance near aerosol cans, sprays, or other heat-sensitive materials.
- Never leave the appliance unattended while it is turned on.
- After use, unplug the appliance from the power outlet.

USAGE GUIDELINES

- The appliance is intended for use only on dry hair. Ensure your hair is completely dry before using.
- Always allow the appliance to cool completely before storing.

INSPECTION AND MAINTENANCE

- Inspect the appliance before each use.
- Check the cord, plug, and heating plates for any signs of damage.
- DO NOT USE the appliance if the cord, plug, or plates are damaged.

DESCRIPTION:




ACCESSORIES:



HOW TO ASSEMBLE

1. Firmly insert the barrel into the base until it clicks into place.

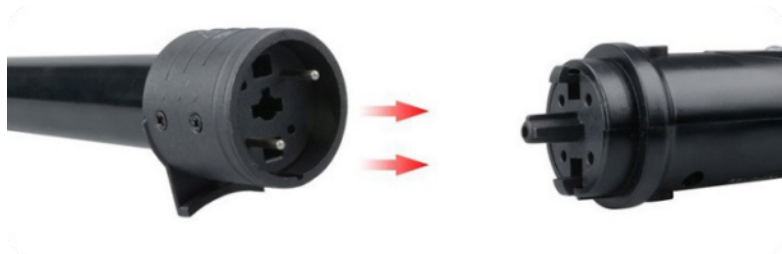

2. To detach the barrel, press the detachment buttons on the base firmly and remove the barrel.



Caution: Be cautious of the heated barrel during or after use, as it can cause burns if handled carelessly.



USING YOUR HAIR CURLER

1. Preparation

- Locate a suitable electrical outlet. Ensure the voltage of the hair curler matches the outlet's voltage. Plug in the hair curler and turn it on.
- Allow the hair curler to preheat for approximately 60 seconds. During this time, ensure your hair is completely dry, as using a curler on wet hair may cause damage.
- Carefully comb your hair to detangle and smooth it. Divide your hair into sections approximately 2 inches wide for easier handling.

2. Curling Operation

- Select a section of hair and hold the barrel of the hair curler horizontally. Wrap the section of hair around the barrel, ensuring it does not touch your scalp. Wrap the hair tightly to create more defined and long-lasting curls.
- Hold the hair on the barrel for 2–5 seconds, depending on the thickness of your hair. For thicker hair, hold slightly longer (up to 5 seconds), but avoid exceeding this time to

prevent heat damage. For thinner hair, 2–3 seconds is sufficient.

- Once the time is up, gently release the hair from the barrel and let the curl fall naturally. You should see a beautifully formed curl.
3. Repeating and Finishing
- Repeat the curling process for each section of hair until all sections are curled. Try to maintain consistency in the curl direction and tightness for a more cohesive and aesthetically pleasing hairstyle.
 - Once you have finished curling all sections, turn off the hair curler and unplug it. Wait for the curler to cool down completely before storing it properly for future use.

CLEANING

- Always unplug the appliance from the power source and allow it to cool completely before cleaning.
- Use a soft, damp cloth to wipe down the exterior of the appliance.
- Do not use detergents, abrasives, solvents, or commercial cleaners.
- NEVER immerse the appliance in water.

STORAGE

- Unplug the appliance when not in use.
- Allow the unit to cool completely before storing it in a cool, dry place out of children's reach.
- Do not wrap the cord around the appliance, as this may cause the cord to fray or tear.
- Regularly inspect the appliance, especially the cord and plug, for signs of wear or damage.

WARNING

If the appliance malfunctions, do not attempt to repair it.
The appliance has no repairable parts.

TECHNICAL DATA

Article No. 10958289
110-240V~, 50/60Hz
Power: 45 Watt

PRODUCER

Epiq ApS
Krøyer Kielbergsg. Vej 3, 3. th
8660 Skanderborg, Denmark
www.epiq.dk

We cannot be held responsible for any printing errors.