

KØKKENCHEF



INSTRUCTION MANUAL

CHURROS MAKER

10792894

INTRODUKTION

Mange tak fordi du har valgt et produkt fra Køkkenchef. Dermed har du erhvervet et kvalitetsprodukt som opfylder alle gældende krav til præstation og sikkerhedsstandarder i EU. For at sikre en korrekt behandling og en lang levetid anbefaler vi, at du overholder nedenstående anvisninger.

Du bedes læse vejledningen og især sikkerheds anvisningerne omhyggeligt igennem, inden du tager produktet i brug. Opbevar denne betjeningsvejledning, og overlad altid kun produktet til andre sammen med betjeningsvejledningen.

GENERELLE SIKKERHEDSFORANSTALTNINGER

- Forkert brug af produktet kan medføre personskade og beskadige produktet.
- Anvend kun produktet til det, det er beregnet til. Producenten er ikke ansvarlig for skader, der opstår som følge af forkert brug eller håndtering.
- Anbring altid produktet på et tørt, plant og stabilt underlag på god afstand af bordkant eller lignende.
- Produktet er udelukkende beregnet til husholdningsbrug. Produktet må ikke anvendes til erhvervsbrug.
- Produktet må kun sluttes til 220-240V~, 50/60Hz.
- Produktets motordel/elektronik, ledning og stikket må ikke nedsænkes i vand, og der må ikke trænge vand i motordel/elektronik.
- Rør aldrig ved produktet, ledningen eller stikkontakten med våde eller fugtige hænder.
- Udsæt ikke produktet for direkte sollys, høje temperaturer, fugt, støv eller ætsende stoffer.
- Forlad aldrig produktet, når det er tændt.
- Når produktet er i brug, bør det holdes under konstant opsyn.
- Når produktet bruges skal børn der opholder sig i nærheden af

den altid holdes under opsyn.

- Børn må ikke lege med produktet.
- Produktet kan indeholde skarpe dele og bør derfor opbevares utilgængeligt for børn.
- Brug kun tilbehør, der følger med produktet eller er anbefalet af producenten.
- Produktet må bruges af børn på 8 år eller derover og personer med reducerede fysiske, sensoriske eller mentale evner, eller som mangler erfaring og viden, hvis de er under opsyn eller har modtaget instruktion i sikker brug af produktet og forstår de involverede farer.
- Hold produktet og ledningen uden for rækkevidden af børn under 8 år.
- Rengøring og vedligeholdelse må ikke udføres af børn med mindre de er ældre end 8 år og under opsyn.

LEDNING OG STIK

- Lad ikke ledningen hænge ud over bordkanten.
- Hold ledningen og produktet væk fra varmekilder, varme genstande og åben ild.
- Tag stikket ud af stikkontakten før rengøring, og hvis produktet ikke er i brug. Undlad at trække i ledningen, når du tager stikket ud af stikkontakten, men tag fat om selve stikket.
- Sørg for, at ledningen er rullet helt ud.
- Kontrollér jævnligt, om ledningen eller stikket er beskadiget, og brug ikke produktet, hvis dette er tilfældet, eller hvis det har været tabt på gulvet, tabt i vand eller er blevet beskadiget på en anden måde.
- Hvis produktet, ledningen eller stikket er beskadiget, skal produktet efterses og om nødvendigt repareres af en autoriseret reparatør. Forsøg aldrig at reparere produktet selv. Kontakt købsstedet, hvis der er tale om en reparation, der falder ind under reklamationsretten. Hvis der foretages uautoriserede indgreb i produktet, bortfalder reklamationsretten.

REKLAMATIONSRETEN GÆLDER IKKE:


- Hvis ovennævnte ikke iagttages.
- Hvis der har været foretaget uautoriserede indgreb i produktet.
- Hvis produktet har været misligholdt, udsat for en voldsom behandling eller lidt anden form for overlast.

BORTSKAFFELSE AF PRODUKTET

Brugte produkter må ikke smides i husholdningsaffaldet. Iht. lovforskrifterne skal det udtjente produkt bortskaffes på ordentlig vis. Derved genanvendes de brugbare materialer, og miljøet skånes. Nærmere informationer fås hos den ansvarlige kommunale myndighed eller det lokale bortskaffelsesfirma. Produktet er forsynet med følgende logo:



KEND DIT CHURROS-JERN

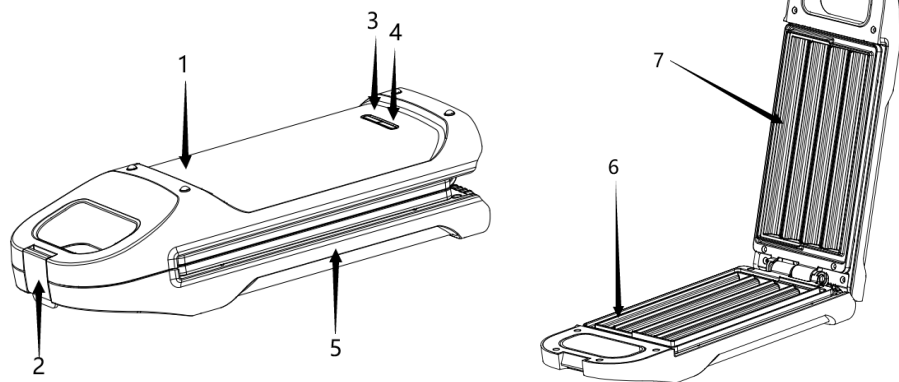

1. Topkabinet
2. Lås
3. Kontrollampe for strøm (rød)
4. Kontrollampe for klar (grøn)
5. Bundkabinet
6. Bundplade
7. Topplade

FØR FØRSTE BRUG

Fjern al emballage.

Rengør bagepladerne med en fugtig klud eller svamp.

Smør lidt madolie på bagepladerne.

Undgå, at vand kommer ind i apparatet.

BRUG AF DIT CHURROS-JERN

Apparatet kan udsende en let røg eller lugt, når det opvarmes første gang. Dette er normalt for mange apparater, der afgiver varme, og påvirker ikke apparatets sikkerhed.

- Sæt stikket i en stikkontakt. Kontrollampen for strøm tænder og viser, at apparatet er ved at forvarme.
- Lad apparatet forvarme, indtil kontrollampen for klar tænder. Varmepladerne har nu nået den korrekte temperatur til vaffelbagning.
- Du får det bedste resultat, når du sprayer lidt madolie på varmepladerne før brugen. Det gør det nemmere at tage churros af efter tilberedningen.
- Spred dejen hen over hullerne på pladen i henhold til opskriften. Brug en kande og en ske (medfølger ikke) eller en sprøjtepose af stof (medfølger ikke).

Bemærk: Brug ikke engangssprøjteposer af plastik, da de kan smelte, hvis de kommer i kontakt med de varme varmeplader.

- Luk forsigtigt låget, og kontrollér, at låsen aktiveres. Smæk ikke låget ned, da det kan få dejen til at løbe af varmepladerne.
- Bag churros i ca. 5-7 minutter, eller indtil de er gyldenbrune.
- Brug altid en spatel af plastik eller træ, når du fjerner churros (medfølger ikke). Brug aldrig skarpe genstande eller metalkøkkengrej, da de beskadiger slip-let-belægningen på varmepladerne.

RENGORING

- Før du gør apparatet rent, skal du tage stikket ud og lade apparatet køle af.
- Apparatet må aldrig sænkes ned i vand eller holdes under rindende vand.
- Tør varmepladerne rene for madrester med en blød klud. Opblød fastbrændte madrester.
- Brug ikke skuresvampe eller stærke rengøringsmidler, da de kan beskadige overfladen.
- Brug ikke køkkenredskaber af metal til at fjerne maden. De kan beskadige slip-let-belægningen.
- Tør kun Churros-Jern udvendigt med en fugtig klud.
- Brug ikke en skuresvamp eller ståluld til at rengøre Churros-Jern udvendigt. Det beskadiger overfladebehandlingen.
- Apparatet må ikke nedsænkes i vand eller andre væsker.
- Churros-Jern må ikke sættes i opvaskemaskinen.

OBEVARING

Træk altid ledningen på Churros-Jern ud af stikkontakten for opbevaring.

Kontrollér altid, at Churros-Jern er kold og tør for opbevaring.

Churros-Jern kan opbevares lodret og derved spare opbevaringsplads ikøkkenet.

TEKNISKE DATA

Artikelnr. 10792894
220-240V~, 50/60Hz
750 Watt

PRODUCENT

Epiq ApS
Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Danmark
www.epiq.dk

Vi tager forbehold for trykfejl.

INTRODUCTION

Thank you for choosing a product from Køkkenchef. You have acquired a quality product which meets all applicable performance and safety standards in the EU. In order to ensure proper treatment and a long product life, we recommend that you comply with the instructions below.

Please read the manual and especially the safety instructions carefully before using the product. Keep this manual and provide it for referral along with the product when others are using it.

GENERAL SAFETY INSTRUCTIONS

- Improper use of the product can cause personal injury and damage.
- Only use the product for what it is intended. The manufacturer is not liable for damages arising from improper use or handling.
- Always place the product on a dry, flat and stable surface well away from table edge or similar.
- The product is intended for household use only. The product is not for professional use.
- The product may only be connected to 220-240V~, 50/60Hz.
- The product engine/electronics, cord or plug cannot be submerged in water, and no water may get in contact with the engine/electronics.
- Never touch the product, cord or plug with wet or damp hands.
- Do not expose the product to direct sunlight, high temperatures, humidity, dust or corrosive substances.
- Never leave the product when it is turned on.
- When the product is in use, it should be kept under constant supervision. Children should always be supervised when using the product to ensure that they do not play with the product. The product is not a toy.
- The product may have sharp parts and must, therefore, be kept

out of reach of children.

- Only use the accessories that come with the product or that are recommended by the manufacturer.
- This product can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.
- Keep the product and its cord out of reach of children less than 8 years of age.
- Cleaning and user maintenance shall not be made by children without supervision.

CORD AND PLUG

- Do not let the cord hang over the edge.
- Keep the cord and the product away from heat sources, hot objects and open flames.
- Unplug the power cord before cleaning and if the product is not in use. Do not pull the cord when removing the plug from the socket, rather grasp the plug itself.
- Make sure that the cord is fully extended.
- Check regularly that the cord and the plug are not damaged and do not use the product if this is the case, or if it has been dropped on the floor, dropped in water or damaged in another way.
- If the product or plug is damaged, the product must be inspected and, if necessary, repaired by an authorised repairer. Never try to repair the product yourself. Please, contact the store to see if there is a repair that falls under warranty. Tampering of the product will void the warranty.

RULES OF COMPLAINTS THE WARRANTY DOES NOT APPLY:

- If the above is not observed.
- If there has been unauthorised intervention of the product.
- If the product has been mishandled, subjected to rough


treatment or some other form of damage.

PRODUCT DISPOSAL

Used product should not be disposed as household waste. According to legislation, the product should be disposed of properly so that the materials can be recycled in an environmentally friendly manner. Further information is available from the responsible local authority or local disposal company. The product is equipped with the following logo:



KNOW YOUR CHURROS MAKER

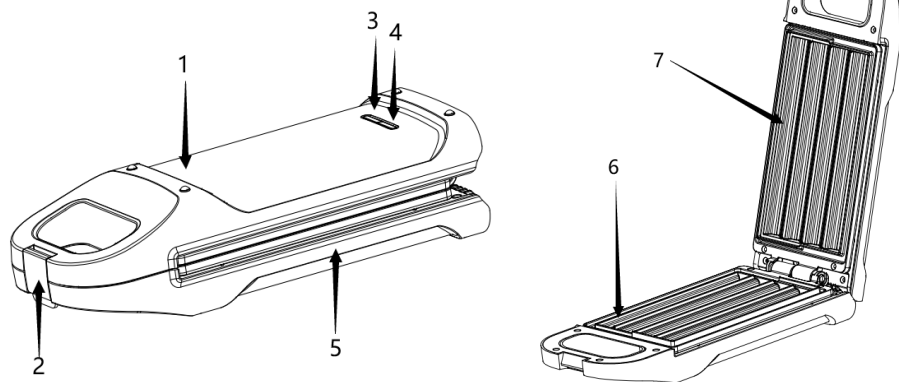

1. Upper Housing
2. Lock
3. Power Indicator (Red)
4. Ready Indicator (Green)
5. Bottom Housing
6. Bottom Plate
7. Upper Plate

BEFORE FIRST USE

Remove all packaging materials.

Clean the baking plates with a damp cloth or sponge.

Slightly grease the baking plates with a little cooking oil.

Take care to prevent water from entering the appliance.

USING YOUR CHURROS MAKER

When the appliance is heated for the first time, it may emit slight smoke or odor. This is normal with many heating appliances and does not affect the safety of your appliance.

- Insert the plug into the power outlet. The power indicator will turn on, indicating that the appliance has started preheating.
- Allow the appliance to preheat until the ready indicator turns on. This indicates that the cooking plates have reached the correct temperature for cooking.
- For best results, lightly spray the cooking plates with cooking oil spray before use. This will assist in the removal of the churros after cooking.
- Divide the mixture into the pan holes as per the recipes using a jug and spoon (not included) or a fabric piping bag (not included).

Note: Do not use disposable plastic piping bags as they may melt if they come into contact with the hot plates.

- Gently close the lid, ensuring the latch locks in place. Do not slam the lid down as this may cause the mixture to run off the cooking plates.
- Cook for approximately 5-7 minutes or until golden brown.
- To remove the churros, always use a plastic or wooden spatula (not included). Never use sharp objects or metal utensils, as they will damage the non-stick surface of the cooking plates.

CLEANING

- Before cleaning the appliance, unplug it and allow it to cool down.
- Never place the appliance in water or under running water.
- Wipe the cooking plates with a soft cloth to remove food residue.
- Do not use anything abrasive that can scratch or damage the non-stick coating.
- Do not use metal utensils to remove your foods, as they can damage the non-stick coating.
- Wipe the outside of the appliance with a damp cloth only.
- Do not clean the outside with any abrasive scouring pad or steel wool, as this will damage the finish.
- Do not immerse in water or any other liquid.
- Do not place in the dishwasher.

STORAGE

- Always unplug the Churros Maker before storage.
- Always make sure the Churros Maker is cold and dry before storing.
- To minimize storage space in your kitchen, the Churros Maker can be stored vertically.

TECHNICAL DATA

Article No. 10792894
220-240V~, 50/60Hz
750 Watt

PRODUCER

Epiq ApS
Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Denmark
www.epiq.dk

We cannot be held responsible for any printing errors.