




North Field®

BRUGERVEJL / PITCHING INSTRUCTIONS

1.

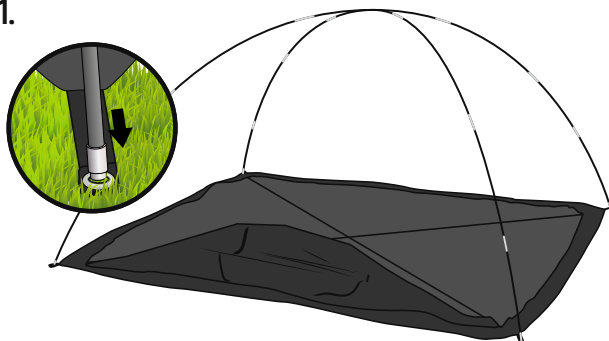

DK Bred teltet ud på et jævnt og rent underlag uden sten og grene. Stængerne rejses op og fastgøres i plaststykket ved hjørnerne. Enden af stangen sættes i det inderste hul i plaststykket.

EN Unfold your tent on a clean and even ground. It is important to select a site which has been cleared of any sharp objects such as rocks or sticks. Assemble the poles and put their tips into the eyelets on the corners of the inner tent. The poles will span into an arch.

3a.



3b.



DK Overteltet lækkes hen over inderteltet, bemærk at indgangen for indertelt og ydertelt skal passer hen over hinanden. Overteltet fastgøres med de indvendige bånd i hver hjørne til stængerne samt på oppen.

EN Unfold the flysheet over the inner tent. Please pay attention to the alignment of the entrances. Tie the sides of the outer tent loosely to the poles (a) and use the pegs to fix the flysheet to the ground (b).

2a.



2b.



DK De sorte klips sættes fast på stængerne. På toppen af teltet fastgøres inderteltet til stængerne med de to bånd. Inderteltet plækkes i hver hjørne.

EN Fix the clips on the inner tent to each pole arch (a). Where the two poles cross on top of the tent tie them together with the sewn in fabric ties. Then use the included pegs to fix the tent to the ground (b).

4b.



4a.



DK De to korte stålstænger sættes under overdækningen ved indgangen (a) to barduner monteres og strammes ud samt plækkes (b).

EN Erect the canopy with the steel poles (a). Unravel the guyropes and fix them to the ground using the provided pegs (b).

BERGEN 3

3-PERSON DOME TENT

VIGTIG INFORMATION - VENLIGST BEMÆRK

Når du vælger din campingplads, vil den ideelle plads være et område, som er så jævnt og frit for sten, grene og andre skarpe genstande som muligt.

Bred teltet ud og placer det med døren i den ønskede retning. Undgå at placere teltet direkte under træer og stil det med bagenden mod vindretningen, hvilket giver de bedste forudsætninger i blæsevej.

Få det bedste ud af campingturen, ved at prøveopstille teltet før du tager af sted for at kunne lære det at kende.

Under visse vejrforhold kan der opstå kondens på indersiden af dit telt. For at forhindre dette bedst muligt er det vigtigt, at vådt tøj etc. fjernes fra teltet. Sørg ligeledes for at få luftet ud i teltet. Kondens er ikke det samme som utæthed i teltet.

Man skal være klar over, at solens ultraviolette stråler kan beskadige oversejlet på teltet, hvis det er udsat for længere tids placering direkte i solen.

Snavs på teltet fjernes med en blød svamp og rent vand. Vask aldrig teltet i vaskemaskine og anvend aldrig kemisk rensning. Opbevar teltet tørt.

Indhold - Contents:

Yderstof / flysheet	1
Sovekabiner / cabin	1
Stænger / poles	4
Barduner / guy ropes	6
Pløkker / pegs	19
Paksæk / carrying bag	1

IMPORTANT INFORMATION - PLEASE NOTE

When selecting your campsite, the ideal place would be an area as even and clean of rocks, branches and other sharp objects as possible.

Spread out the tent and place it with the door in the desired direction, avoid placing the tent directly under trees, and position it with the end into the wind direction, for best results in windy conditions.

Get the most out of your camping trip by having a trial run, putting up and taking down your new tent in order to know it before you use it for the first time.

Under certain weather conditions, condensation can occur on the inside surfaces of your tent. To help prevent this you must remove wet clothes etc., increase ventilation. Condensation should not be confused with leakage.

Be aware that (UV) ultraviolet rays will damage your tent if you expose it to direct sunlight for longer periods of time.

Remove dirt from the tent with a soft sponge and pure water. Never wash the tent in a washing machine and never have it dry-cleaned. Store the tent in a dry place.