


# Hurtig-vejledning

## 1 Sæt batterierne i fjernbetjeningen


Fjernbetjeningen kan have en skrue, der sikrer batterirummets dæksel på fjernbetjeningen (eller dette kan være i en separat taske). Fjern dækslet, hvis skruen allerede er skruet på.. For at fjerne dækslet til batterirummet for at åbne batterirummet. Indsæt to 1,5V **AAA**-batterier. Sørg for at (+) og (-) stemmer overens (vær opmærksom på korrekt polaritet). Bland ikke gamle og nye batterier. Udskift kun med nogle af samme eller tilsvarende type. Sæt dækslet på igen. Sæt dækslet på igen med skruen, hvis der findes en.

## 2 Tilslut antennen til dit TV

### TV'ETS BAGSIDE

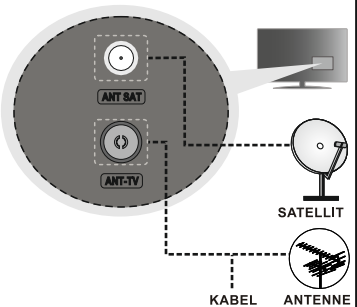

## 3 Tilslut TV'et til stikkontakten.

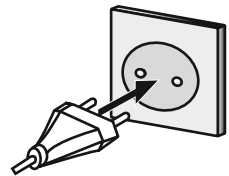

## 4 Tænd for TV'et

Efter tilslutning af strømkablet til stikkontakten tændes TV'et automatisk. Hvis TV'et er i standby-tilstand, lyser LED'en ikke.


For at tænde TV'et fra standbytilstand skal man enten:

1. Trykke på **Standby**-knappen på fjernbetjeningen.
2. Trykke på midten af kontrolkontakten på TV'et.

①



②

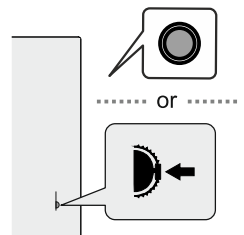


## 5 Vejledning til start-op sætning

Når den tændes første gang, vil meddelelsen "Velkommen" blive vist sammen med sammen med menuen over sprogvælger på skærmen. Vælg det ønskede sprog, og tryk på **OK** for at fortsætte. Følg instruktionerne på skærmen for at fuldføre startopsætningen. Brug piletasterne og **OK**-knappen på fjernbetjeningen for at vælge, indstille, konfigurere og fortsætte.

**Bemærk:** For detaljerede oplysninger og instruktioner i den indledende opsætningsproces henvises til instruktionsbogen for dette TV.

## 6 Skift inputkilde

Hvis du vil tilslutte en enhed til TV'et, skal du sørge for, at både TV'et og enheden er slukket, før tilslutningen oprettes. Brug det korrekte kabel til at forbinde de to enheder. □ Når de eksterne systemer er tilsluttet TV'et, kan du skifte mellem de forskellige signalindgange. Tryk på **Kilde**-knappen på fjernbetjeningen i rækkefølge, eller brug piletasterne, og tryk derefter på **OK**-knappen for at skifte til forskellige kilder i Live TV-tilstand. Foruden dette kan du skifte til den ønskede input-kilde ved at vælge den ønskede mulighed fra **Indgangsmenuen** på startskærmen eller **TV-valg > Kilde**-menu i Live TV-tilstand.

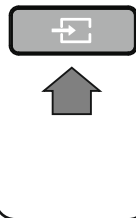

## 7 Tilslut dit TV til internettet

Du kan få adgang til internettet på dit TV ved at forbinde det til et bredbåndssystem. Det er nødvendigt at konfigurere netværksindstillingerne for at nyde en lang række streaming-indhold og internet-applikationer. Disse indstillinger kan konfigureres fra menuen **Netværk og Internet** placeret under menuen **TV-valg > Indstillinger** i Live TV-tilstand eller under **Indstillinger** på startskærmen. Du kan også få vist Forbundet/Ikke-forbundet-ikonet på startskærmen og trykke på **OK** for at få adgang til denne menu.


### Kablet forbindelse

Tilslut dit TV til dit modem eller din router via et ethernet-kabel. Der er en LAN-port på bagsiden af dit TV. □ Status for forbindelsen under **Ethernet-afsnittet** i menuen **Netværk og Internet** vil skifte fra **Ikke forbundet** til **forbundet**.


### Trådløs forbindelse

Et trådløst LAN-modem/router kræves for at forbinde TV'et til Internettet via trådløst netværk. Fremhæv **Wi-Fi** i **Netværk** og **Internet**-menuen og tryk på **OK** for at aktivere Trådløs forbindelse. Der kommer en liste frem med trådløse netværk. Marker et netværk på listen, og tryk på **OK** for at forbinde. Du bliver muligvis bedt om at indtaste en adgangskode for at oprette forbindelse til det valgte netværk, hvis netværket er adgangskodebeskyttet.

**Kablet forbindelse**

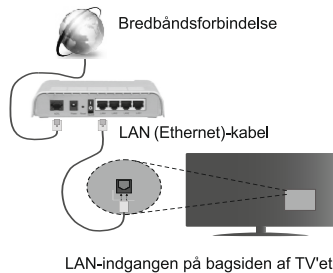

**Trådløs forbindelse**

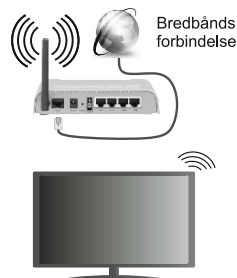


# Quick Start Guide

## 1 Insert the batteries into the Remote Control


The remote may have a screw that secures the battery compartment cover onto the remote control (or this may be in a separate bag). Remove the screw, if the cover is screwed on previously. Then remove the battery compartment cover to reveal the battery compartment. Insert two 1.5V - size **AAA** batteries. Make sure the (+) and (-) signs match (observe correct polarity). Do not mix old and new batteries. Replace only with same or equivalent type. Place the cover back on. Secure the cover again with the screw, if any.

## 2 Connect the antenna to your TV

### REAR SIDE OF THE TV

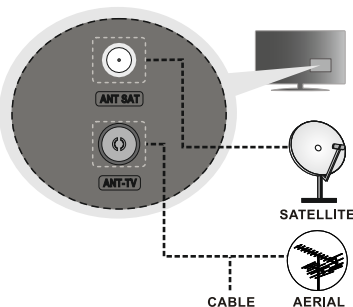

## 3 Connect the TV to the mains socket

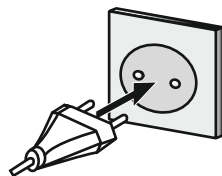

## 4 Switch the TV on

After plugging the power cord to the mains socket outlet the TV will switch on automatically. If the TV is in standby mode the standby LED lights up.


To switch on the TV from standby mode either;

1. Press the **Standby** button on the remote control.
2. Press the centre of the control switch on the TV in.

①



②

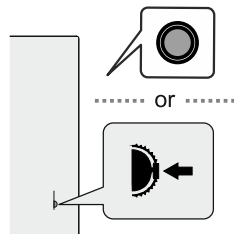

## 5 Initial Setup Wizard


When turned on for the first time, "Welcome" message will be displayed along with the language selection options listed on the screen. Select the desired language from the list and press **OK** to continue. Follow the on-screen instructions to complete the initial setup process. Use the directional buttons and the **OK** button on the remote to select, set, confirm and proceed.

**Note:** For detailed information and instructions on the initial setup process refer to the Instruction Book of this TV.

## 6 Change the Input Source

If you want to connect a device to the TV, make sure that both the TV and the device are turned off before making any connection. Use a suitable cable to connect two units together.

Once you have connected external systems to your TV, you can switch to different input sources. Press the **Source** button on your remote control consecutively or use the directional buttons and then press the **OK** button to switch to different sources when in Live TV mode. Besides this, you can switch to the desired input source by selecting the desired option from the **Inputs** menu on the Home Screen or **TV options > Source** menu in Live TV mode.



## 7 Connect your TV to the Internet

You can access the Internet via your TV, by connecting it to a broadband system. It is necessary to configure the network settings in order to enjoy a variety of streaming content and internet applications. These settings can be configured from the **Network and Internet** menu located under the **TV Options > Settings** menu in Live TV mode or under the **Settings** menu on the Home Screen. You can also highlight the Connected/Disconnected icon on the Home screen and press **OK** to access this menu.


### Wired Connection

Connect your TV to your modem/router via an Ethernet cable. There is a LAN port on the rear side of your TV. The status of the connection under the **Ethernet** section in the **Network and Internet** menu will be changed from **Not connected** to **Connected**.

### Wireless Connection

A wireless LAN modem/router is required to connect the TV to the Internet via wireless LAN. Highlight **Wi-Fi** option in the **Network and Internet** menu and press **OK** to enable wireless connection. Available networks will be listed. Highlight your network from the list and press **OK** to connect. You may be asked to enter a password to connect to the selected network, in case the network is password protected.

**Wired Connection**

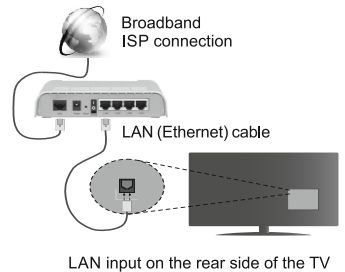

**Wireless Connection**

