GB - RC Gecko



CONTROLLER




Band Selection Button


(players can choose the band A, B or C to control the gecko if playing with other people together. Please choose the band first and then turn on the gecko. Pair one by one to make sure the players are in different bands.)

BATTERY INSTALLATION

Requires 3 x AAA (1.5V) batteries (not included).

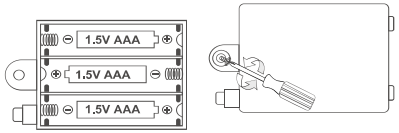

HOW TO CHARGE

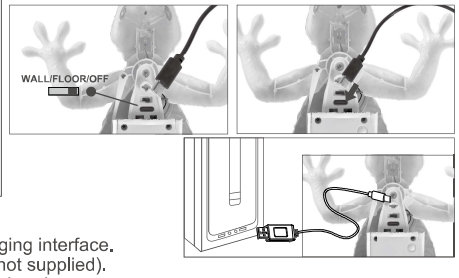

1. Switch WALL/FLOOR/OFF on the "OFF" position.
2. Connect USB charging cable plug with gecko charging interface.
3. Plug the charging cable into a 5V D.C 2A charger(not supplied). The USB indicator will light up when it has started charging.
4. Once the indicator light extinguishes, the gecko is fully charged. Unplug the charging cable from the USB port or charger and disconnect from gecko.


Attention:

1. Do not charge the battery immediately after each play. Let the battery cool down for a while.
2. The battery becomes running low on power when the eyes on gecko begin to blink, gecko should be removed from the wall immediately to avoid fall off the wall.

Charging time: approx. 45 minutes
Playing time: 5-10 minutes
Control distance: within 7 metres


CLIMBING ON WALLS

Switch **WALL/FLOOR/OFF** on the "**WALL**" position.

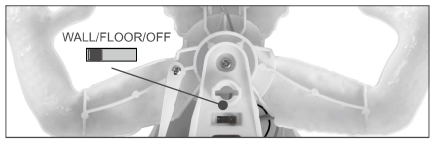


Attention:

1. Fold the air skirts outward to ensure a proper gecko air suction to the wall.
2. Listen for the fan to turn on before place the gecko on the wall.
3. Do not crawl off the corner or off the edge of the wall.
4. Only drive on smooth, clean, dry surface. Make sure surfaces are clean of obstacles, including handing pictures, light switches etc.
5. Do not drive on uneven, porous or broken surfaces or textured wallpaper.
6. Do not remove air skirt, any cracks, bumps or openings will cause gecko to loose suction and fall off the wall, dirt or debris can get inside the fan and cause damage.

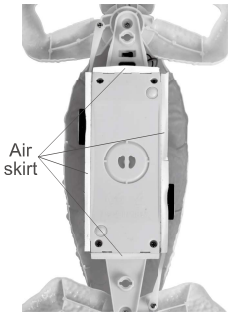


CRAWLING ON THE GROUND


Switch **WALL/FLOOR/OFF** on the "**FLOOR**' position.

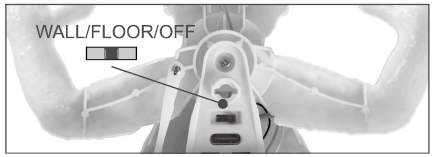

The left control button controls the gecko forward and backward

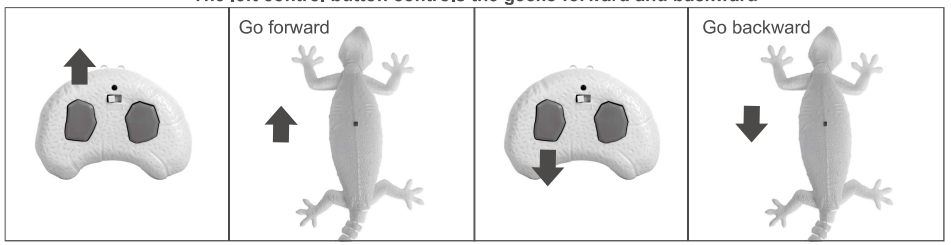


Press the left control button and the right control button left or right to control the gecko direction

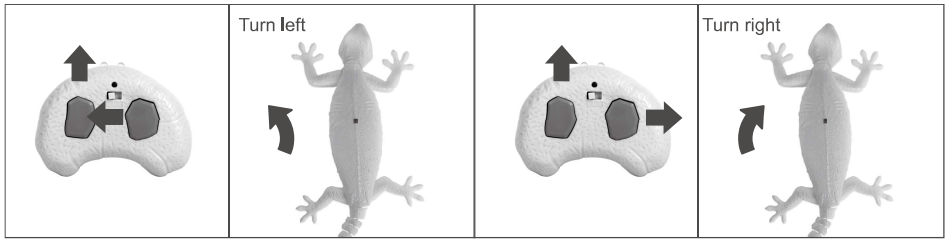

TROUBLESHOOTING

PROBLEM	SOLUTION
Gecko does not start.	1. Power switch is off. Turn on. 2. Controller battery is installed with incorrect polarity. Check the (+) and (-) markings to make sure the battery is properly aligned. 3. Batteries are drained. Charge batteries.
Gecko does not climb.	1. Over current protection is engaged. Turn gecko off for 30 seconds then restart.
Gecko does not drive straight.	1. Make sure surface is clean of dirt/dust. 2. Make sure surface is neither too rough nor too smooth. 3. Make sure surface is flat.
Gecko slips climbing the walls	1. Clean the tyres with a damp rag. 2. Fold up the air skirts for a better seal prior to use.
Gecko falls off the wall.	1. Make sure to discharge and then charge again for 30-50 minutes. 2. Clean tyres and make sure your wall and floor are also clean. 3. Check the air skirts for damage. If they have been pulled loose, tape them back on with flexible tape. 4. Make sure surface is flat.

DK-Fjernstyret Gekko

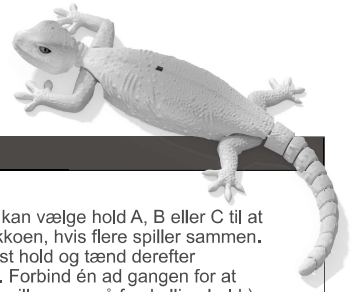

CONTROLLER




Knap til valg af hold


(Spillere kan vælge hold A, B eller C til at styre gekkoen, hvis flere spiller sammen. Vælg først hold og tænd derefter gekkoen. Forbind én ad gangen for at sikre, at spillerne er på forskellige hold.)

BATTERIINSTALLATION

Kræver 3 × AAA (1,5V) batterier (INGÅR EJ).

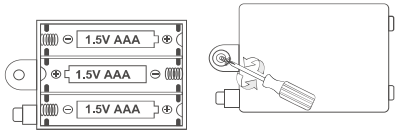

SÅDAN OPLADER DU

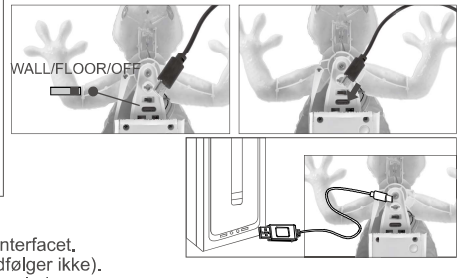


1. Skift WALL/FLOOR/OFF til "OFF"-positionen.
2. Tilslut USB-opladningskabel til Gecko-opladningsinterfacet.
3. Sæt opladningskablet i en 5V DC 2A oplader (medfølger ikke). USB-indikatoren vil lyse op, når den er begyndt at oplade.
4. Når indikatorlyset slukker, er gekkoen fuldt opladt. Tag opladerkablet ud af USB-porten eller opladeren og afbryd geckoen.

Opmærksomhed:
1. Oplad ikke batteriet umiddelbart efter hvert spil. Lad batteriet køle ned et stykke tid.
2. Batteriet løber tør for strøm, når gekkoens øjne begynder at blinke, gekkoen bør fjernes fra væggen med det samme for at undgå at falde ned fra væggen.

Opladningstid: ca. 45 minutter
Spilletid: 5-10 minutter
Kontrolafstand: inden for 7 meter

KLATRING PÅ VÆGGE

Skift **WALL/FLOOR/OFF** på **"WALL"**-positionen.

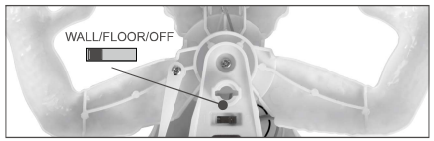





Opmærksomhed:
1. Fold luftkanterne udad for at sikre en ordentlig gekko-luftsugning mod væggen.
2. Lyt til ventilatoren tænder, før du sætter gekkoen på væggen.
3. Kravl ikke ud fra hjørnet eller ud over kanten af væggen.
4. Kør kun på glat, ren, tør overflade. Sørg for, at overfladerne er fri for forhindringer, herunder håndbilleder, lyskontakter osv.
5. Kør ikke på ujævne, porøse eller ødelagte overflader eller teksturet tapet.
6. Fjern ikke luftkant. Revner, buler eller åbninger vil få gekkoen til at miste sugeevnen og falde ned fra væggen. Snavs kan komme ind i ventilatoren og forårsage skade.

KRAVLER PÅ JORDEN


Skift W**ALL/FLOOR/OFF** på "**FLOOR**"-positionen.

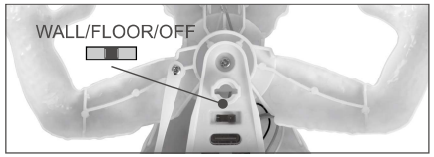

Venstre kontrolknap styrer gekkoen frem og tilbage.

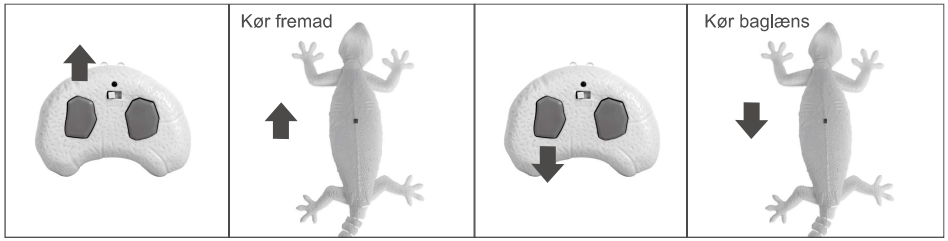

Tryk venstre kontrolknap og højre kontrolknap til venstre eller højre for at styre gekkoens retning.

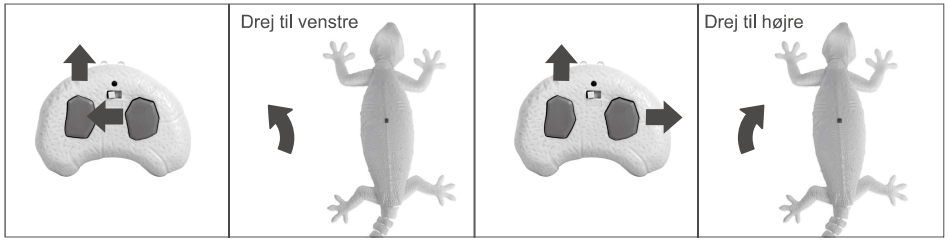

FEJLFINDING

PROBLEM	LØSNING
Gekkoen starter ikke.	1. Tænd/sluk-knappen er slukket. Tænd den. 2. Controllerens batteri er installeret med forkert polaritet. Tjek (+) og (-) markeringerne for at sikre, at batteriet er korrekt justeret. 3. Batterierne er afladet. Oplad batterierne.
Gekko klatrer ikke.	1. Overstrømsbeskyttelse aktiveres. Sluk for gekkoen i 30 sekunder og genstart så.
Gekkoen kører ikke ligeud.	1. Sørg for, at overfladen er fri for snavs/støv. 2. Sørg for, at overfladen hverken er for ru eller for glat. 3. Sørg for, at overfladen er flad.
Gekkoen glider op ad væggene	1. Rens dækkene med en fugtig klud. 2. Fold sugekanten ud for bedre greb før brug.
Gekkoen falder ned fra væggen.	1. Sørg for at aflade batteriet og så oplade igen i 30-50 minutter. 2. Rengør hjulene og sørg for, at dine vægge og gulv også er rene. 3. Tjek sugekanterne for skader. Hvis de er blevet trukket løs, tape dem på igen med fleksibel tape. 4. Sørg for, at overfladen er flad.