

KØKKENHEF



INSTRUCTION MANUAL

SMOOTHIE TO GO

10481968

INTRODUKTION

Mange tak fordi du har valgt et produkt fra Køkkenchef. Dermed har du erhvervet et kvalitetsprodukt som opfylder alle gældende krav til præstation og sikkerhedsstandarder i EU. For at sikre en korrekt behandling og en lang levetid anbefaler vi, at du overholder nedenstående anvisninger.

Du bedes læse vejledningen og især sikkerheds anvisningerne omhyggeligt igennem, inden du tager produktet i brug. Opbevar denne betjeningsvejledning, og overlad altid kun produktet til andre sammen med betjeningsvejledningen.

GENERELLE SIKKERHEDSFORANSTALTNINGER

- Forkert brug af produktet kan medføre personskade og beskadige produktet.
- Anvend kun produktet til det, det er beregnet til. Producenten er ikke ansvarlig for skader, der opstår som følge af forkert brug eller håndtering.
- Anbring altid produktet på et tørt, plant og stabilt underlag på god afstand af bordkant eller lignende.
- Produktet er udelukkende beregnet til husholdningsbrug. Produktet må ikke anvendes til erhvervsbrug.
- Produktet må kun sluttes til 220-240V~, 50/60Hz.
- Produktets motordel/elektronik, ledning og stikket må ikke nedsænkes i vand, og der må ikke trænge vand i motordel/elektronik.
- Rør aldrig ved produktet, ledningen eller stikkontakten med våde eller fugtige hænder.
- Udsæt ikke produktet for direkte sollys, høje temperaturer, fugt, støv eller ætsende stoffer.
- Forlad aldrig produktet, når det er tændt.
- Når produktet er i brug, bør det holdes under konstant opsyn.
- Når produktet bruges skal børn der opholder sig i nærheden af

den altid holdes under opsyn.

- Børn må ikke lege med produktet.
- Produktet kan indeholde skarpe dele og bør derfor opbevares utilgængeligt for børn.
- Brug kun tilbehør, der følger med produktet eller er anbefalet af producenten.
- Produktet må ikke bruges af personer med nedsat følsomhed, fysiske eller mentale handicap, eller personer, som ikke er i stand til at betjene produktet, medmindre de overvåges eller instrueres i brugen af en person, som er ansvarlig for deres sikkerhed.

LEDNING OG STIK

- Lad ikke ledningen hænge ud over bordkanten.
- Hold ledningen og produktet væk fra varmekilder, varme genstande og åben ild.
- Tag stikket ud af stikkontakten før rengøring, og hvis produktet ikke er i brug. Undlad at trække i ledningen, når du tager stikket ud af stikkontakten, men tag fat om selve stikket.
- Sørg for, at ledningen er rullet helt ud.
- Kontrollér jævnligt, om ledningen eller stikket er beskadiget, og brug ikke produktet, hvis dette er tilfældet, eller hvis det har været tabt på gulvet, tabt i vand eller er blevet beskadiget på en anden måde.
- Hvis produktet, ledningen eller stikket er beskadiget, skal produktet efterses og om nødvendigt repareres af en autoriseret reparatør. Forsøg aldrig at reparere produktet selv. Kontakt købsstedet, hvis der er tale om en reparation, der falder ind under reklamationsretten. Hvis der foretages uautoriserede indgreb i produktet, bortfalder reklamationsretten.

REKLAMATIONSRETEN GÆLDER IKKE:


- Hvis ovennævnte ikke iagttages.
- Hvis der har været foretaget uautoriserede indgreb i produktet.
- Hvis produktet har været misligholdt, udsat for en voldsom behandling eller lidt anden form for overlast.

BORTSKAFFELSE AF PRODUKTET

Brugte produkter må ikke smides i husholdningsaffaldet. Iht. lovforskrifterne skal det udtjente produkt bortskaffes på ordentlig vis. Derved genanvendes de brugbare materialer, og miljøet skånes. Nærmere informationer fås hos den ansvarlige kommunale myndighed eller det lokale bortskaffelsesfirma. Produktet er forsynet med følgende logo:



KEND DIN MINIBLENDER

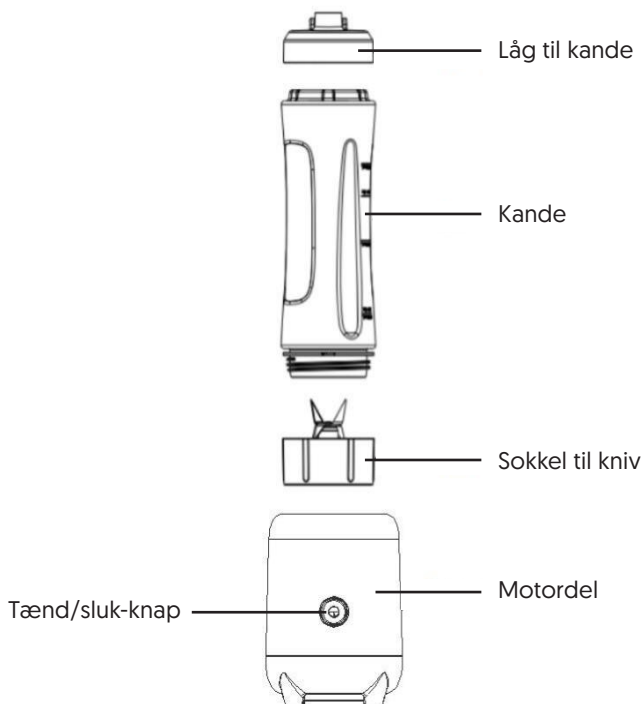

FØR APPARATET TAGES I BRUG FØRSTE GANG

Kontrollér, at tilbehøret er komplet, og at miniblenderen ikke er beskadiget. Hæld derefter lidt vand i kanden, og mix en eller to gange i henhold til trinene nedenfor. Hæld derefter vandet ud. Rengør kanden og låget til kanden grundigt med varmt vand.

Advarsel: Kniven er skarp og skal håndteres med forsigtighed.

BETJENINGSVEJLEDNING

1. Placér motordelen på en flad overflade. Kontrollér, at miniblenderen ikke er sluttet til en strømkilde.
2. Tilbered gulerødder, og skær dem i stykker på ca. 15×15×15 mm.
3. Placér kanden på en flad overflade med åbningen opad. Hæld ingredienserne i kanden. Du skal normalt tilføje lidt rent vand for at gøre det nemmere for miniblenderen at køre jævnt. Forholdet mellem gulerødder og vand er 2:3. Blandingen må ikke overstige linjen "600ml" på blanderkanden.

Bemærk: Miniblenderen kan ikke bruges til at blende isterninger.

4. Montér knivsoklen i den åbne ende af kanden ved at dreje den med uret.
5. Anbring kanden på motordelen, og drej kanden med uret for at låse den fast.
6. Sæt stikket i stikkontakten, og tryk på tænd/sluk-knappen for at starte miniblenderen.

Bemærk: Miniblenderen kan bruges i maks. 40 sekunder ad gangen. Derefter skal blenderen have lov til at køle af til rumtemperatur.

7. Når du er færdig, skal du slukke miniblenderen og dreje kanden mod uret for at fjerne den. Træk derefter stikket til miniblenderen ud af stikkontakten. Hold kanden med den ene hånd, og drej knivenheden mod uret med den anden hånd for at fjerne kniven.

Advarsel: Kniven er skarp og skal håndteres med forsigtighed.

8. Du kan sætte låget på kanden og tage den med dig.

Bemærk: Når du har drukket din blandede drik, kan du vaske kanden og bruge den i løbet af dagen til vand eller andre kolde væsker.

RENGØRING OG VEDLIGEHOLDELSE

Den automatiske rengøringsfunktion kan nemt, hurtigt og sikkert rengøre miniblenderen og knivenheden.

- Hæld lidt varmt sæbevand i kanden, og mix et par sekunder ved at sætte stikket på miniblenderen i stikkontakten og trykke på tænd/sluk-knappen.
- Fjern kanden ved at dreje den mod uret, og skyl den under rindende vand.
- Tør ydersiden af motordelen af med en fugtig klud.

Advarsel: Brug ikke rengøringsmidler med slibeeffekt. Nedsænk aldrig motordelen i vand.

- Tør alle dele, og sæt knivenheden tilbage på kanden. Sæt derefter kanden tilbage på motordelen. Tryk låget ned på den anden ende af kanden.

TEKNISKE DATA

Artikelnr. 10481968
220-240V~, 50/60Hz
300 Watt

PRODUCENT

Epiq ApS
Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Danmark
www.epiq.dk

Vi tager forbehold for trykfejl.

INTRODUCTION

Thank you for choosing a product from Køkkenchef. You have acquired a quality product which meets all applicable performance and safety standards in the EU. In order to ensure proper treatment and a long product life, we recommend that you comply with the instructions below.

Please read the manual and especially the safety instructions carefully before using the product. Keep this manual and provide it for referral along with the product when others are using it.

GENERAL SAFETY INSTRUCTIONS

- Improper use of the product can cause personal injury and damage.
- Only use the product for what it is intended. The manufacturer is not liable for damages arising from improper use or handling.
- Always place the product on a dry, flat and stable surface well away from table edge or similar.
- The product is intended for household use only. The product is not for professional use.
- The product may only be connected to 220-240V~, 50/60Hz.
- The product engine/electronics, cord or plug cannot be submerged in water, and no water may get in contact with the engine/electronics.
- Never touch the product, cord or plug with wet or damp hands.
- Do not expose the product to direct sunlight, high temperatures, humidity, dust or corrosive substances.
- Never leave the product when it is turned on.
- When the product is in use, it should be kept under constant supervision. Children should always be supervised when using the product to ensure that they do not play with the product. The product is not a toy.
- The product may have sharp parts and must, therefore, be kept

out of reach of children.

- Only use the accessories that come with the product or that are recommended by the manufacturer.
- The product must not be used by people with reduced sensitivity, physical or mental disability, or people who are not able to operate the product unless they are supervised or instructed by a person responsible for their safety.

CORD AND PLUG

- Do not let the cord hang over the edge.
- Keep the cord and the product away from heat sources, hot objects and open flames.
- Unplug the power cord before cleaning and if the product is not in use. Do not pull the cord when removing the plug from the socket, rather grasp the plug itself.
- Make sure that the cord is fully extended.
- Check regularly that the cord and the plug are not damaged and do not use the product if this is the case, or if it has been dropped on the floor, dropped in water or damaged in another way.
- If the product or plug is damaged, the product must be inspected and, if necessary, repaired by an authorised repairer. Never try to repair the product yourself. Please, contact the store to see if there is a repair that falls under warranty. Tampering of the product will void the warranty.

RULES OF COMPLAINTS THE WARRANTY DOES NOT APPLY:

- If the above is not observed.
- If there has been unauthorised intervention of the product.
- If the product has been mishandled, subjected to rough treatment or some other form of damage.


PRODUCT DISPOSAL

Used product should not be disposed as household waste. According to legislation, the product should be disposed of

properly so that the materials can be recycled in an environmentally friendly manner. Further information is available from the responsible local authority or local disposal company. The product is equipped with the following logo:



KNOW YOUR MINI BLENDER

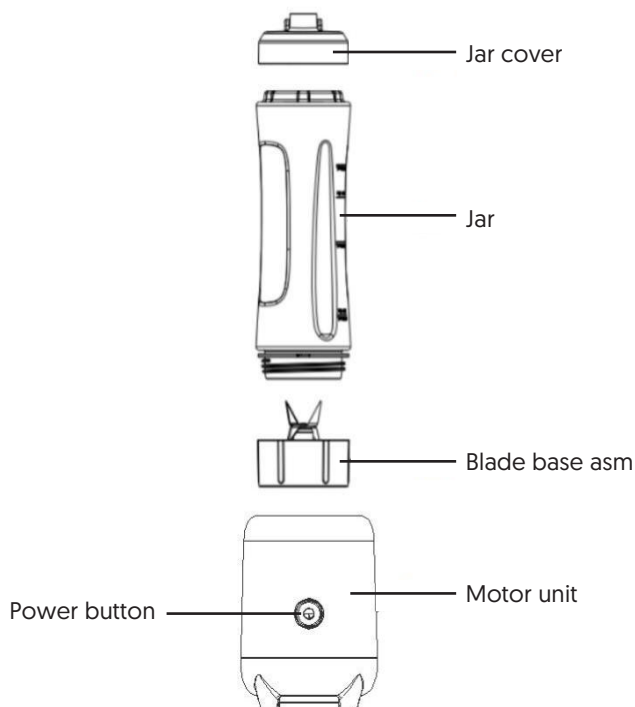

BEFORE FIRST USE

Check that the accessories are complete, and the unit is not damaged. Then pour a small amount of water into the jar and mix according to the steps below for one or two times, then pour the water out. Clean the jar and the jar cover thoroughly with warm water.

Warning: The blade is sharp, handle it with care.

OPERATION INSTRUCTION

1. Place the motor unit on a flat surface. Make sure Mini Bender is unplugged.
2. Prepare carrots and cut them into pieces of about 15×15×15mm.
3. Place the jar on a flat surface with the opening end facing up. Fill the jar with the ingredients. Usually certain amount of purified water must be added to facilitate the smooth running of the Mini Blender. The proportion of the carrot and water is 2:3. The amount of mixture should not exceed the “600ml” line as indicated on the blending jar.

Note: The Mini Blender can't blend ice cubes.

4. Mount the blade assembly on the opening end of the jar by turning it clockwise.
5. Place the jar assembly on to the motor unit, then turn the jar assembly clockwise to lock it.

6. Connect the power plug to the power outlet and press the “Power” button to operate the Mini Blender.

Note: The Mini Blender can be operated without interruption for a maximum of 40 seconds, after which it should be allowed to cool down to room temperature.

7. When the operation is finished, turn off the Mini Blender and turn the jar assembly anti-clockwise to remove it. Then unplug the Mini Blender from the power outlet.
8. Hold the jar with one hand and turn the blade base assembly anti-clockwise with the other hand to remove it.
9. You can install the jar cover on the jar and take it along with you for portable use.

Note: After you have consumed your blended beverage, wash the jar and reuse it throughout the day for water or other cold liquids.

CLEANING AND MAINTENANCE

The Auto Clean feature can clean the Mini Blender and blade assembly easily, quickly and safely.

- Pour a little warm soapy water into the jar and mix for a few seconds by plugging the Mini Blender into the power outlet and pressing down the Power button.
- Remove the jar by turning it anti-clockwise and rinse it under running water.
- Wipe the outer surface of the Motor Unit with a damp cloth.

Warning: Do not use abrasive cleaners. Never immerse the Motor Unit in water.

- Dry all parts and reassemble the blade assembly to the jar and then place the jar back on the motor unit. Snap the jar cover on the other end of the jar.

TECHNICAL DATA

Article No. 10481968
220-240V~, 50/60Hz
300 Watt

PRODUCER

Epiq ApS
Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Denmark
www.epiq.dk

We cannot be held responsible for any printing errors.