

salling



INSTRUCTION MANUAL SANDWICH MAKER

10651555

INTRODUKTION

Mange tak fordi du har valgt et produkt fra Salling. Dermed har du erhvervet et kvalitetsprodukt som opfylder alle gældende krav til præstation og sikkerhedsstandarder i EU. For at sikre en korrekt behandling og en lang levetid anbefaler vi, at du overholder nedenstående anvisninger.

Du bedes læse vejledningen og især sikkerheds anvisningerne omhyggeligt igennem, inden du tager produktet i brug. Opbevar denne betjeningsvejledning, og overlad altid kun produktet til andre sammen med betjeningsvejledningen.

GENERELLE SIKKERHEDSFORANSTALTNINGER

- Forkert brug af produktet kan medføre personskade og beskadige produktet.
- Anvend kun produktet til det, det er beregnet til. Producenten er ikke ansvarlig for skader, der opstår som følge af forkert brug eller håndtering.
- Anbring altid produktet på et tørt, plant og stabilt underlag på god afstand af bordkant eller lignende.
- Produktet er udelukkende beregnet til husholdningsbrug. Produktet må ikke anvendes til erhvervsbrug.
- Produktet må kun sluttes til 220-240V~, 50/60Hz.
- Produktets motordel/elektronik, ledning og stikket må ikke nedsænkes i vand, og der må ikke trænge vand i motordel/elektronik.
- Rør aldrig ved produktet, ledningen eller stikkontakten med våde eller fugtige hænder.
- Udsæt ikke produktet for direkte sollys, høje temperaturer, fugt, støv eller ætsende stoffer.
- Forlad aldrig produktet, når det er tændt.
- Når produktet er i brug, bør det holdes under konstant opsyn.
- Når produktet bruges skal børn der opholder sig i nærheden af

den altid holdes under opsyn.

- Børn må ikke lege med produktet.
- Produktet kan indeholde skarpe dele og bør derfor opbevares utilgængeligt for børn.
- Brug kun tilbehør, der følger med produktet eller er anbefalet af producenten.
- Produktet må bruges af børn på 8 år eller derover og personer med reducerede fysiske, sensoriske eller mentale evner, eller som mangler erfaring og viden, hvis de er under opsyn eller har modtaget instruktion i sikker brug af produktet og forstår de involverede farer.
- Hold produktet og ledningen uden for rækkevidden af børn under 8 år.
- Rengøring og vedligeholdelse må ikke udføres af børn med mindre de er ældre end 8 år og under opsyn.

LEDNING OG STIK

- Lad ikke ledningen hænge ud over bordkanten.
- Hold ledningen og produktet væk fra varmekilder, varme genstande og åben ild.
- Tag stikket ud af stikkontakten før rengøring, og hvis produktet ikke er i brug. Undlad at trække i ledningen, når du tager stikket ud af stikkontakten, men tag fat om selve stikket.
- Sørg for, at ledningen er rullet helt ud.
- Kontrollér jævnligt, om ledningen eller stikket er beskadiget, og brug ikke produktet, hvis dette er tilfældet, eller hvis det har været tabt på gulvet, tabt i vand eller er blevet beskadiget på en anden måde.
- Hvis produktet, ledningen eller stikket er beskadiget, skal produktet efterses og om nødvendigt repareres af en autoriseret reparatør. Forsøg aldrig at reparere produktet selv. Kontakt købsstedet, hvis der er tale om en reparation, der falder ind under reklamationsretten. Hvis der foretages uautoriserede indgreb i produktet, bortfalder reklamationsretten.

REKLAMATIONSRETEN GÆLDER IKKE:


- Hvis ovennævnte ikke iagttages.
- Hvis der har været foretaget uautoriserede indgreb i produktet.
- Hvis produktet har været misligholdt, udsat for en voldsom behandling eller lidt anden form for overlast.

BORTSKAFFELSE AF PRODUKTET

Brugte produkter må ikke smides i husholdningsaffaldet. Iht. lovforskrifterne skal det udtjente produkt bortskaffes på ordentlig vis. Derved genanvendes de brugbare materialer, og miljøet skånes. Nærmere informationer fås hos den ansvarlige kommunale myndighed eller det lokale bortskaffelsesfirma. Produktet er forsynet med følgende logo:



BESKRIVELSE AF DELE

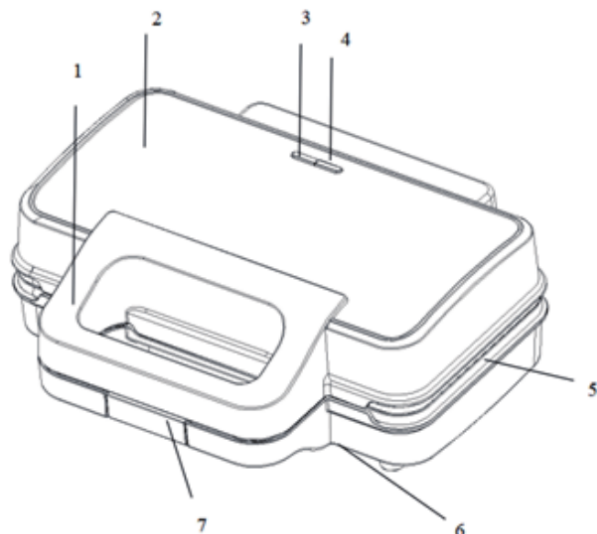

1. Top
2. Pynteplader
3. Lysdiode for strøm (rød)
4. Lysdiode for klar (grøn)
5. Slip-let varmeplader
6. Bund
7. Lås til håndtag

FØR PRODUKTET TAGES I BRUG FØRSTE GANG

- Læs brugsanvisningen nøje, og gem den til senere brug.
- Fjern al emballage.
- Rengør varmepladerne med en svamp eller en klud fugtet med varmt vand. NEDSÆNK IKKE APPARATET I VAND, OG LAD IKKE VAND LØBE DIREKTE PÅ VARMEPLADERNE.
- Tør af med en klud eller køkkenrulle.
- Du får det bedste resultat ved at påføre (evt. med spray) et tyndt lag madolie på varmepladerne.

Bemærk: Dit sandwichjern kan udsende en let røg eller lugt, når det opvarmes første gang.

Det er helt normalt for varmeapparater. Det påvirker ikke apparatets sikkerhed.

BRUGERVEJLEDNING

- Luk sandwichjernet, og sæt ledningen i en stikkontakt. Lysdioderne for strøm og klar tændes og viser, at sandwichjernet er ved at varme op.
- Når sandwichjernet har nået tilberedningstemperaturen efter ca. 2-4 minutter, slukkes lysdioden for klar.
- Åbn låget, læg kødet eller andre madvarer på varmepladen i bunden.
- Luk låget. Lysdioden for klar tænder igen.
- Lad sandwichjernet være tændt i ca. 2-4 minutter, hvorefter lysdioden for klar slukker

igen, eller indtil maden er gyldenbrun. Du kan også justere tiden, så den passer til din personlige smag.

- Når maden er færdig, skal du åbne låget med håndtaget. Fjern maden med en plasts-patel.
Brug aldrig en metaltang eller en kniv, da de kan forårsage skade på slip-let belægningen på varmepladerne.
- Når du er færdig med at lave dine sandwich, skal du trække stikket ud af stikkontakten og lade sandwichjernet stå åbent, indtil det er afkølet.

RENGØRING OG PLEJE

- Træk altid ledningen til sandwichjernet ud af stikkontakten, og lad apparatet køle ned før rengøringen. Grillen er lettere at gøre ren, når den er en smule varm. Der er ingen grund til at skille sandwichjernet ad for at rengøre apparatet. Nedsænk aldrig sandwichjernet i vand, og læg ikke sandwichjernet i opvaskemaskinen.
- Tør madrester af varmepladerne med en blød svamp. Opblød fastbrændte madrester med lidt varmt vand med lidt opvaskemiddel, og fjern derefter resterne med en blød, ikke-slibende plastsvamp, eller læg et stykke våd køkkenrulle hen over varmepladerne for at opløse madresterne.
- Brug ikke slibende materialer af nogen art, der kan lave ridser i eller beskadige slip-let-belægningen.
- Benyt ikke metalredskaber til at fjerne maden, da de kan beskadige slip-let-belægningen.
- Tør kun sandwichjernet udvendigt med en fugtig klud. Brug ikke en skuresvamp eller ståluld til at rengøre sandwichjernet udvendigt. Det beskadiger overfadebehandlingen. Det må ikke nedsænkes i vand eller andre væsker.
- Grillen må ikke lægges i opvaskemaskinen.

OPBEVARING

- Træk altid ledningen på sandwichjernet ud af stikkontakten før opbevaring.
- Kontrollér altid, at sandwichjernet er koldt og tørt før opbevaring.

TEKNISKE DATA

Artikelnr. 10651555
220-240V~, 50/60Hz
900 Watt

PRODUCENT

Epiq ApS
Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Danmark
www.epiq.dk

Vi tager forbehold for trykfejl.

INTRODUCTION

Thank you for choosing a product from Salling. You have acquired a quality product which meets all applicable performance and safety standards in the EU. In order to ensure proper treatment and a long product life, we recommend that you comply with the instructions below.

Please read the manual and especially the safety instructions carefully before using the product. Keep this manual and provide it for referral along with the product when others are using it.

GENERAL SAFETY INSTRUCTIONS

- Improper use of the product can cause personal injury and damage.
- Only use the product for what it is intended. The manufacturer is not liable for damages arising from improper use or handling.
- Always place the product on a dry, flat and stable surface well away from table edge or similar.
- The product is intended for household use only. The product is not for professional use.
- The product may only be connected to 220-240V~, 50/60Hz.
- The product engine/electronics, cord or plug cannot be submerged in water, and no water may get in contact with the engine/electronics.
- Never touch the product, cord or plug with wet or damp hands.
- Do not expose the product to direct sunlight, high temperatures, humidity, dust or corrosive substances.
- Never leave the product when it is turned on.
- When the product is in use, it should be kept under constant supervision. Children should always be supervised when using the product to ensure that they do not play with the product. The product is not a toy.
- The product may have sharp parts and must, therefore, be kept

out of reach of children.

- Only use the accessories that come with the product or that are recommended by the manufacturer.
- This product can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.
- Keep the product and its cord out of reach of children less than 8 years of age.
- Cleaning and user maintenance shall not be made by children without supervision.

CORD AND PLUG

- Do not let the cord hang over the edge.
- Keep the cord and the product away from heat sources, hot objects and open flames.
- Unplug the power cord before cleaning and if the product is not in use. Do not pull the cord when removing the plug from the socket, rather grasp the plug itself.
- Make sure that the cord is fully extended.
- Check regularly that the cord and the plug are not damaged and do not use the product if this is the case, or if it has been dropped on the floor, dropped in water or damaged in another way.
- If the product or plug is damaged, the product must be inspected and, if necessary, repaired by an authorised repairer. Never try to repair the product yourself. Please, contact the store to see if there is a repair that falls under warranty. Tampering of the product will void the warranty.

RULES OF COMPLAINTS THE WARRANTY DOES NOT APPLY:

- If the above is not observed.
- If there has been unauthorised intervention of the product.
- If the product has been mishandled, subjected to rough


treatment or some other form of damage.

PRODUCT DISPOSAL

Used product should not be disposed as household waste. According to legislation, the product should be disposed of properly so that the materials can be recycled in an environmentally friendly manner. Further information is available from the responsible local authority or local disposal company. The product is equipped with the following logo:



PARTS IDENTIFICATION

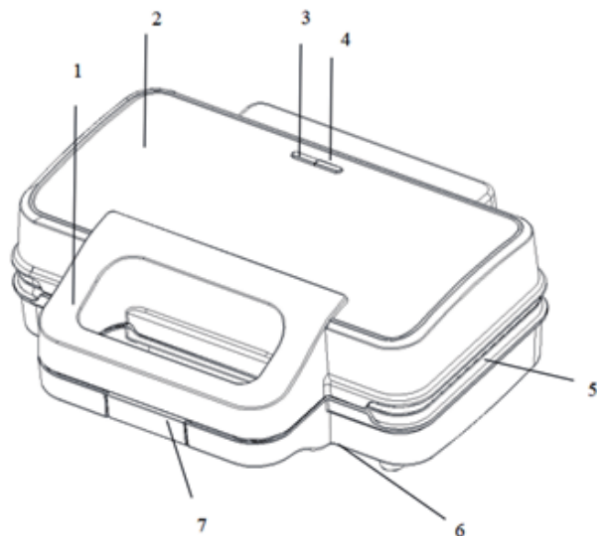

1. Upper Housing
2. Decorative plates
3. Power Light
4. Ready Light
5. Non-stick Cooking Plates
6. Bottom Housing
7. Handle

BEFORE FIRST USE

- Read all instructions carefully and keep them for future reference.
- Remove all packaging
- Clean the Cooking Plates by wiping a sponge or cloth dampened in warm water. DO NOT IMMERSE THE UNIT AND DO NOT RUN WATER DIRECTLY ONT THE COOKING SURFACES.

- Dry with a cloth or paper towel.
- For best results, lightly coat the cooking plates with a little cooking oil or cooking spray.

Notice: When your Sandwich Maker is heated for the frst time, it may emit slight smoke or odor. This is normal with many heating appliances. This does not affect the safety of your appliance.

HOW TO USE

- Close the Sandwich Maker and plug it into the wall outlet, you will notice that the power and ready light will come on, indicating that the Sandwich Maker has begun preheating.
- It will take approximately 2~4 minutes to reach baking temperature, the ready light will turn off.
- Open the lid, put the meat or other foods on the bottom cooking plate.
- Close the lid. The ready light will go on again.

- Cook for about 2 to 4 minutes, the ready light turns off again, or until golden brown, adjusting the time to suit your own individual taste.
- When the foods is cooked use the handle to open the lid. Remove the foods with the help of a plastic spatula. Never use metal tongs or a knife as these can cause damage to the non-stick coating of the cooking plates.
- Once you are finished cooking, disconnect the plug from the wall outlet and leave the Sandwich Maker open and let it cool down.

CLEANING AND CARE

- Always unplug the Sandwich Maker and allow it to cool down before cleaning. The unit is easier to clean when slightly warm. There is no need to disassemble the Sandwich Maker for cleaning. Never immerse the Sandwich Maker in water or place in dishwasher.
- Wipe cooking plates with a soft sponge to remove food residue. For baked on food-residue squeeze some warm water mixed with detergent over the food residue then clean with a nonabrasive plastic scouring pad or place wet kitchen paper over the cooking plate to moisten the food residue.
- Do not use anything abrasive that can scratch or damage the non-stick coating surface.
- Do not use metal utensils to remove your foods, they can damage the non-stick surface.
- Wipe the outside of the Sandwich Maker with a damp cloth only. Do not clean the outside with any abrasive scouring pad or steel wool, as this will damage the finish. Do not immerse in water or any other liquid.
- Do not place in the dishwasher.

STORAGE

- Always unplug the Sandwich Maker before storage.
- Always make sure the Sandwich Maker is cool and dry before storing.

TECHNICAL DATA

Article No. 10651555
220-240V~, 50/60Hz
900 Watt

PRODUCER

Epiq ApS
Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Denmark
www.epiq.dk

We cannot be held responsible for any printing errors.