



Sizzling Hotplate Bordgrill

3+




GB Directions:

1. Prepare iced water (ice cubes and water) in the 'oil' dispenser.
2. Pour iced water on the griddle pan.
3. Switch to 'O' to play. The pan makes sizzling sounds and bubbling action when it's 'hot' enough for cooking.
4. Now put your favourite food on the pan.
5. 'Cook' and flip your food and watch them magically change colours.

DK Rutevejledning:

1. Forbered isvand (isterninger og vand) i 'olie'-dispenseren.
2. Hæld isvand på stegepanden.
3. Skift til 'O' for at spille. Panden laver sydende lyde og bobler, når den er 'varm' nok til madlavning.
4. Læg nu din yndlingsmad på panden.
5. 'Tilbered' og vend din mad og se dem skifte farve på magisk vis.

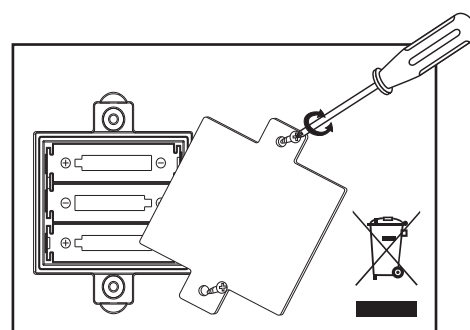

GB Battery: 3 x AA (1.5V) (Not included)

DK Batteri: 3 x AA (1.5V) (Ikke inkluderet)

GB

NOTE!

Batteries should be installed by an adult. Remember to position + and – correctly. Do not mix old and new batteries or different types of batteries. Do not attempt to recharge batteries which are not rechargeable. Remove batteries if the product is not in use for some time. Do not short-circuit the battery contacts. Rechargeable batteries are only to be charged under adult supervision. Exhausted batteries are to be removed from the toy. Please keep this information for future reference. For environmental reasons, electrical equipment must be disposed separately from household waste. Contact the municipality for the nearest collection point.

DK

BEMÆRK!

Isætning af batterier bør foretages af en voksen. Husk at vende + og - korrekt. Bland aldrig gamle og nye batterier eller forskellige batterityper. Forsøg aldrig at genoplade ikke-genopladelige batterier. Tag batterierne ud, hvis varen ikke anvendes i en længere periode. Kortslut ikke batterikontakterne. Genopladelige batterier må kun oplades under voksent tilsyn. Genopladelige batterier skal fjernes fra legetøjet, før de oplades. Opbrugte batterier skal fjernes fra legetøjet. Opbevar denne vejledning til senere brug. Af hensyn til miljøet skal elektrisk udstyr bortskaffes særskilt fra husholdningsaffald. Kontakt kommunen for nærmeste indsamlingssted.