




North Field®

BRUGERVEJL / PITCHING INSTRUCTIONS


1.

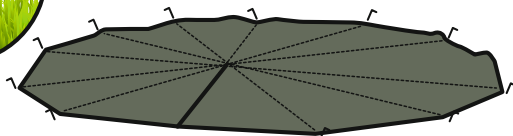

DK Bred teltbunden ud på et fladt underlag uden sten og grene. Bunden pløkkes hele vejen rundt. Vigtigt at bunden ligger stram og jævn, pløkke afstand er ens hele vejen rundt, evt. efterjusteres når telte er rejst.

EN Unfold your tent on a clean and even ground. It is important to select a site which has been cleared of any sharp objects such as rocks or sticks. Then drive the pegs through the loops into the ground.



2.

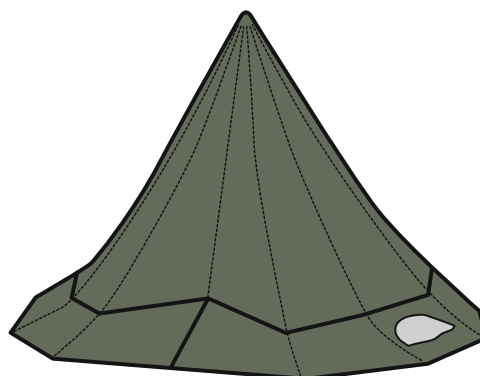

DK Midterstangen føres ind gennem indgangen og stikkes op i midten af teltet, nederste del afstanden sættes i midten af teltet, muligvis skal bunden rettes / pløkker justeres.

EN Push the center pole through the door and place one end of it at the designated space at the center of tent roof. Now erect the tent.


3.

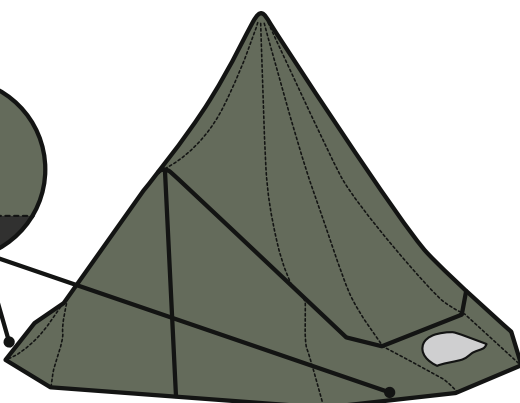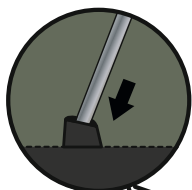

DK A stangen skubbes op i indgangen indefra og fastgøres i øjerne i gulvet.

EN Position the A-pole in the entrance area and fix it with the fixture to give the tent the right steadiness.

4.

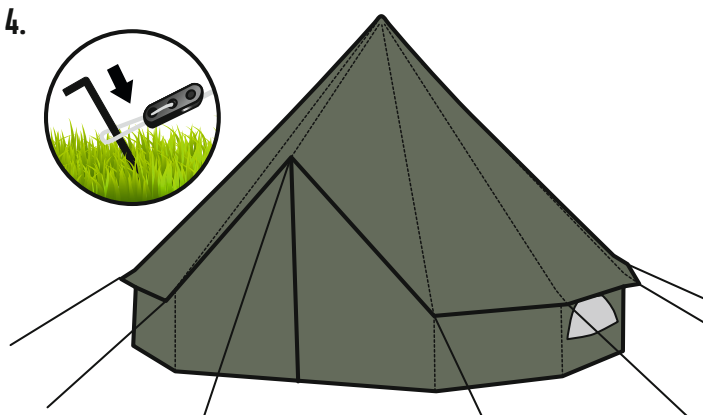

DK Indgangen lynes ned og bardunerne pløkkes. N.B. teltet rengøres med rent lunken vand uden anvendelse af rengøringsmiddel m.m.

EN Finally secure the tent by fixing the guy ropes to the ground.

STAVANGER 8

GLAMPING TIPI TENT

VIGTIG INFORMATION - VENLIGST BEMÆRK

Når du vælger din campingplads, vil den ideelle plads være et område, som er så jævnt og frit for sten, grene og andre skarpe genstande som muligt.

Bred teltet ud og placer det med døren i den ønskede retning. Undgå at placere teltet direkte under træer og stil det med bagenden mod vindretningen, hvilket giver de bedste forudsætninger i blæsevej.

Få det bedste ud af campingturen, ved at prøveopstille teltet før du tager af sted for at kunne lære det at kende.

Under visse vejrforhold kan der opstå kondens på indersiden af dit telt. For at forhindre dette bedst muligt er det vigtigt, at vådt tøj etc. fjernes fra teltet. Sørg ligeledes for at få luftet ud i teltet. Kondens er ikke det samme som utæthed i teltet.

Man skal være klar over, at solens ultraviolette stråler kan beskadige overbejlet på teltet, hvis det er udsat for længere tids placering direkte i solen.

Snavs på teltet fjernes med en blød svamp og rent vand. Vask aldrig teltet i vaskemaskine og anvend aldrig kemisk rensning. Opbevar teltet tørt.

IMPORTANT INFORMATION - PLEASE NOTE

When selecting your campsite, the ideal place would be an area as even and clean of rocks, branches and other sharp objects as possible.

Spread out the tent and place it with the door in the desired direction, avoid placing the tent directly under trees, and position it with the end into the wind direction, for best results in windy conditions.

Get the most out of your camping trip by having a trial run, putting up and taking down your new tent in order to know it before you use it for the first time.

Under certain weather conditions, condensation can occur on the inside surfaces of your tent. To help prevent this you must remove wet clothes etc., increase ventilation. Condensation should not be confused with leakage.

Be aware that (UV) ultraviolet rays will damage your tent if you expose it to direct sunlight for longer periods of time.

Remove dirt from the tent with a soft sponge and pure water. Never wash the tent in a washing machine and never have it dry-cleaned. Store the tent in a dry place.

Indhold - Contents:

Yderstof / midtervæg / midterstang / A-stang - barduner - pløkker - paksæk.

Flysheet / middle wall / centre pole / A shaped pole - guy ropes - pegs - carrying bag.