

salling



INSTRUCTION MANUAL STICK MIXER

11314644

INTRODUKTION

Mange tak fordi du har valgt et produkt fra Salling. Dermed har du erhvervet et kvalitetsprodukt som opfylder alle gældende krav til præstation og sikkerhedsstandarder i EU. For at sikre en korrekt behandling og en lang levetid anbefaler vi, at du overholder nedenstående anvisninger.

Du bedes læse vejledningen og især sikkerheds anvisningerne omhyggeligt igennem, inden du tager produktet i brug. Opbevar denne betjeningsvejledning, og overlad altid kun produktet til andre sammen med betjeningsvejledningen.

GENERELLE SIKKERHEDSFORANSTALTNINGER

- Forkert brug af produktet kan medføre personskade og beskadige produktet.
- Anvend kun produktet til det, det er beregnet til. Producenten er ikke ansvarlig for skader, der opstår som følge af forkert brug eller håndtering.
- Anbring altid produktet på et tørt, plant og stabilt underlag på god afstand af bordkant eller lignende.
- Produktet er udelukkende beregnet til husholdningsbrug. Produktet må ikke anvendes til erhvervsbrug.
- Produktet må kun sluttes til 220-240V~, 50/60Hz.
- Produktets motordel/elektronik, ledning og stikket må ikke nedsænkes i vand, og der må ikke trænge vand i motordel/elektronik.
- Rør aldrig ved produktet, ledningen eller stikkontakten med våde eller fugtige hænder.
- Udsæt ikke produktet for direkte sollys, høje temperaturer, fugt, støv eller ætsende stoffer.
- Forlad aldrig produktet, når det er tændt.
- Når produktet er i brug, bør det holdes under konstant opsyn.
- Når produktet bruges skal børn der opholder sig i nærheden af

den altid holdes under opsyn.

- Børn må ikke lege med produktet.
- Produktet kan indeholde skarpe dele og bør derfor opbevares utilgængeligt for børn.
- Brug kun tilbehør, der følger med produktet eller er anbefalet af producenten.
- Produktet må ikke bruges af personer med nedsat følsomhed, fysiske eller mentale handicap, eller personer, som ikke er i stand til at betjene produktet, medmindre de overvåges eller instrueres i brugen af en person, som er ansvarlig for deres sikkerhed.

LEDNING OG STIK

- Lad ikke ledningen hænge ud over bordkanten.
- Hold ledningen og produktet væk fra varmekilder, varme genstande og åben ild.
- Tag stikket ud af stikkontakten før rengøring, og hvis produktet ikke er i brug. Undlad at trække i ledningen, når du tager stikket ud af stikkontakten, men tag fat om selve stikket.
- Sørg for, at ledningen er rullet helt ud.
- Kontrollér jævnligt, om ledningen eller stikket er beskadiget, og brug ikke produktet, hvis dette er tilfældet, eller hvis det har været tabt på gulvet, tabt i vand eller er blevet beskadiget på en anden måde.
- Hvis produktet, ledningen eller stikket er beskadiget, skal produktet efterses og om nødvendigt repareres af en autoriseret reparatør. Forsøg aldrig at reparere produktet selv. Kontakt købsstedet, hvis der er tale om en reparation, der falder ind under reklamationsretten. Hvis der foretages uautoriserede indgreb i produktet, bortfalder reklamationsretten.

REKLAMATIONSRETEN GÆLDER IKKE:


- Hvis ovennævnte ikke iagttages.
- Hvis der har været foretaget uautoriserede indgreb i produktet.
- Hvis produktet har været misligholdt, udsat for en voldsom behandling eller lidt anden form for overlast.

BORTSKAFFELSE AF PRODUKTET

Brugte produkter må ikke smides i husholdningsaffaldet. Iht. lovforskrifterne skal det udtjente produkt bortskaffes på ordentlig vis. Derved genanvendes de brugbare materialer, og miljøet skånes. Nærmere informationer fås hos den ansvarlige kommunale myndighed eller det lokale bortskaffelsesfirma. Produktet er forsynet med følgende logo:



BESKRIVELSE AF DELE

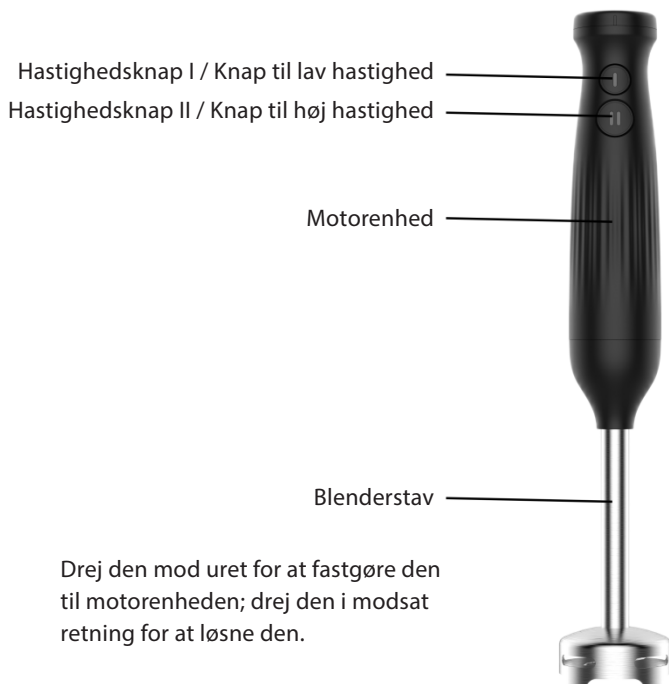

FØR FØRSTE BRUG

- Kontroller, at alt tilbehør er komplet og ubeskadiget. Rengør alle aftagelige dele grundigt i henhold til afsnittet »RENGØRING OG VEDLIGEHOLDELSE«.
- Enheden må ikke køre uden indhold (tom) i mere end 15 sekunder.
- Sørg for, at stavblenderen er taget ud af stikkontakten, før du monterer eller afmonterer tilbehørsdele.

BRUG AF DIN STAVBLENDER

1. For at samle blenderstaven med motorenheden skal du dreje blenderstaven mod uret, indtil den sidder fast. For at skille den ad skal du blot dreje blenderstaven i den modsatte retning.
2. Sæt apparatet i stikkontakten. Sørg for, at kniven er sat helt ned i maden for at undgå sprøjt, når du tænder blenderen.
3. Hold beholderen i ro, og tryk derefter på en af hastighedsvælgerne. Brug det laveste hastighedstrin til mere skånsom blanding og for at reducere sprøjt.
4. Lad ikke væsker stige til over tilslutningspunktet mellem blenderen og blenderstangen.
5. Før kniven gennem maden med en blid op-og-ned-bevægelse.

6. Hvis knivene sætter sig fast, skal du trække stikket ud, før du forsøger at fjerne forhindringen.
7. Træk strømkablet ud af stikkontakten på apparatet, og adskil delene.

OPSKRIFT 1:

- Fyld 180 g honning og 140 g maltose i en beholder, tilsæt 200 ml vand.
- Sæt blandestaven ned i beholderen
- Tryk på knappen til høj hastighed for at aktivere blendestaven.
- Bland i ca. 3 sekunder ad gangen, gentag det for at opnå den ønskede effekt.

OPSKRIFT 2:

- Fyld blandingen af 50 g banan og 200 ml mælk i målebægeret.
- Sæt blenderstaven på.
- Tryk på højhastighedsknappen for at aktivere blenderstaven.
- Blend i cirka 30 sekunder for det bedste resultat.

RENGØRING OG VEDLIGEHOLDELSE

1. Træk ledningen på stavblenderen ud af stikkontakten, og tag den aftagelige blenderstav af før rengøring.

BEMÆRK: Nedsenk ikke blenderstaven helt i vand, da smøremidlet på lejerne med tiden kan blive skyllet væk.

2. Skyl den aftagelige blenderstav under rindende vand uden at bruge skurende rengøringsmidler eller stærke rengøringsmidler. Efter rengøring skal blenderstaven stilles oprejst, så overskydende vand kan løbe ud.
3. Tør motorenheden af med en fugtig klud. Sænk aldrig motorenheden ned i vand, da det kan medføre risiko for elektrisk stød.
4. Tør alle dele omhyggeligt.
5. **FORSIGTIG:** Knivene er meget skarpe. Håndter dem med stor forsigtighed.

HURTIG RENGØRING

For at rengøre stavblenderen mellem brug skal du fylde et bægerglas eller en kop halvt op med vand og lade apparatet køre i et par sekunder.

TEKNISKE DATA

Artikelnr. 11314644
220-240V~, 50-60Hz
600 Watt
KB Tid: 1 minutter

PRODUCENT

Epiq ApS
Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Danmark
www.epiq.dk

Vi tager forbehold for trykfejl.

INTRODUCTION

Thank you for choosing a product from Salling. You have acquired a quality product which meets all applicable performance and safety standards in the EU. In order to ensure proper treatment and a long product life, we recommend that you comply with the instructions below.

Please read the manual and especially the safety instructions carefully before using the product. Keep this manual and provide it for referral along with the product when others are using it.

GENERAL SAFETY INSTRUCTIONS

- Improper use of the product can cause personal injury and damage.
- Only use the product for what it is intended. The manufacturer is not liable for damages arising from improper use or handling.
- Always place the product on a dry, flat and stable surface well away from table edge or similar.
- The product is intended for household use only. The product is not for professional use.
- The product may only be connected to 220-240V~, 50/60Hz.
- The product engine/electronics, cord or plug cannot be submerged in water, and no water may get in contact with the engine/electronics.
- Never touch the product, cord or plug with wet or damp hands.
- Do not expose the product to direct sunlight, high temperatures, humidity, dust or corrosive substances.
- Never leave the product when it is turned on.
- When the product is in use, it should be kept under constant supervision. Children should always be supervised when using the product to ensure that they do not play with the product. The product is not a toy.
- The product may have sharp parts and must, therefore, be kept

out of reach of children.

- Only use the accessories that come with the product or that are recommended by the manufacturer.
- The product must not be used by people with reduced sensitivity, physical or mental disability, or people who are not able to operate the product unless they are supervised or instructed by a person responsible for their safety.

CORD AND PLUG

- Do not let the cord hang over the edge.
- Keep the cord and the product away from heat sources, hot objects and open flames.
- Unplug the power cord before cleaning and if the product is not in use. Do not pull the cord when removing the plug from the socket, rather grasp the plug itself.
- Make sure that the cord is fully extended.
- Check regularly that the cord and the plug are not damaged and do not use the product if this is the case, or if it has been dropped on the floor, dropped in water or damaged in another way.
- If the product or plug is damaged, the product must be inspected and, if necessary, repaired by an authorised repairer. Never try to repair the product yourself. Please, contact the store to see if there is a repair that falls under warranty. Tampering of the product will void the warranty.


RULES OF COMPLAINTS THE WARRANTY DOES NOT APPLY:

- If the above is not observed.
- If there has been unauthorised intervention of the product.
- If the product has been mishandled, subjected to rough treatment or some other form of damage.


PRODUCT DISPOSAL

Used product should not be disposed as household waste. According to legislation, the product should be disposed of

properly so that the materials can be recycled in an environmentally friendly manner. Further information is available from the responsible local authority or local disposal company. The product is equipped with the following logo:



KNOW YOUR BLENDER

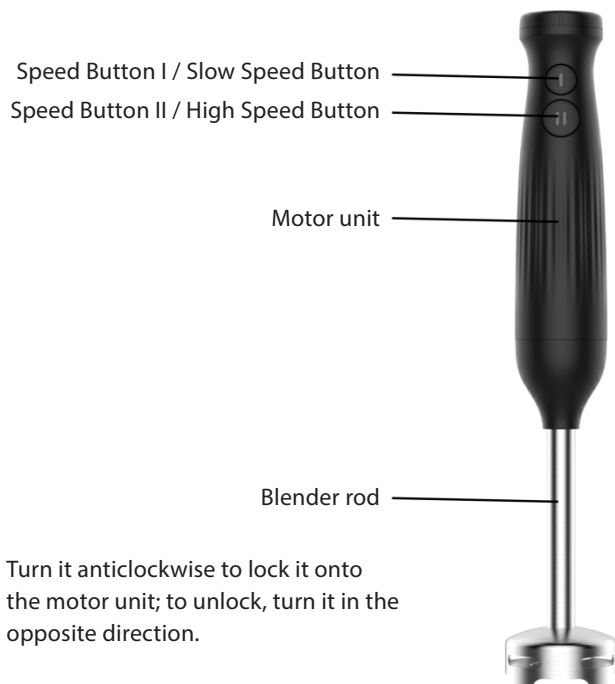

BEFORE FIRST USE

- Check that all accessories are complete and undamaged. Clean all detachable parts thoroughly according to the "CLEANING AND MAINTENANCE" section.
- Do not operate the unit without a load (empty) for more than 15 seconds.
- Ensure that the stick mixer is unplugged from the power outlet before assembling or removing attachments.

USING YOUR STICK MIXER

1. To assemble the blender rod with the motor unit, turn the blender rod anticlockwise until it is secure. To disassemble, simply turn the blender rod in the opposite direction.
2. Plug in the appliance. To avoid splashing, ensure the blade is fully submerged in the food before switching it on.
3. Hold the beaker steady, then press either speed button. Use the lower speed for gentler blending and to minimize splashing.
4. Do not allow liquid to rise above the connection point between the motor unit and the blender rod.
5. Move the blade through the food using a gentle up-and-down motion.

6. If the blades become blocked, unplug the appliance before attempting to clear the obstruction.
7. After use, unplug the appliance and disassemble the parts.

RECIPE 1:

- Fill the 180g honey and 140g maltose in a container, add 200ml water.
- Put blend rod into the container
- Press the high speed button to active the blend rod.
- Mix for about 3 seconds each time, repetition it to achieve the desired effect.

RECIPE 2:

- Fill the 50g banana and 200ml milk mixture into measure cup.
- Put blend rod.
- Press the high speed button to active the blend rod.
- Mix for about 30 seconds for best result.

CLEANING AND MAINTENANCE

1. Unplug the appliance and remove the detachable blender rod.
NOTE: Do not submerge the blender rod completely in water, as the lubrication on the bearings may wash away over time.
2. Rinse the detachable blender rod under running water without using abrasive cleaners or harsh detergents. After cleaning, place the blender rod upright so any excess water can drain out.
3. Wipe the motor unit with a damp cloth. Never immerse it in water, as this may cause an electric shock.
4. Dry all parts thoroughly.
5. CAUTION: The blades are very sharp. Handle them with extreme care.

QUICK CLEANING

To clean the stick mixer between tasks, fill a beaker or cup halfway with water and run the appliance for a few seconds.

TECHNICAL DATA

Article No. 11314644
220-240V~, 50-60Hz
600 Watt
KB TIME: 1 minute

PRODUCER

Epiq ApS
Krøyer Kielbergs Vej 3, 3. th
8660 Skanderborg, Denmark
www.epiq.dk

We cannot be held responsible for any printing errors.